


V-4

4-CHANNEL VIDEO MIXER

Owner's Manual

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (Owner's Manual p. 3-4; Owner's Manual p. 5-6). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

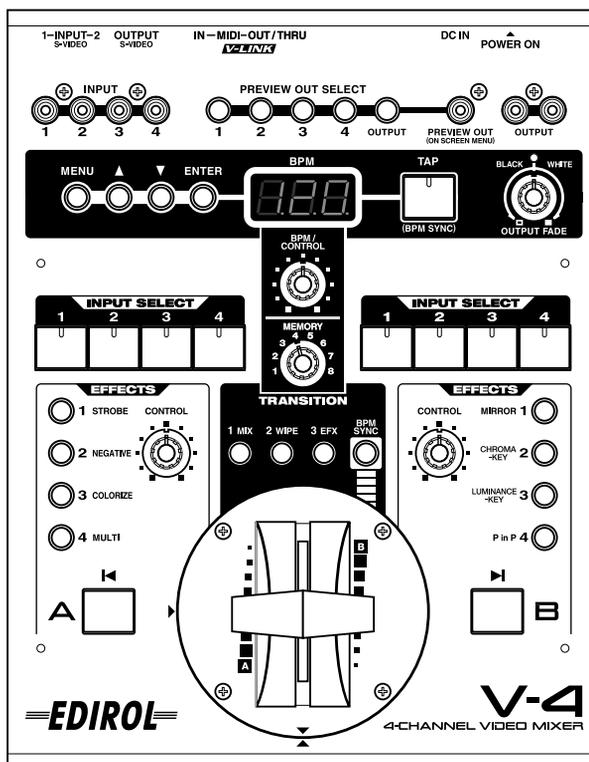

For the U.K.

IMPORTANT: THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.
The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.
Under no circumstances must either of the above wires be connected to the earth terminal of a three pin plug.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⓧ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual.

- Do not open or perform any internal modifications on the unit or its AC adaptor. (The only exception would be where this manual provides specific instructions.)

- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland/Edirol Service Center, or an authorized Roland/Edirol distributor, as listed on the "Information" page.

- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
 - Damp (e.g., baths, washrooms, on wet floors); or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.

- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.

- Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.

⚠ WARNING

- Use only the attached power-supply cord. Also, the supplied power cord must not be used with any other device.

- Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards!

- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.

- Immediately turn the power off, remove the AC adaptor from the outlet, and request servicing by your retailer, the nearest Roland/Edirol Service Center, or an authorized Roland/Edirol distributor, as listed on the "Information" page when:
 - The AC adaptor, the power-supply cord, or the plug has been damaged; or
 - If smoke or unusual odor occurs
 - Objects have fallen into, or liquid has been spilled onto the unit; or
 - The unit has been exposed to rain (or otherwise has become wet); or
 - The unit does not appear to operate normally or exhibits a marked change in performance.

- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit.

- Protect the unit from strong impact. (Do not drop it!)

⚠ WARNING

- Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through. 
- Before using the unit in a foreign country, consult with your retailer, the nearest Roland/Edirol Service Center, or an authorized Roland/Edirol distributor, as listed on the "Information" page. 
- Always turn the unit off and unplug the AC adaptor before attempting installation of the Video Fader. 

⚠ CAUTION

- The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation. 
- Always grasp only the plug on the AC adaptor cord when plugging into, or unplugging from, an outlet or this unit. 
- At regular intervals, you should unplug the AC adaptor and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the power outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire. 
- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 
- Never climb on top of, nor place heavy objects on the unit. 
- Never handle the AC adaptor or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit. 
- Before moving the unit, disconnect the AC adaptor and all cords coming from external devices. 
- Before cleaning the unit, turn off the power and unplug the AC adaptor from the outlet. 
- Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet. 
- For installation of the Video fader, remove only the specified screws. 
- Should you remove screws, keep them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 

IMPORTANT NOTES

In addition to the items listed under “USING THE UNIT SAFELY” on page 3–4, please read and observe the following:

Power Supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter (such as a refrigerator, washing machine, microwave oven, or air conditioner), or that contains a motor. Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to other devices.

Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce noise or unstable image on video output. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- Please be aware that the contents of memory can be irretrievably lost as a result of a malfunction, or the improper operation of the unit. To protect yourself against the risk of losing important data, we recommend to take memo of your important data (settings etc.) you have stored in the unit's memory dial.
- Unfortunately, it may be impossible to restore the contents of data that was stored in memory dial once it has been lost. Roland /Edirol assumes no liability concerning such loss of data.
- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing your neighbors, try to keep the audio volume at reasonable levels (especially when it is late at night) if you enjoy listening to music.
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

Copyright

- Unauthorized recording, distribution, sale, lending, public performance, broadcasting, or the like, in whole or in part, of a work (musical composition, video, broadcast, public performance, or the like) whose copyright is held by a third party is prohibited by law.
- Do not use this unit for purposes that could infringe on a copyright held by a third party. We assume no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this unit.

Installation of Video Fader

- Do not touch any of the printed circuit pathways or connection terminals.

(French)

- Ne pas toucher aux circuits imprimés ou aux connecteurs.

- When circuit board installation is complete, double-check your work.

(French)

- Quand l'installation de la carte de circuits imprimés est terminée, vérifiez si tout est bien installé.

- * In some cases, depending on the environment in which the unit is installed, the surface of the panel may sometimes feel rough and grainy. This is due to an infinitesimal electrical charge, which is absolutely harmless. However, if you are concerned about this, connect the ground terminal (see figure on p. 16) with an external ground. When the unit is grounded, a slight noise may appear, depending on the particulars of your installation. If you are unsure of the connection method, contact the nearest Roland/Edirol Service Center, or an authorized Roland/Edirol distributor, as listed on the "Information" page.

Unsuitable places for connection

- Water pipes (may result in shock or electrocution)
- Gas pipes (may result in fire or explosion)
- Telephone-line ground or lightning rod (may be dangerous in the event of lightning)

About turning the power on

- Once the connections have been completed (p. 17), turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to other devices.
- This unit is equipped with a protection circuit. A brief interval (a few seconds) after power up is required before the unit will operate normally.

About specifications

- * In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

Other important notes

- The explanations in this manual include illustrations that depict what should typically be shown by the display. Note, however, that your unit may incorporate a newer, enhanced version of the system (e.g., includes newer software), so what you actually see in the display may not always match what appears in the manual.
- Security Slot (R)
<http://www.kensington.com/>
- This product is compatible with regular NTSC or PAL video signal. In case irregular signal is input, it may obstruct stable operation of this product.
- It is possible on this product to create video sequence with extremely quick switching or ON/OFF of effects. Depending on your physical conditions, such video sequence may cause medical problem like headache etc. It is prohibited to create video sequence that may cause such problem. Roland or Edirol is not responsible to any medical problem of yourselves or audiences/spectators caused by such video sequence.

Contents

USING THE UNIT SAFELY	3
IMPORTANT NOTES	5
Welcome	9
Features of the V-4	10
Four-channels of video inputs.....	10
Two independent frame synchronizers	10
High-quality digital effects	10
Simple operation	10
Preview function	10
Switching and effects synchronized to music.....	10
Control from external MIDI devices	10
What is V-LINK?.....	11
Before you begin	12
Check the included items.....	12
Names of things and what they do.....	13
About Ground Terminal	16
Connecting peripheral devices	17
Typical connection example	17
Video signal flow	18
Turning the power on/off	19
Turning the power on.....	19
Turning the power off	19
Checking the inputs and outputs.....	20
Checking the final output	20
Checking the output to the preview monitor	20
About the display on preview monitor	21
About the Memory dial (MEMORY)	22
Switching two images	23
Switching by Cut.....	23
Switching with dissolve	24
Switching with Wipe	24
Using fade-to-white or fade-to-black	25
Compositing two images	26
Using Picture In Picture to composite images	26
Using Chroma Key to composite images	27
Using Luminance Key to composite images	28
Changing the color of the image.....	31
Applying the Negative effect	31
Applying the Colorize effect.....	32
Changing the motion of the image.....	34
Applying strobe motion	34
Applying the Multi or Mirror effects.....	35
Applying the Multi effect.....	35
Applying the Mirror effect.....	36

Switching in synchronization with music37
 Using BPM sync to switch images 37
 Using the tap (TAP) function to switch images 38

Applying an effect on the music39
 Using BPM sync to apply an effect 39
 Using the tap (TAP) function to apply an effect 39

Editing the front panel assignments.....40
 Changing the assignment of the mix button (MIX) 42
 Changing the assignment of the wipe button (WIPE) 43
 Changing the assignment of the EFX button (EFX) 44
 Changing the assignment of the output fade dial (OUTPUT FADE)..... 46
 Changing the assignments of the channel A and B effect buttons (EFFECTS) 48
 Changing the assignment of the BPM sync button (BPM SYNC)..... 50
 Changing the assignment of the channel A/channel B transformer buttons (TRANSFORMER) 51
 Protecting the memory 53
 Copying or exchanging memories 54
 Recalling the factory settings..... 55

Control the V-4 from an external device.....57
 Using V-LINK to control the V-4 57
 Using MIDI to control the V-4..... 58

Making various settings.....64

Calibrating the video fader66

Using the V-4 in Presentation mode68
 What is Presentation mode? 68
 Switching to Presentation mode 69
 Presentations using two screens with Picture In Picture 69

Switching between NTSC and PAL71

Changing the video fader orientation72

Troubleshooting74

Menu List.....75

Main specifications83

Examples of using the V-485
 Using the V-4 at an event 85
 Using the V-4 at a concert or VJ performance..... 86
 Using the V-4 at a presentation 87
 Using BGV output with a musical performance (example of using V-LINK) 88

MIDI implementation89

Transition Effects List.....97
 Factory-default Transition effects assignments 97
 Factory-default Transition effects assignments 97
 Mix Effects 98
 Wipe Effects 98
 Luminance Key 102
 Slide Effects 103
 The effects that cannot be used simultaneously 104

Index105

Welcome

Thank you, and congratulations on your choice of the Edirol V-4. The V-4 is a video mixer/effects processor that delivers image quality rivaling professional equipment, and provides four channels of video input.

With a rich array of inputs and easy operation, the V-4 allows performances and presentations that include images to be made more expressive than ever before.

The V-4 can also be controlled from external MIDI devices. Images projected on the stage can be controlled while you play an instrument, adding impressive impact to a stage performance.

We hope you will enjoy the V-4's versatile video functionality in a wide range of applications.

Features of the V-4

Four-channels of video inputs

The V-4 provides two S-video inputs and four video (composite) inputs. Of the four channels 1 through 4, S-video can be used for inputs 1 and 2. If both S-video and video (composite) are input to channels 1/2, the S-video input will take priority and will be automatically selected.

Two independent frame synchronizers

Even when using unstable video input signals such as VHS and Hi-8, the frame synchronizers within the V-4 will correct the synchronization signal. This means you can use a wide range of image sources without worrying about noise produced by degradation of the synchronization signals.

High-quality digital effects

Effects are processed digitally. Diverse and high-quality effects such as Picture In Picture, Mirror, and Multi can be independently applied to both channels A and B.

Simple operation

Switching and mixing video sources is extremely easy. The T-bar type video fader can be installed in either the horizontal or vertical orientation, whichever you prefer.

Preview function

Before switching sources, you can use a preview TV screen to view the images being input on each channel without affecting the output image.

Switching and effects synchronized to music


The V-4 lets you tap BPM (Beats Per Minute) to switch images or control effects. This is particularly useful when music and video need to be synchronized, such as in a video jockey performance.

Control from external MIDI devices

The V-4 provides MIDI connectors. An external MIDI device can control effects and switching images. Setup is particularly easy if a Roland or Edirol product that supports V-LINK is connected—simply press the V-LINK button on the control device.

What is V-LINK?


V-LINK (**V-LINK**) is a function that allows music and images to be performed together. By using MIDI to connect two or more V-LINK compatible devices, you can easily enjoy performing a wide range of visual effects that are linked to the expressive elements of a music performance.

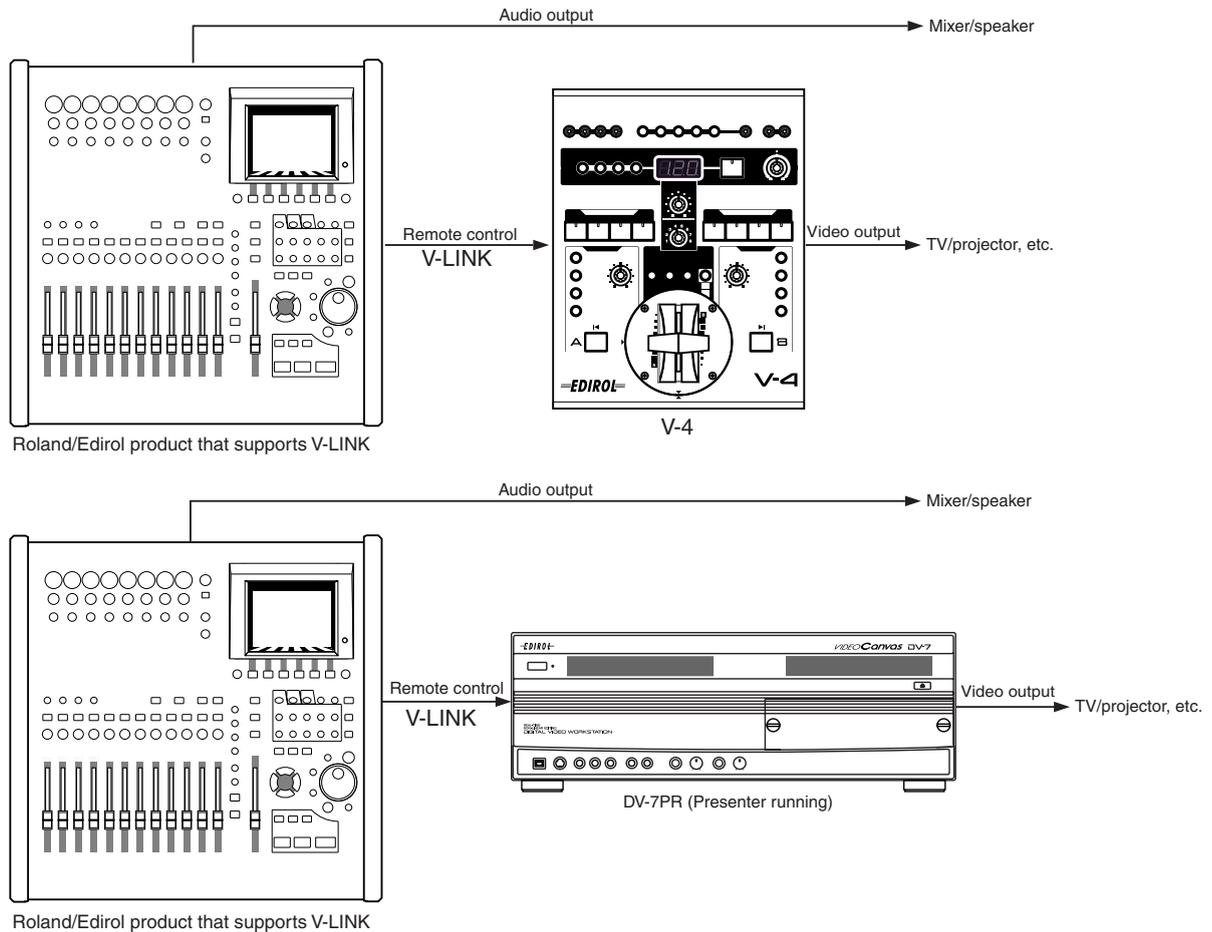

Before you begin

Check the included items

The V-4 is shipped with the following items. Please make sure that nothing is missing.

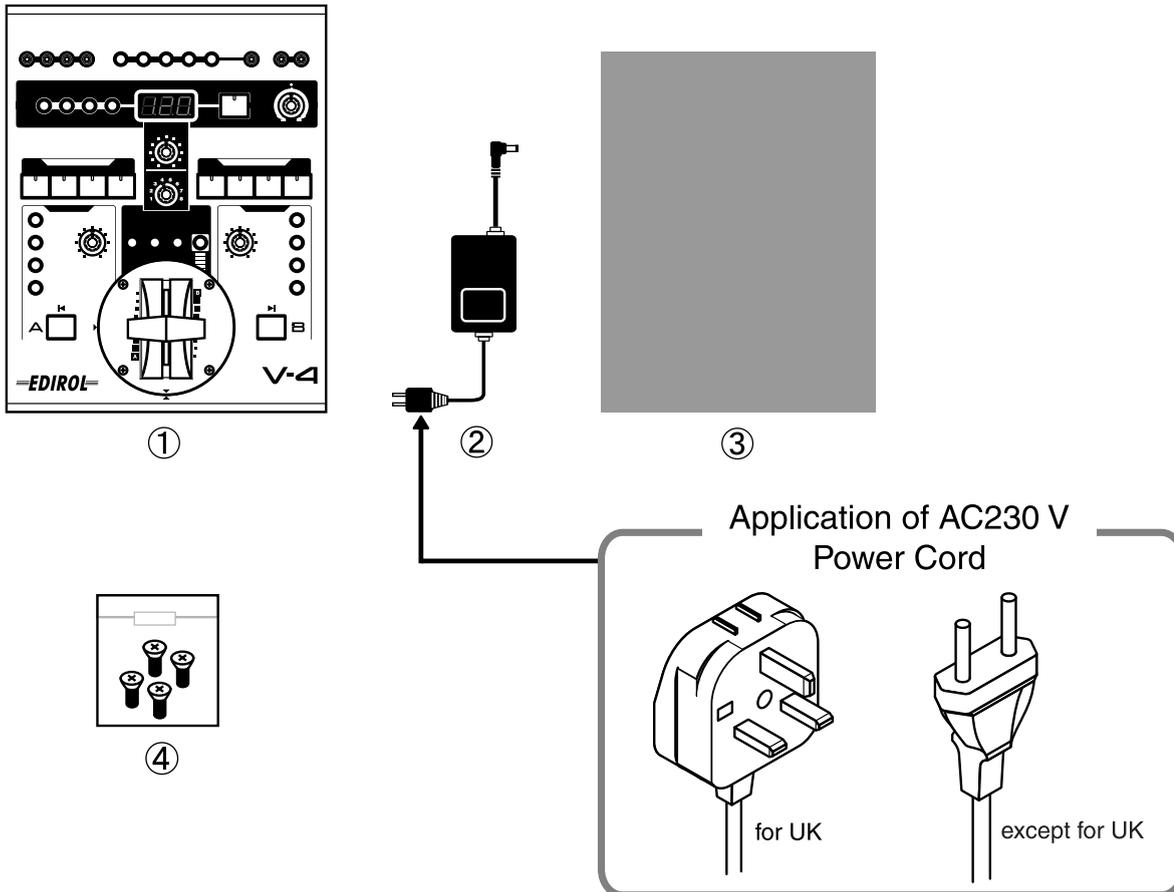

Power Cord

For 230 V, this box contains continental and British power cables. Please select the correct type for your country.

Netzkabel

Für 230 V, diese Packung beinhaltet europäische und britische Netzkabel. Bitte suchen Sie sich die richtige Variante für Ihr Land aus.

Cordon Secteur

Pour 230 V, cette boîte contient des alimentations anglaises ou continentales. Merci de choisir l'alimentation appropriée de votre pays.

Cavo Alimentazione


Per 230 V, la confezione contiene alimentatori con spina europea e Inglese. Scegliete quella adatta alla Vostra nazione.

Cable de Alimentación

Para 230 V, esta caja contiene cables de corriente continentales y británicos. Por favor seleccione el tipo correcto para su país.

1. The V-4 itself
2. AC adaptor and power cable
3. Owner's manual
4. Four screws to affix Video Fader (spare)

Names of things and what they do

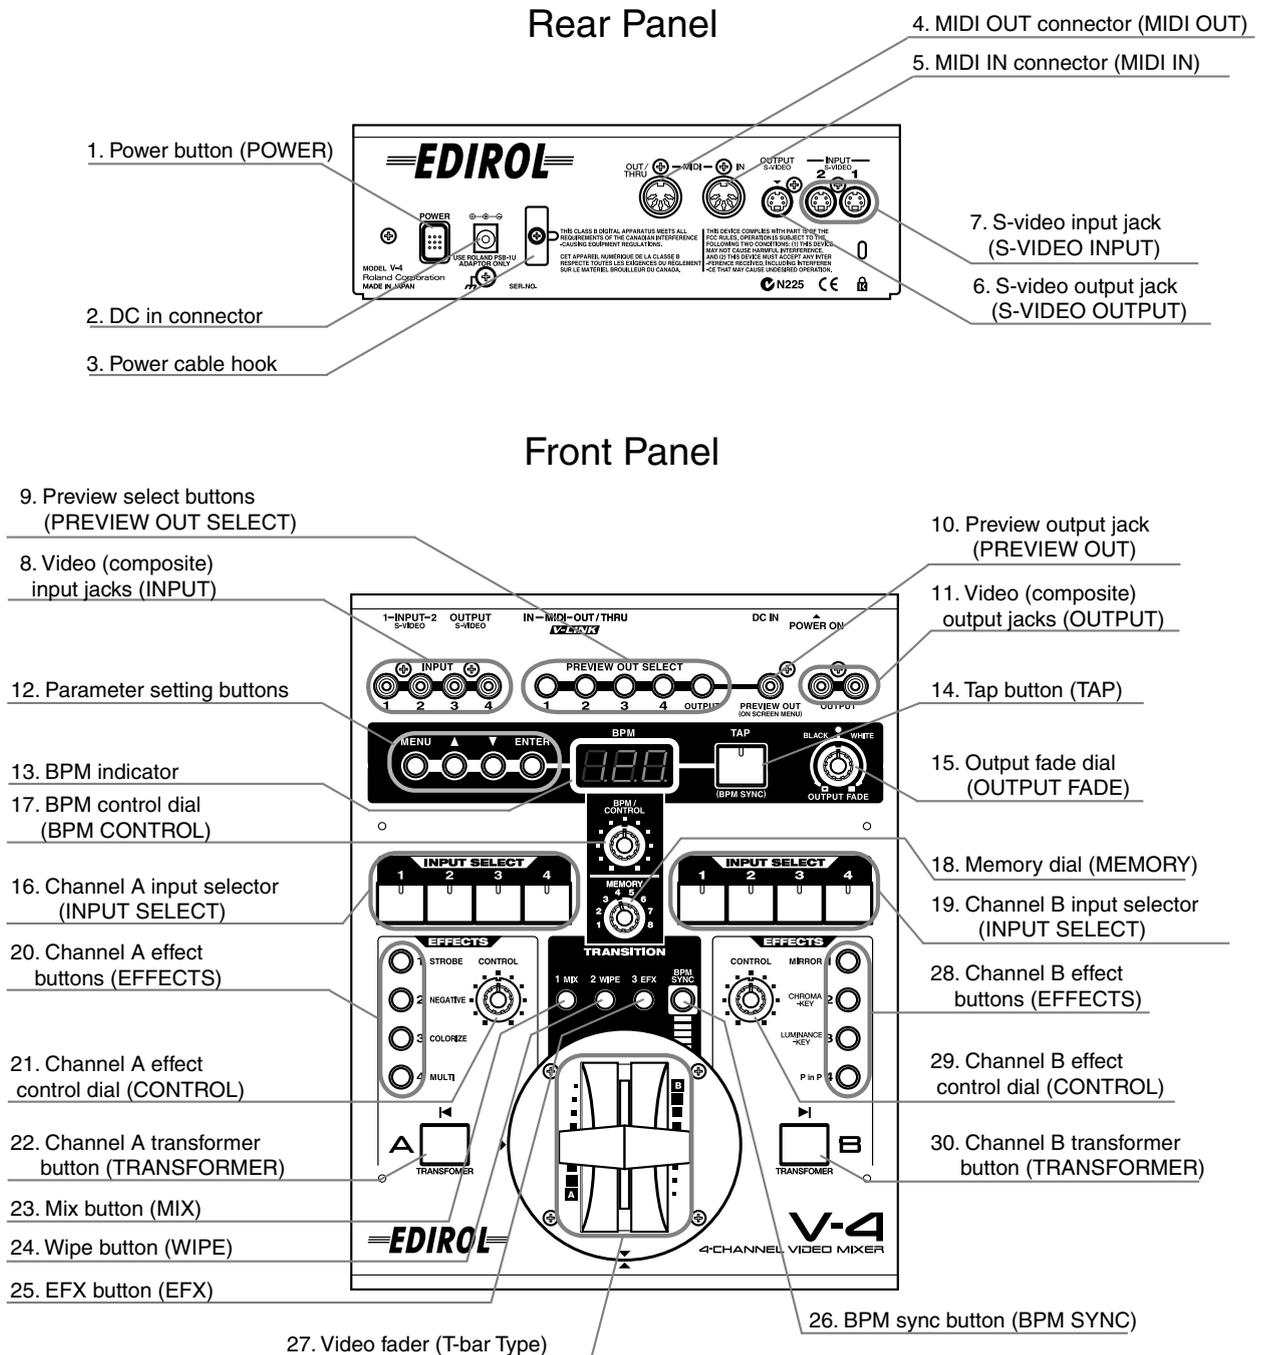

Rear Panel

1. Power button (POWER)
This button turns on the power of the V-4 (p. 19)
2. DC in connector
Connect the power cable (DC) from the AC adaptor to this connector.

Before you begin

3. Power cable hook

Use this hook to retain the power cable so that it will not be accidentally unplugged.

4. MIDI OUT connector (MIDI OUT)

MIDI messages input from an external device are output without change (“thru-ed”) from this connector. When using V-LINK to control both the V-4 and a DV-7PR, connect this output to the input of the DV-7PR.

5. MIDI IN connector (MIDI IN)

Use this connector to input control signals sent from an external device to the V-4.

6. S-video output jack (S-VIDEO OUTPUT)

This jack outputs a S-video signal.

7. S-video input jacks (S-VIDEO INPUT)

These jacks input S-video signals.

Front Panel

8. Video (composite) input jacks (INPUT)

These jacks input video (composite) signals. If both video (composite) and S-video signals are input simultaneously to the same channel (channel 1 or 2 only), the S-video signal will take priority, and the video (composite) signal will be ignored.

9. Preview select buttons (PREVIEW OUT SELECT) (see p. 20)

These buttons select the image that will be output to the preview monitor. You can select one of the input signals of channels 1 through 4, or the mixed output signal.

10. Preview output jack (PREVIEW OUT)

This jack outputs the preview monitor signal. Simultaneously, MIDI and effect parameters are also output to the preview monitor.

11. Video (composite) output jacks (OUTPUT)

These jacks output video (composite) signals. In conjunction with the S-video output jack, these jacks let you simultaneously output to three TV monitors or projectors.

12. Parameter setting buttons

These buttons are used to set various parameters for each button. The parameters are displayed on the TV monitor connected to the preview output jack.

13. BPM indicator (see p. 39)

This displays the current BPM (Beats Per Minute) setting. You can turn the dial below to change the displayed setting.

14. Tap button (TAP) (see p. 39)

This button is used to control BPM. The speed at which this button is tapped affects the BPM setting.

15. Output fade dial (OUTPUT FADE) (see p. 25)

This dial is used to apply fade-to-white or fade-to-black to the final output. Turn the dial toward

WHITE to fade the final output to white. Turn the dial toward BLACK to fade the final output to black.

16. Channel A input selector (INPUT SELECT) (see p. 23)

This button selects the image that will be input to channel A of the video mixer.

17. BPM control dial (BPM CONTROL)

This dial adjusts the BPM value. On the V-4, you can switch images or effects in synchronization with the BPM.

18. Memory dial (MEMORY) (see p. 22)

The V-4 can store eight different states of the panel (e.g., effect assignments). By turning this dial you can select one of these eight panel states. You can store various effect patterns such as wipes, and then turn this dial to select the desired pattern. However, number 1 is fixed (non-writeable) as a factory setting. You can make user settings for numbers 2 through 8.

19. Channel B input selector (INPUT SELECT) (see p. 23)

Selects the image that will be input to channel B of the video mixer.

20. Channel A effect buttons (EFFECTS)

These buttons apply effects to the image of video mixer channel A. With the factory settings, the buttons are assigned (from top to bottom) the Strobe, Negative, Colorize, and Multi effects. You may edit the settings to assign different effects if desired.

21. Channel A effect control dial (CONTROL)

This dial lets you smoothly control a parameter of an effect that is being applied to the image of channel A. The dial will adjust an effect parameter of the effect button that is blinking.

22. Channel A transformer button (TRANSFORMER) (see p. 23)

This button lets you switch between channel A and B without using the video fader. With the factory settings, the switch to the channel A image will be instant. You can also change the settings to make the change occur gradually if desired.

23. Mix button (MIX) (see p. 24)

This button switches the function of the video fader to Mix. When you operate the video fader, you will fade smoothly from the image selected for channel A to the image selected for channel B, dissolving the two images. Press this button if you want to switch between channels A and B with dissolve.

24. Wipe button (WIPE) (see p. 24)

This button switches the function of the video fader to Wipe. Press this button if you want to switch between channels A and B by wiping between them. If desired, you can change the settings to assign an effect other than Wipe to this button.

25. EFX button (EFX)

This button switches the function of the video fader to Special Wipe or Slide. Press this button if you want to switch between channels A and B with Special Wipe or Slide. If desired, you can change the settings to assign an effect other than Special Wipe or Slide to this button.

26. BPM sync button (BPM SYNC) (see p. 39)

Press this button if you want to switch images or turn effects on/off in synchronization with the BPM.

Before you begin

27. Video fader (T-bar type)

This is a T-bar type video fader. You can use it to switch between channels A and B, or to adjust the keying level, etc. According to your preference, you can change the orientation 90 degrees from up and down to left to right. For details on how to change the orientation, refer to p. 72.

28. Channel B effect buttons (EFFECTS)

These buttons apply effects to the image of video mixer channel B. With the factory settings, the buttons are assigned (from top to bottom) the Mirror, Chroma Key, Luminance Key, and P in P (Picture In Picture) effects. You may edit the settings to assign different effects to these buttons if desired.

29. Channel B effect control dial (CONTROL)


This dial lets you smoothly control a parameter of an effect that is being applied to the image of channel B. The dial will adjust an effect parameter of the effect button that is blinking.

30. Channel B transformer button (TRANSFORMER) (see p. 23)

This button lets you switch between channels A and B without using the video fader.

About Ground Terminal

In some cases, depending on the environment in which the unit is installed, the surface of the panel may sometimes feel rough and grainy. This is due to an infinitesimal electrical charge, which is absolutely harmless. However, if you are concerned about this, connect ground terminal (see figure) with an external ground. When the unit is grounded, a slight noise may result, depending on the particulars of your installation. If you are unsure of the connection method, contact nearest Roland/Edirol Service Center, or authorized Roland/Edirol distributor, as listed on the "Information" page.

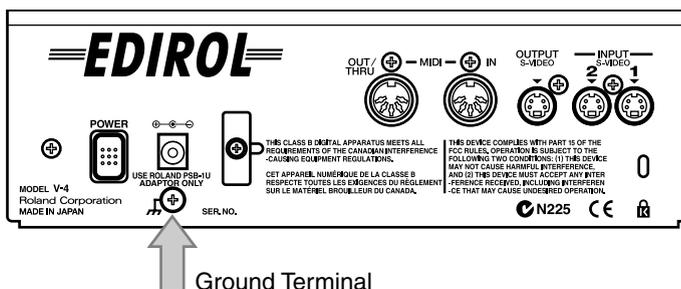


Unsuitable places for connection

- Water pipes (may result in shock or electrocution)
- Gas pipes (may result in fire or explosion)
- Telephone-line ground or lightning rod (may be dangerous in the event of lightning)

Connecting peripheral devices

This section explains how to connect your peripheral devices to the V-4. You can connect up to four video playback devices (sources). Here's how to connect sources such as a video camcorder, VCR, DVD player, or DV-7PR, and play them back to create an impressive video performance. To prevent malfunction and/or damage to other devices, always turn down the volume, and turn off the power on all devices before making any connections.


Typical connection example

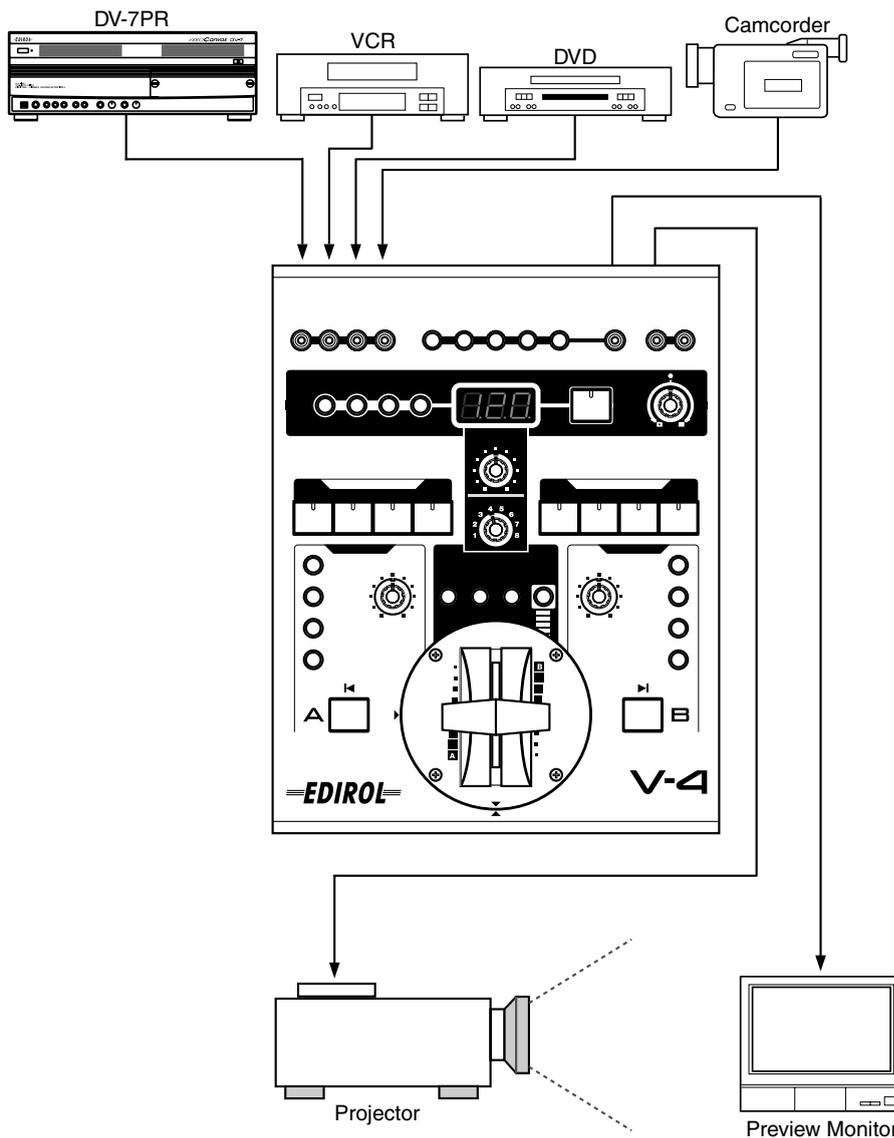

- * The V4 does not have audio inputs so will not mix audio. Audio outputs can be connected directly to speakers or via an audio mixer if mixing of audio from multiple devices is necessary.
- * No video cables come with this product. Please use appropriate video cables for connection with source devices or TV monitor/Projector.
- * It is recommended to use composite cable rather than S-video cable where you need to connect devices long distances (unless using S-video amplifiers). If devices are installed closer to the V-4, it is recommended to use S-video cables so that you can obtain better image quality.
- * If both video (composite) and S-video signals are input simultaneously to the same channel (channel 1 or 2 only), the S-video signal will take priority.

Video signal flow

The video signals received from the four input jacks are assigned to channels A or B of the video mixer. (These assignments are made manually.) The signal of A and B channels are processed by the video mixer section, and sent via the output fader to the output jack.

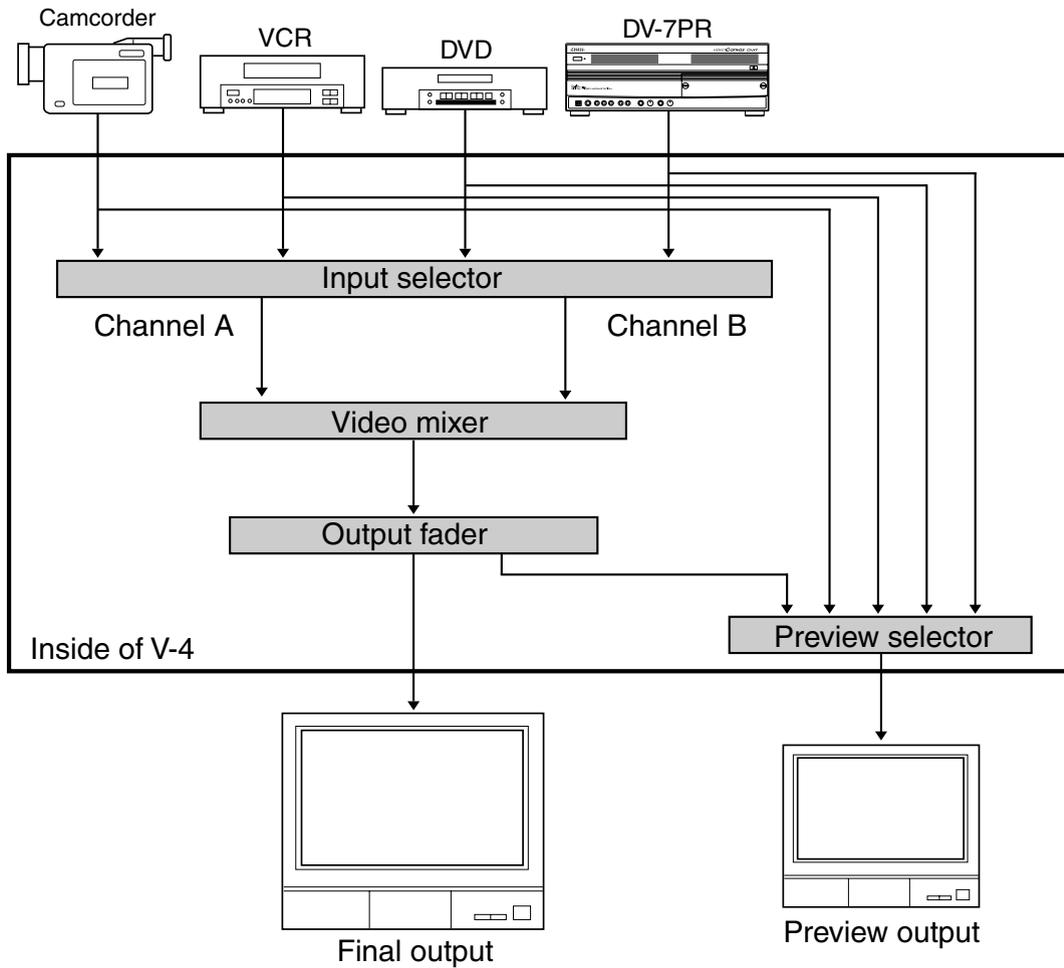

- * Various setting menus like effect parameters are displayed on preview monitor.
- * If both video (composite) and S-video signals are input simultaneously to the same channel (channel 1 or 2 only), the S-video signal will take priority.
- * When switching on Preview Selector is done, image on preview monitor may flicker briefly. This does not affect image from output jacks.

Turning the power on/off


Turning the power on

1. Check the power cable


Make sure that the cable from the AC adaptor is firmly plugged into the V-4.

2. Press the POWER button.

Press the POWER button located on the rear panel of the V-4. It will take approximately five seconds for the V-4 to initialize itself and begin operating.

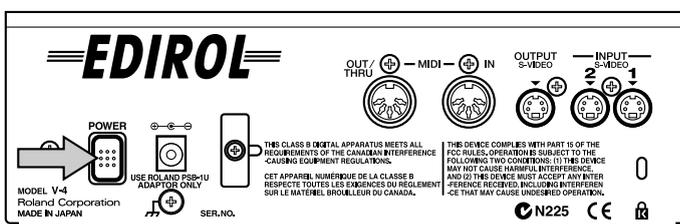

- * To prevent the inadvertent disruption of power to your unit (should the plug be pulled out accidentally), and to avoid applying undue stress to the AC adaptor jack, anchor the power cord using the cord hook, as shown in the illustration.

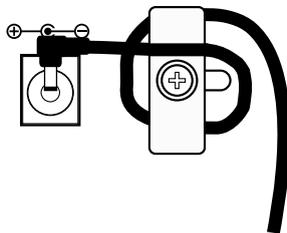

Turning the power off

1. Press the POWER button.

Press the POWER button located on the rear panel of the V-4. All of the front panel LEDs will go dark.

Checking the inputs and outputs

Checking the final output

Here's how to check that the signal from each source device is correctly being input to the V-4, and is correctly being output to the TV or projector as final output.

1. Play back the source device.


Operate the source device (e.g., camcorder, VCR, DVD player, DV-7PR) connected to the V-4 so that it will output video.

2. Check the output monitor.

Power-on the TV monitor or projector that is connected to the output jack of the V-4, and verify that the image being output from the V-4 is displayed correctly.

3. Switching the input channel

Now, try switching the V-4's input channel. Move the T-bar all the way toward the channel A or channel B position. If you moved the T-bar toward channel A, press the left input selector (INPUT SELECT). If you moved the T-bar toward channel B, press the right input selector. Successively press buttons 1 through 4 to switch inputs. Confirm that the image shown on your TV monitor or projector changes accordingly.

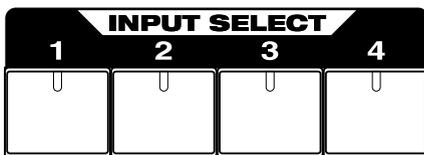

In the case you do not see output on TV/Projector

- Check that outputs from source devices are correctly connected to inputs of V-4.
- Check that output from V-4 is correctly connected to input of TV or Projector.
- Check that input selection of TV or Projector is set correctly.

When the channel selected has no signal input, a blue image is output to the TV/Projector. You can turn On/Off the blue image output by changing the parameter on p. 75 or later.

Checking the output to the preview monitor

Next, you should check whether the image is being correctly output to the preview TV monitor.

1. Play back your source device


Operate the source device (e.g., camcorder, VCR, DVD player, DV-7PR) connected to the V-4 so it outputs video.

2. Check the preview output

Turn on the power of the TV monitor that is connected to the preview output jack of the V-4, and verify that the image output from the V-4 is displayed correctly.


3. Switch the output channel

Try switching the channel that is being output to the V-4's preview monitor. Press the preview select buttons (1 through 4 and OUTPUT) one after another, and verify that the image being output to your TV monitor changes accordingly.



About the display on preview monitor

Information about settings of V-4 is displayed to the Preview Monitor as below.

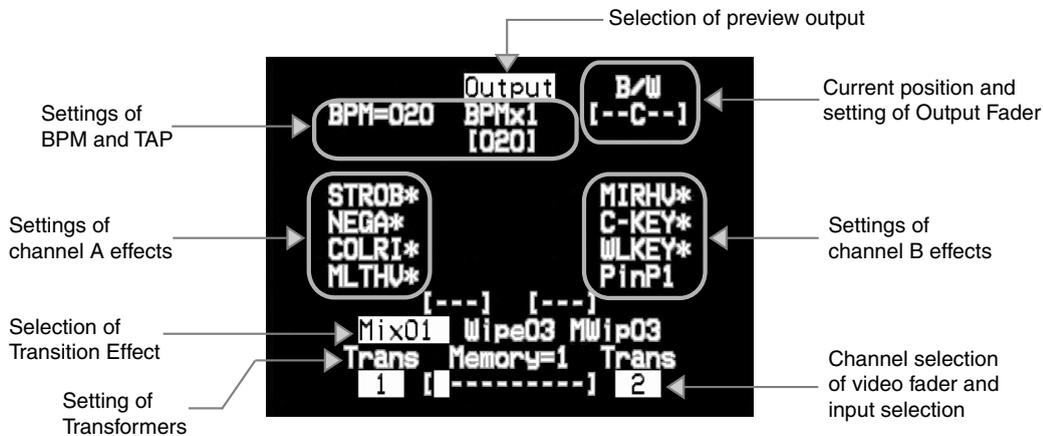

- If name of the effect is highlighted, this is the effect selected
- If * mark is displayed after effect name, the effect parameter can be changed with the control dial.
- If ball mark is displayed aside highlighted effect names, it means the effect parameter can be changed with the control dial.

You can add or reduce the information displayed on the preview monitor by changing the settings of the V-4 as described on p. 75 or later.




- [****Preset****] is displayed when position 1 of Memory Dial is selected. The 1st setting is fixed to the factory preset and cannot be changed.
- [***Protect On***] is displayed when Memory Protection is enabled. If this message appears, settings cannot be changed.

About the Memory dial (MEMORY)

The V-4 has a memory dial that lets you store up to eight states of the panel settings. Setting 1 is fixed at the factory settings, but you can store user settings in 2 through 8. When the memory dial is at 1, the effect names printed on the panel will match the actual functions. (The names of various effects (e.g., Mix, Wipe, Multi, P in P) are printed on the panel of the V-4.) Set the memory dial to 1 so that you can start by becoming familiar with the factory settings. For details on how to change these settings, refer to p. 40.


Conceptual diagram of the Memory dial

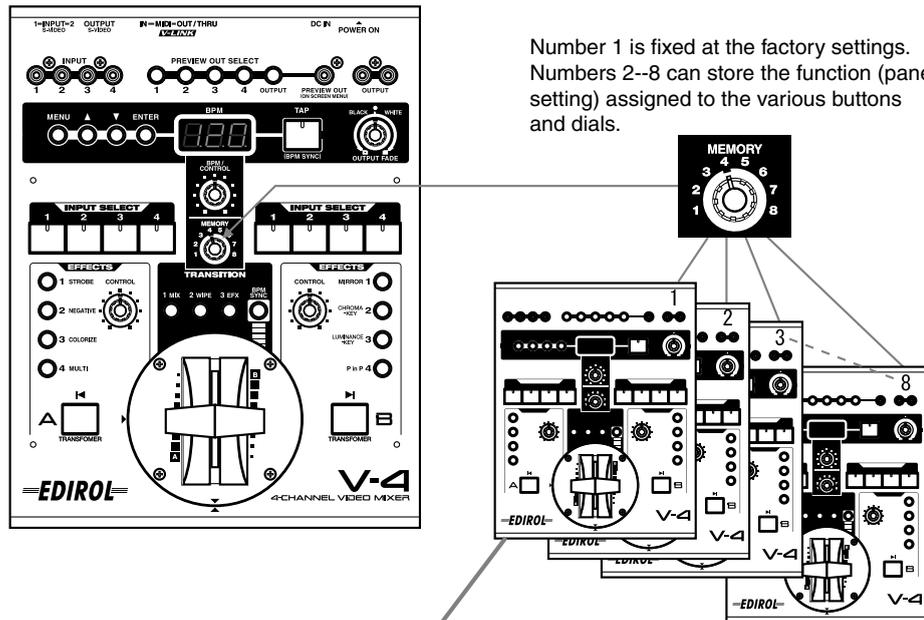


Number 1 is fixed at the factory settings. Numbers 2--8 can store the function (panel setting) assigned to the various buttons and dials.



These buttons let you change the pattern of the transition effects. For details on how to change these, refer to p. 40. It is also possible to store setting of BPM Sync mode.




You can change the setting of the Output Fade dial. For details on how to change it, refer to p. 40.

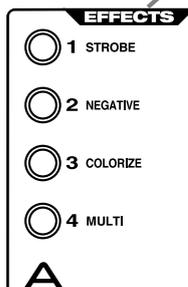

You can change the type of effect assigned to each button. For details on how to change these, refer to p. 40.

You can change the settings of the Transformers. For details on how to change them, refer to p. 40.

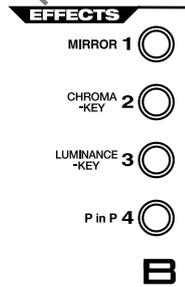

You can change the type of effect assigned to each button. For details on how to change these, refer to p. 40.


Switching two images

Here's how to switch the images being input to channel A and channel B.

Switching by Cut


1. Set the memory dial (MEMORY) to 1.

To return the V4 state to the factory settings, turn the dial all the way to the left to select the #1 position.

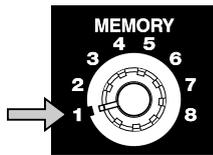


2. Select the input images for A and B.

From inputs 1 through 4, select the images that will be input to channel A and channel B. If the same image is being input to both channels A and B, you will not notice any change when you switch between channels. For example, if you have selected input image 1 for channel A, you should choose from images 2 through 4 for channel B.

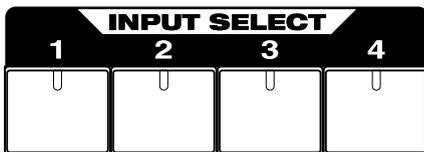


3. Output either channel A or channel B.

Move the video fader all the way to the channel A or channel B position. Watch the final output on your TV monitor or projector.

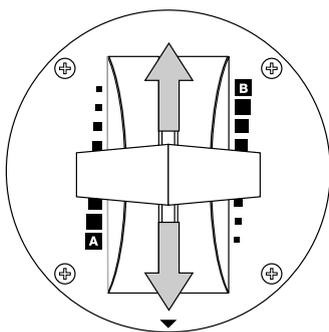

4. Press a transformer button (TRANSFORMER).

If you have moved the video fader to the channel A position, press the channel B transformer button. If you have moved the video fader to the channel B position, press the channel A transformer button. Notice that the output displayed on your TV monitor or projector has changed.

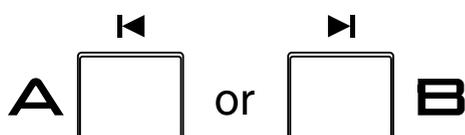

Switching two images

5. Release the transformer button (TRANSFORMER)


Release your finger from the transformer button you pressed. Notice that the image displayed on your TV monitor (or projector) has returned to the previous image.

Switching with dissolve

“Dissolve” is the effect of switching images using a gradual fade. You can create this effect by mixing two images. If you stop mid-way during this change (i.e., with the video fader in the center position), you will see a double-exposure of images A and B.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to select the 1 position.

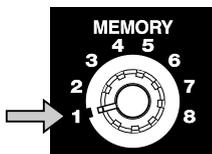

2. Select the input images for A and B.

From inputs 1 through 4, select the images that will be input to channel A and channel B. If the same image is being input to both A and B channels, you will not notice any change when you switch between channels. For example, if you have selected input image 1 for channel A, you should choose from images 2 through 4 for channel B.

3. Press the mix button (MIX).

Press the mix button (MIX) located above the video fader. The button will light.



4. Move the video fader.


Move the video fader. On your TV monitor (or projector), notice how images A and B are mixed while the change occurs.

Switching with Wipe

“Wipe” is the effect of switching between images by “wiping away” the previous image. If you stop midway during this change (i.e., with the video fader in the center position), the two images will both be partially displayed.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to select the 1 position.

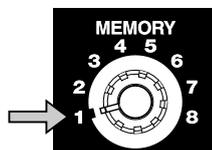

2. Select the input images for A and B.

From inputs 1 through 4, select the images that will be input to channel A and channel B. If the same image is being input to both channels A and B, you will not notice any change when you switch between channels. For example, if you have selected input image 1 for channel A, you should choose from images 2 through 4 for channel B.

3. Press the wipe button (WIPE).

Press the wipe button (WIPE) located above the video fader. The button will light.



4. Move the video fader.


Move the video fader. On your TV monitor (or projector), notice how the previous image is wiped away as you change between images A and B.

Using fade-to-white or fade-to-black

On the V-4 you can fade an image to white or black simply by turning a dial. If you fade-to-white, the monitor output image will gradually turn white. If you fade-to-black, the monitor output image will gradually turn black.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to the 1 position.

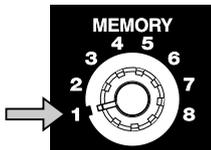


2. Output an image.

Output an image from a source device. If desired, you may stop the video fader in the middle of dissolve or wipe.

3. Turn the output fade dial (OUTPUT FADE).

Turn the output fade dial located in the upper right of the V-4's panel. Turning the dial toward "WHITE" will fade the image to white, and turning it toward "BLACK" will fade the image to black. If you want to create a gradual fade, turn the dial slowly.

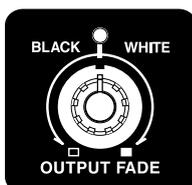

The output fade dial is equipped with LED that shows status. When it is at center the LED is green. When it is non-centered the LED blinks red.

Compositing two images


On the V-4 you can use Picture In Picture or Chroma Key/Luminance Key to composite the images of channels A and B.

Using Picture In Picture to composite images

Here's how you can miniaturize the image of channel B and overlay it on the channel A image. Use this when you want to output two images simultaneously.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to select the 1 position.

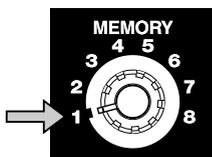

2. Play back the two images.

Play back the image that you want to use as the background and the image that you want to miniaturize.

3. Select the channel A input.


Input the background image into channel A. Use the channel A input select buttons to make your choice.

4. Select the channel B input.

Input the image that you want to miniaturize into channel B. Use the channel B input select buttons to make your choice.

5. Press the P in P button.

Press the channel B "P in P" button.

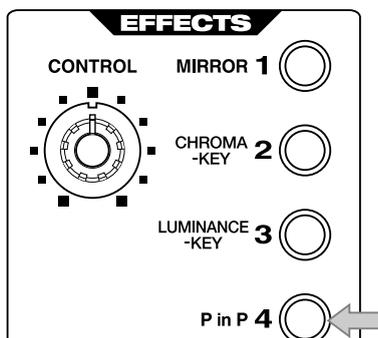

6. Move the video fader.

Moving the video fader will control the level of the channel B image (the secondary image). If you move the video fader all the way to the channel A position, the channel B image level will be 0%. If you move the video fader all the way to the channel B position, the channel B image level will be 100%. By moving the video fader from the A to the B position, you can fade-in the secondary image. Moving the video fader toward A will fade-out the secondary image.

7. Turn the effect off

Press the button again to turn the effect off.

Some effects cannot be used simultaneously.


You can change the P in P effect settings to modify the location and size of the superimposed image (the secondary image). For details, refer to p. 75 or later.

Using Chroma Key to composite images

You can composite two images by extracting a specified color from one image and replacing it with the other image. Such a composition effect is called Chroma Key. Here's how you can composite the image from channel B and overlay it on the channel A image.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to select the 1 position.

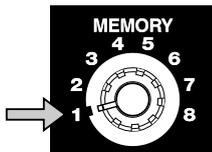

2. Select channel A image.


Play back the image that you want to use as the background.

3. Select channel B image.

Input image to overlay into channel B. The image for Chroma Key is generally shot with blue or green background.

4. Press the Chroma Key button.

Press the channel B "Chroma Key" button.

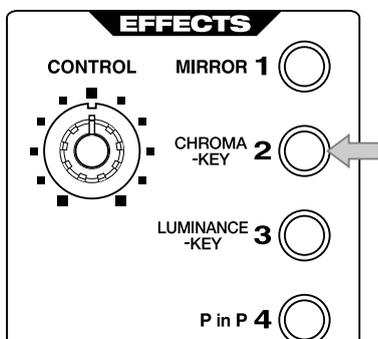


5. Move the video fader to channel B.

The blue part of channel B image is extracted and the channel A image appears.

Compositing two images

6. Turn the control dial.

Parameter of Chroma Key (level of extraction) gradually changes. If Chroma Key button is not blinking, you cannot change the parameter with the control dial.

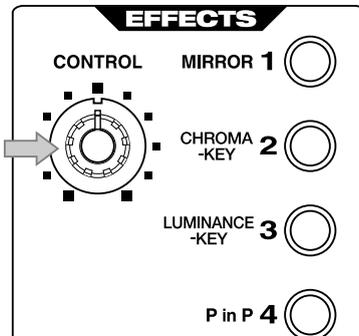

7. Move the video fader

Moving the video fader will control the appearance and disappearance of the background image.

8. Turn the effect off

Press the button again to turn the effect off.

Some effects cannot be used simultaneously.

You cannot composite images if your image has no consistent color that can be extracted with Chroma Key. It is also difficult to extract correctly if the blue/green contrast of color is not sufficient and consistent.


The default Chroma Key status of V-4 is set to extract the blue part of the image. It is possible to change this setting to extract a different color. It is also possible to adjust setting of the extraction level and blur level of edges. For details, refer to p. 75 or later.

Using Luminance Key to composite images

You can composite two images by extracting the light or dark part from one the image and replacing it with the other image. Such a composition effect is called Luminance Key. Here's how you can composite image from channel B and overlay it on the channel A image.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to select the 1 position.

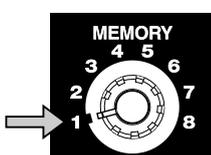

2. Select channel A image.


Play back the image that you want to use as the background.

3. Select channel B image.

Input image to overlay into channel B. The image for Luminance Key should have clear contrast of light and dark.

4. Press the Luminance Key button.

Press the channel B "Luminance Key" button.

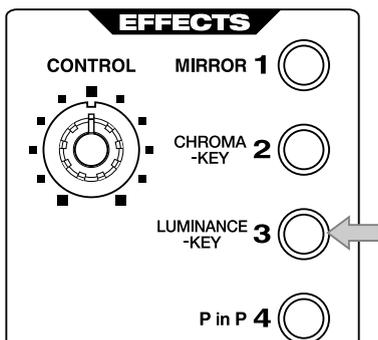


5. Move the video fader to channel B.

The light or dark part of the channel B image is extracted and the image from channel A appears.

6. Turn the control dial.

Parameter of Luminance Key (level of extraction) gradually changes. If Luminance Key button is not blinking, you cannot change the parameter with control dial.

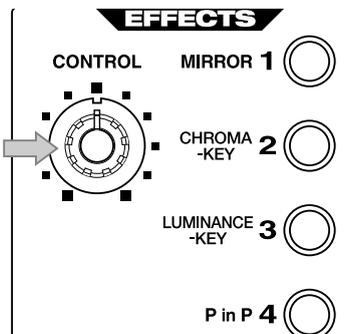

7. Move the video fader

Moving the video fader will control appearance and disappearance of image after extraction.

8. Turn the effect off

Press the button again to turn the effect off.

Some effects cannot be used simultaneously.

Compositing two images

You cannot composite images via Luminance Key if there is no light or dark aspects in the image to key off of. It may be difficult to extract correctly if contrast of light/dark is not sufficient or consistent.

The default status of the Luminance Key of V-4 is set to extract the light part of the image. It is possible to change setting to extract dark part. It is also possible to adjust the extraction level of blur level of edges. For details, refer to p. 75 or later.


Changing the color of the image

Applying the Negative effect

Here's how to apply the Negative effect to the image being input to channel A. The "Negative" effect inverts the brightness and color of the image from positive to negative.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to select the 1 position.

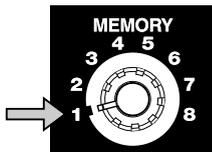

2. Play back the image to which you want to apply the effect.


Play back the desired image, and input it to the V-4.

3. Select the input for channel A.

Input the image being played back into channel A. Use the channel A input select buttons to make your choice.


4. Move the video fader to channel A.

To output the image of channel A, move the video fader to channel A.

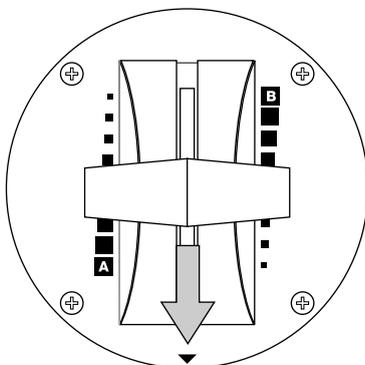

5. Press the NEGATIVE button.


Press the channel A "NEGATIVE" button. This is the second effect button from the top on the channel A side.

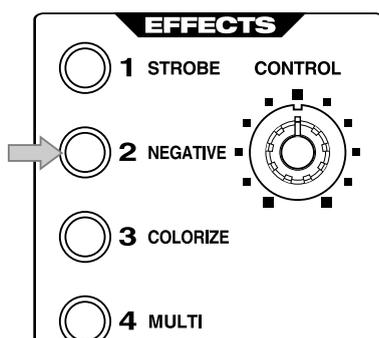

Changing the color of the image

6. Turn the control dial.

Turn the control dial. The brightness and color of the image will be inverted to a negative.

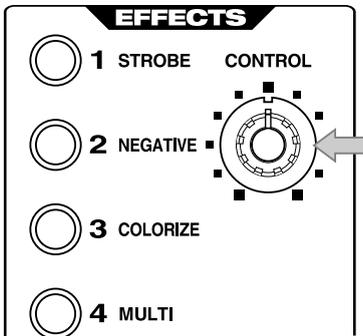

7. Turn the effect off

Press the button again to turn the effect off.

Applying the Colorize effect

Here's how to apply the Colorize effect to the image being input to channel A. The "Colorize" effect colors the image to produce a paint-like impression.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to select the 1 position.

2. Play back the image to which you want to apply the effect.

Play back the image that you want to colorize, and input it to the V-4.

3. Select the input for channel A.

Input the image being played back into channel A. Use the channel A input select buttons to make your choice.

4. Move the video fader to channel A.

To output the image of channel A, move the video fader to channel A.

5. Press the COLORIZE button.

Press the channel A "COLORIZE" button. This is the third effect button from the top on the channel A side.

6. Turn the control dial.

Turn the control dial. The colorize parameters will be adjusted to change the way in which the image is colored.

7. Turn the effect off

Press the button again to turn the effect off.

Changing the color of the image

Some effects cannot be used simultaneously.

In addition to the Negative and Colorize effects, the color of the image can also be modified using the Posterize effect. To use the Posterize effect, you will need to assign it to an effect button of channel A or channel B. For details on making this assignment, refer to p. 75 or later.

Changing the motion of the image

Applying strobe motion

Here's how to apply a Strobe Motion effect to the image being input to channel A. "Strobe Motion" is an effect that thins-out the frames of the image, producing the impression that the motion is being halted at intervals.

1. Set the memory dial (MEMORY) to 1.

Turn the dial all the way to the left to select the 1 position.

2. Play back the image to which you want to apply the effect.

Play back the image that you want to strobe, and input it to the V-4.

3. Select the input for channel A.

Input the image being played back into channel A. Use the channel A input select buttons to make your choice.

4. Move the video fader to channel A.

To output the image of channel A, move the video fader to channel A.

5. Press the STROBE button.

Press the channel A "STROBE" button. This is the top effect button on the channel A side.

6. Turn the control dial.

Turn the control dial. The strobe settings will be adjusted and the spacing of the frames will change from fast to slow strobing.

7. Turn the effect off

Press the button again to turn the effect off.

Some effects cannot be used simultaneously.

In addition to the Strobe effect, the motion of an image can also be modified using the Still (freeze) effect. To use the Still effect, you will need to assign it to an effect button of channel A or channel B. For details on making this assignment, refer to p. 75 or later.

Applying the Multi or Mirror effects

Applying the Multi effect

Here's how the image that is input to channel A can be divided on the screen. You can divide the image vertically, horizontally, or both vertically and horizontally.

1. Set the memory dial (MEMORY) to 1.

To restore the factory-set state, turn the dial all the way to the left to select the #1 position.

2. Play back the image to which you want to apply the effect.

Play back the image that you want to divide on the screen and input it to the V-4.

3. Select the input for channel A.

Input the image being played back into channel A. Use the channel A input select buttons to make your choice.

4. Move the video fader to channel A.

To output the image of channel A, move the video fader to channel A.

5. Press the MULTI button.

Press the channel A "MULTI" button. This is the bottom effect button on the channel A side. With the factory settings, the image will be divided in the XX direction.

6. Turn the control dial.

Turn the control dial. The multi effect parameters will be adjusted, changing the number of parts into which the screen is divided.

7. Turn the effect off

Press the button again to turn the effect off.

Some effects cannot be used simultaneously.

If you want to change the direction in which the image is divided, you will need to edit the parameter settings. For details on making this change, refer to p. 75 or later.

Applying the Mirror effect

Here's how the image that is input to channel B can be divided and inverted. The result is as though a mirror were placed in the center of the screen. The image can be inverted vertically, horizontally, or both vertically and horizontally.

1. Set the memory dial (MEMORY) to 1.

To restore the factory-set state, turn the dial all the way to the left to select the 1 position.

2. Play back the image to which you want to apply the effect.

Play back the image to which you want to apply the mirror effect, and input it to the V-4.

3. Select the input for channel B.

Input the image being played back into channel B. Use the channel B input select buttons to make your choice.

4. Move the video fader to channel B.

To output the image of channel B, move the video fader to channel B.

5. Press the MIRROR button.

Press the channel B "MIRROR" button. This is the top effect button on the channel B side. With the factory settings, the image will be inverted in the XX direction.

6. Turn the control dial.

Turn the control dial. The mirror effect parameters will be adjusted, changing the number of parts into which the screen is divided. The result is as though a greater number of mirrors were placed against the screen.

7. Turn the effect off

Press the button again to turn the effect off.

Some effects cannot be used simultaneously.

If you want to change the direction in which the image is inverted, you will need to edit the parameter settings. For details on making this change, refer to p. 75 or later.

Switching in synchronization with music

The V-4 can switch images in synchronization with the beat of the music. You can use the BPM or TAP functions to switch images as you see in VJ performances.

Using BPM sync to switch images


You can use BPM (Beats Per Minute) to specify the timing at which images will be switched. The V-4 will switch automatically, without you having to operate the video fader or the transformer buttons.

1. Input images to channels A and B.

Use the channel A and B input selectors to input images into each channel. Input different images into channels A and B.

2. Set the BPM.

Turn the BPM control dial (BPM CONTROL) to set the BPM. Smaller values will cause the images to be switched more slowly, and greater values will cause faster switching.

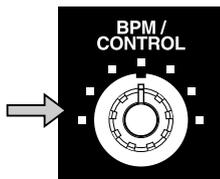

3. Press the BPM sync button (BPM SYNC).

Press the BPM sync button. Notice that the images switch in time with the BPM you specified. You may also turn the BPM dial at this time to change the timing.



Using the tap (TAP) function to switch images

As an alternative to specifying the BPM numerically, you can use the tap button (TAP) to specify the timing at which the images will switch.

1. Input images to channels A and B.


Use the channel A and B input selectors to input images into each channel. Input different images into channels A and B.

2. Press the BPM sync button (BPM SYNC).

Press the BPM sync button. The images will begin switching at the BPM timing shown in the BPM indicator.

3. Press the tap button (TAP) in time with the music.

Play back the desired background music, and press the tap button in time with the beat. The BPM readout will be constantly updated to reflect the timing you use while tapping the button, and the images will switch according to this BPM.

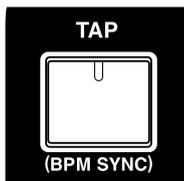

Applying an effect on the music

The V-4 cannot only switch images but can also apply effects in time with music. You can use the BPM or TAP functions to apply effects that are synchronized with the music, as in a VJ performance.

Using BPM sync to apply an effect

You can use BPM (Beats Per Minute) to specify the timing at which an effect will be turned on/off. The V-4 will apply the effect automatically, without the need for you to operate the buttons manually.

1. Input the same image into channels A and B.

Use the channel A and B input selectors to input the same image into both channels. If you choose input select button 1 for channel A, choose button 1 for channel B as well.

2. Select the type of effect.

Decide whether you will use a channel A effect or a channel B effect.

3. Set the BPM.

Turn the BPM control dial (BPM CONTROL) to set the BPM. Smaller values will cause the effect to be switched on/off more slowly, and greater values will cause it to switch more rapidly.

4. Press the BPM sync button (BPM SYNC).

Press the BPM sync button. Notice that the effect is applied to the image in synchronization with the BPM you specified. You may also turn the BPM dial at this time to adjust the timing.

Using the tap (TAP) function to apply an effect

As an alternative to specifying the BPM numerically, you can use the tap button (TAP) to manually specify the timing at which the effect will be switched on/off. In this case you will use the tap button (TAP) to specify the timing.

1. Input the same image to channels A and B.

Use the channel A and B input selectors to input the same image into each channel. If you choose input select button 1 for channel A, choose button 1 for channel B as well.

2. Select the type of effect.

Decide whether you will use a channel A effect or a channel B effect.

3. Press the BPM sync button (BPM SYNC).

Press the BPM sync button. The effect will begin switching on/off at the BPM timing shown in the BPM indicator.

4. Press the tap button (TAP) in time with the music.

Play back the desired background music, and press the tap button in time with the beat. The BPM readout will be constantly updated to reflect the timing you use while tapping the button, and the effect will switch on/off according to this BPM.

Editing the front panel assignments

As explained earlier, the functions assigned to the buttons and dials of the V-4 can be stored in memory and accessed via the memory dial (MEMORY). (Note: The assignment for dial position number 1 is fixed at the factory and not assignable.) You can edit and save the assignments of the following buttons and dials:

- Output fade dial
- Mix button (MIX)
- Wipe button (WIPE)
- EFX button (EFX)
- BPM sync button (BPM SYNC)
- Channel A effect buttons (four buttons)
- Channel B effect buttons (four buttons)
- Channel A transformer buttons (TRANSFORMER)
- Channel B transformer buttons (TRANSFORMER)

Settings and menu information is displayed on the TV monitor connected to the preview output. If you need to change settings, the operation can be executed by viewing the information and menu displayed on the preview monitor. You can change settings by using the following buttons.

Menu Button (MENU)

When pressed, the button lights up and the menu is displayed on the preview monitor.


Cursor Buttons(▲▼)

These buttons are used to select desired menu and to change value.

Enter Button (ENTER)

Where there are multiple setting menus under the top menu, this button can be pressed to select the subsequent menu. If you need to return to the upper level menu, press Menu Button.

Editing the front panel assignments

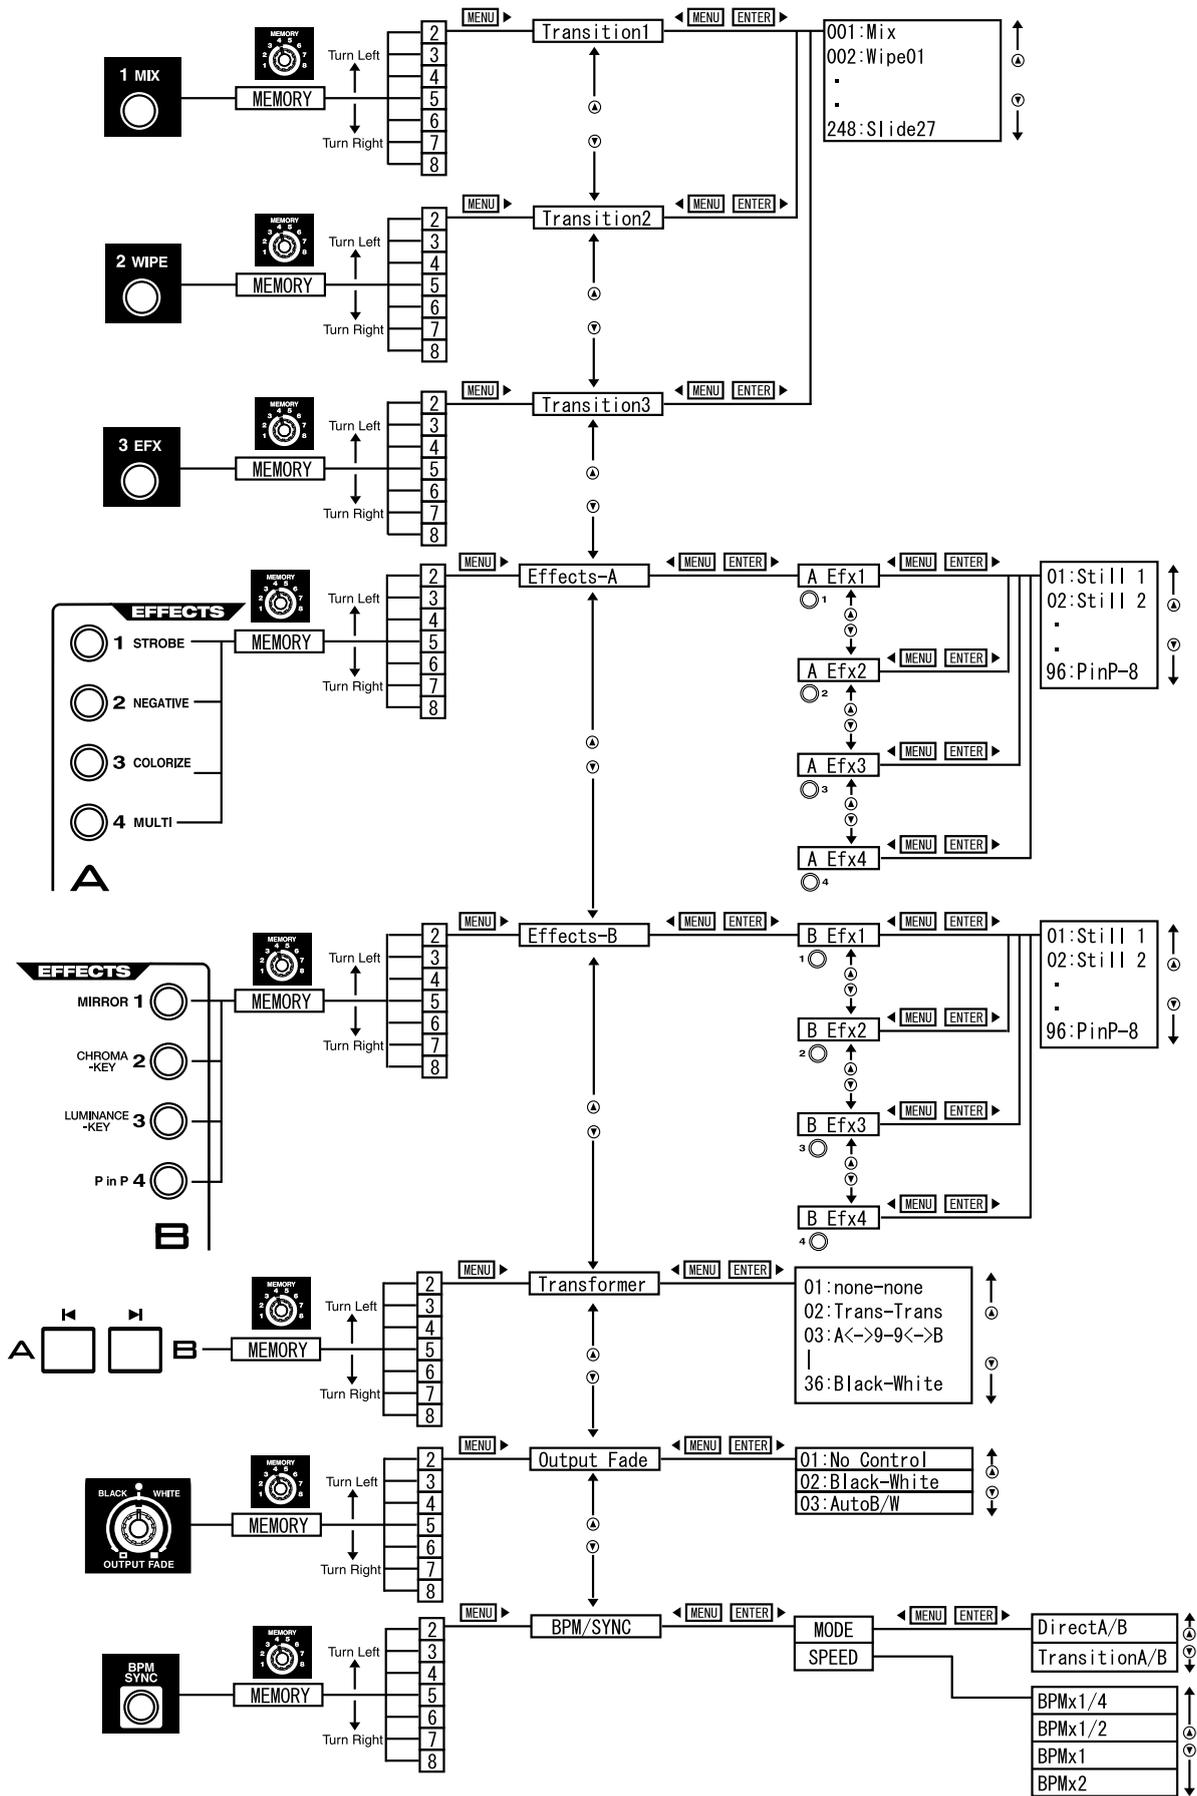


Changing the assignment of the mix button (MIX)

With the factory settings, mix (MIX: dissolve) is assigned to this button for all eight positions of the memory dial. Here's how to assign a different type of transition effect to the mix button for one of the dial positions.

1. Set the memory dial to the number whose settings you want to change.

Set the memory dial to the number (2 through 8) whose settings you want to change.

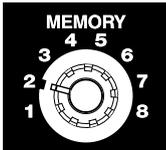


2. Press the mix button (MIX).

The button lights up when pressed.

3. Press the menu button (MENU).

Press the menu button (MENU) located in the upper left of the panel. The settings edit menu will appear on the TV screen connected to the preview output.

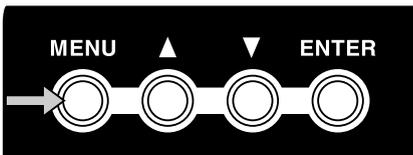


4. Select "MIX."

Use the cursor buttons to select "Mix (Trans1)." It will blink when you select it. The memory dial number you select is displayed following "Mix (Trans1)." If you have selected memory number 2, this will indicate [Mem2].



5. Press the enter button (ENTER).

Press the enter button (located at the right of the cursor buttons) to make your selection. The preview screen display will change.

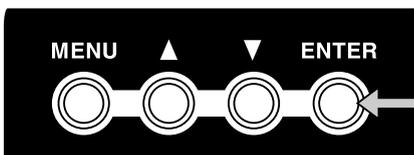

6. Select the transition effect.

Use the cursor buttons to select the type of transition effect. With an effect selected (blinking) and the video fader set in the center position, the output screen will show the type of transition effect that is selected. Operate the video fader to see the result.



7. Return to the previous screen.


When you have selected an effect, press the menu button to return to the previous screen. Press the button twice to exit the menu screen and return to the previous screen.

Changing the assignment of the wipe button (WIPE)

With the factory settings, eight basic wipes are assigned to this button for the eight settings of the memory dial. Here's how to assign a different type of transition effect to the wipe button.

1. Set the memory dial to the number whose assignment you want to change.

Operate the video fader while you turn the memory dial to different positions. Notice how the dial selects different wipe patterns. Set the memory dial to the number (2 through 8) whose settings you want to change.

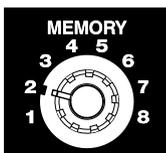


2. Press the wipe button (WIPE)

The button lights up when pressed.

3. Press the menu button (MENU).


Press the menu button (MENU) located in the upper left of the panel. The settings edit menu will appear on the TV screen connected to the preview output.

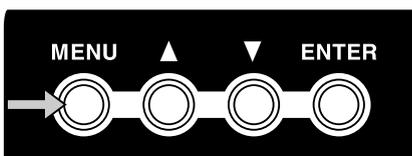

4. Select "WIPE."


Use the cursor buttons to select "WIPE." It will blink when you select it. The memory dial number you select is displayed following "WIPE (Trans1)." If you have selected memory number 2, this will indicate [Mem2].

Editing the front panel assignments

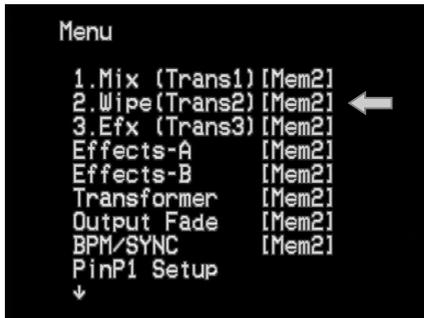

5. Press the enter button (ENTER).

Press the enter button (located at the right of the cursor buttons) to make your selection. The preview screen display will change.

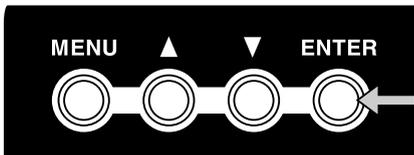

6. Select the transition effect.

Use the cursor buttons to select the type of transition effect. With an effect selected (blinking) and the video fader set in the center position, the output screen will show the type of transition effect that is selected. Operate the T-bar to see the result.



7. Return to the previous screen.


When you have selected an effect, press the menu button to return to the previous screen. Press the button twice to exit the menu screen and return to the previous screen.

Changing the assignment of the EFX button (EFX)

With the factory settings, various special wipes and basic slides are assigned to this button for the eight settings of the memory dial. Here's how to assign a different type of transition effect to the EFX button.

1. Set the memory dial to the number whose assignment you want to change.

Operate the T-bar while you turn the memory dial to different positions. Notice how the dial selects different transition effect patterns. Set the memory dial to the number (2 through 8) whose settings you want to change.

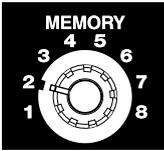


2. Press the EFX button (EFX)

The button lights up when pressed.


3. Press the menu button (MENU).

Press the menu button (MENU) located in the upper left of the panel. The settings edit menu will appear on the TV screen connected to the preview output.

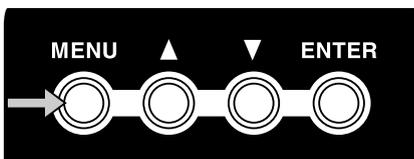


4. Select "EFX."

Use the cursor buttons to select "EFX." It will blink when you select it. The memory dial number you select is displayed following "EFX." If you have selected memory number 2, this will indicate [Mem2].

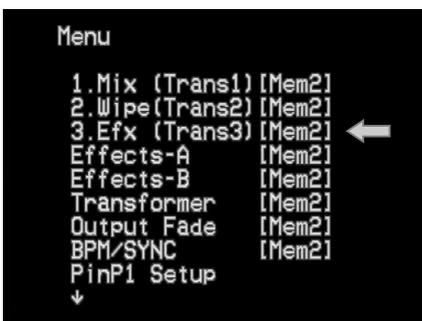

5. Press the enter button (ENTER).

Press the enter button (located at the right of the cursor buttons) to make your selection. The preview screen display will change.

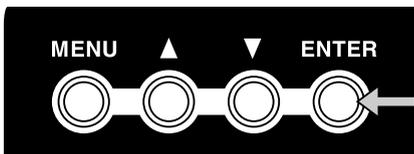

6. Select the transition effect.

Use the cursor buttons to select the type of transition effect. With an effect selected (blinking) and the video fader set in the center position, the output screen will show the type of transition effect that is selected. Operate the T-bar to see the result.

Editing the front panel assignments



7. Return to the previous screen.


When you have selected an effect, press the menu button to return to the previous screen. Press the button twice to exit the menu screen and return to the previous screen.

Changing the assignment of the output fade dial (OUTPUT FADE)

With the factory settings, and when the memory dial is set to number 1, turning the output fade dial toward the left will fade-to-black, and turning it toward the right will fade-to-white.


1. Set the memory dial to the number whose assignment you want to change.

Operate the output fade dial while you turn the memory dial to different positions. Set the memory dial to the number (2 through 8) whose settings you want to change.

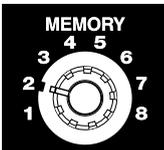


2. Press the menu button (MENU).

Press the menu button (MENU) located in the upper left of the panel. The settings edit menu will appear on the TV screen connected to the preview output.

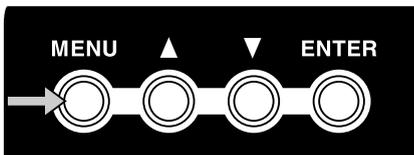


3. Select "Output Fade".

Use the cursor buttons to select "Output Fade." It will blink when you select it. The memory dial number you select is displayed following "Output Fade." If you have selected memory number 2, this will indicate [Mem2].

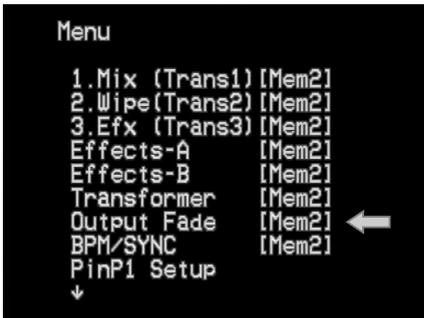


4. Press the enter button (ENTER).

Press the enter button (located at the right of the cursor buttons) to make your selection. The preview screen display will change.

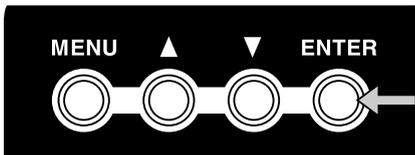

5. Select the fade pattern.

Use the cursor buttons to select the type of fade pattern. With a pattern selected (blinking), turn the output fade dial to see the currently selected fade pattern occur in the output screen. If you select "No Control," turning the dial in either direction will not produce a fade.

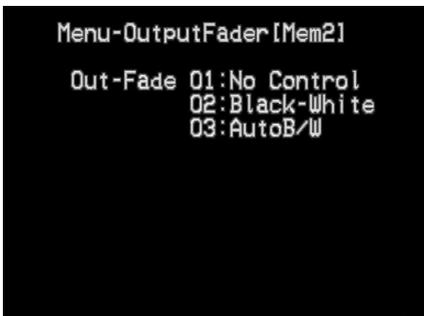

6. Return to the previous screen.

When you have selected a fade pattern, press the menu button to return to the previous screen. Press the button twice to exit the menu screen and return to the previous screen.


Changing the assignments of the channel A and B effect buttons (EFFECTS)

With the factory settings, effect buttons 1 through 4 of channels A and B are assigned the following effects:

- Channel A:
- 1 Strobe (STROBE)
 - 2 Negative (NEGATIVE)
 - 3 Colorize (COLORIZE)
 - 4 Multi (MULTI)
- Channel B:
- 1 Mirror (MIRROR)
 - 2 Chroma key (CHROMA KEY)
 - 3 Luminance key (LUMINANCE KEY)
 - 4 Picture in picture (PinP)

1. Turn the memory dial.

Turn the memory dial to the number (2 through 8) whose assignment you want to change.

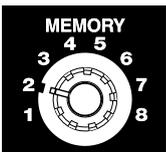


2. Choose the effect button whose assignment you want to change.

Press the effect button (channel A buttons 1-4, channel B buttons 1-4) whose assignment you want to change. The effect will be applied.

3. Press the menu button (MENU).

Press the menu button (MENU) located in the upper left of the panel. The settings edit menu will appear on the TV screen connected to the preview output.

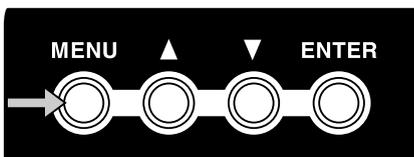


4. Select either "Effects-A" or "Effects-B."

Select "Effects-A" if you want to edit the channel A settings. Select "Effects-B" if you want to edit the channel B settings. Use the cursor buttons to make your selection. The selection will blink. The memory dial number you select is displayed following "Effects-A" or "Effects-B." If you have selected memory number 2, this will indicate [Mem2].




5. Press the enter button (ENTER).

Press the enter button (located at the right of the cursor buttons) to make your selection. The preview screen display will change displaying a screen where you can choose the button whose assignment will be changed.

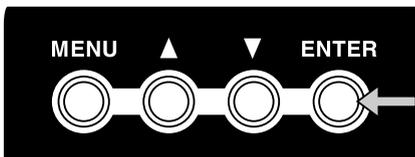


6. Select a button.

If you have selected channel A, the screen will show A-Efx1 through A-Efx4. If you have selected channel B, the screen will show B-Efx1 through B-Efx4. Select the button whose assignment you want to change. For example, if you want to change the assignment of channel A button 2, you would select A-Efx2. Press the enter button to go to the effect setting screen.

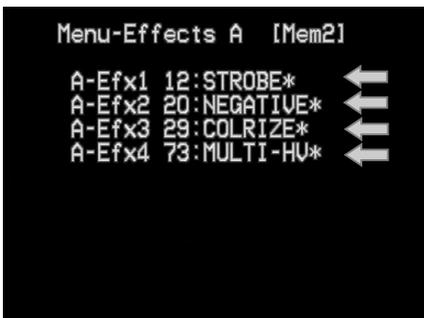


or

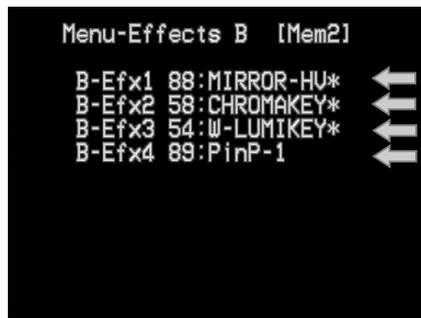

7. Select the type of effect.

Use the cursor buttons to select the effect that you want to assign. (The selected effect will blink.) The type of effect in the output screen will change.

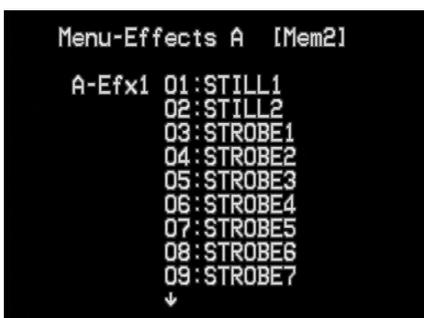

Editing the front panel assignments

If you select an effect with the "*" mark after the effect name, the effect value can be changed with the control dial.

8. Return to the previous screen.


When you have made your selection, press the menu button to return to the previous screen. Press the button three times to exit the menu screen and return to the previous screen.

Changing the assignment of the BPM sync button (BPM SYNC)

With the factory settings, and when the memory dial is set to 1, BPM sync is set to switch between A and B by using a transition effect. The transition speed will be the BPM shown in the BPM indicator.


1. Turn the memory dial.

Select the memory number (2 through 8) whose assignments you want to change.

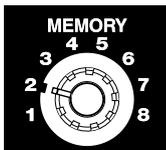


2. Press the menu button (MENU).

Press the menu button (MENU) located in the upper left of the panel. The settings edit menu will appear on the TV screen connected to the preview output.

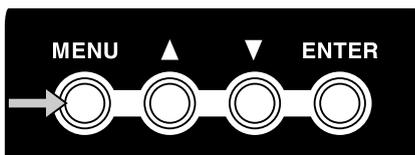

3. Select "BPM/SYNC."

Use the cursor buttons to select "BPM/SYNC." The memory dial number you select is displayed following "BPM/SYNC." If you have selected memory number 2, this will indicate [Mem2].

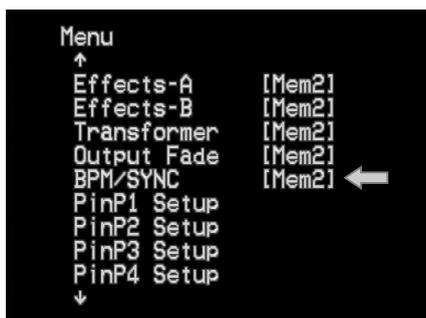


4. Press the enter button (ENTER)

Press the enter button to proceed to the setting screen.

5. Select "MODE" or "SPEED."

Use the cursor buttons to choose whether it is the mode or the speed of the transition that you want to change. Choose "MODE" if you want to change the transition from a "cut" to one that incorporates some kind of effect, such as "wipe." Choose "SPEED" if you want to change the speed of the transition. Then press the enter button to proceed to the following setting screen.

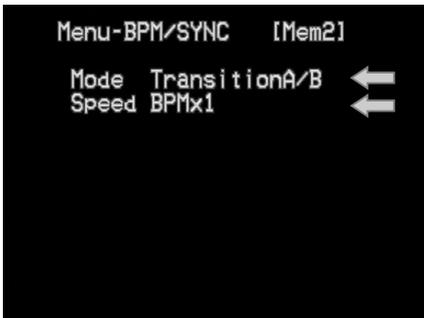

6. Select the operating mode or speed.

If you are changing the operating mode, use the cursor buttons to change "Transition A/B" to "Direct A/B." If you are changing the speed, select either "BPM x 1/4," "BPM x 1/2," "BPM x 1," or "BPM x 2."

7. Return to the previous screen.


When you have finished making settings, press the menu button to return to the previous screen. Press the button three times to exit the menu screen and return to the previous screen.

Changing the assignment of the channel A/channel B transformer buttons (TRANSFORMER)

With the factory settings, and when the memory dial is set to 1, the switch to image A or B takes place immediately when you press the channel A or B transformer buttons (TRANSFORMER).


1. Press the transformer buttons while turning the memory dial.

Press the transformer buttons while turning the memory dial to various settings, and choose the memory number whose assignments you want to change.

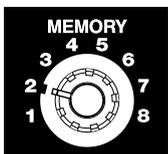

2. Press the menu button (MENU).


Press the menu button (MENU) located in the upper left of the panel. The settings edit menu will appear on the TV screen connected to the preview output.

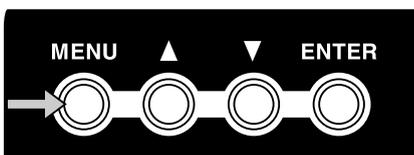

Editing the front panel assignments


3. Select "Transformer."

Use the cursor buttons to select "Transformer." The memory dial number you select is displayed following "Transformer." If you have selected memory number 2, this will indicate [Mem2].

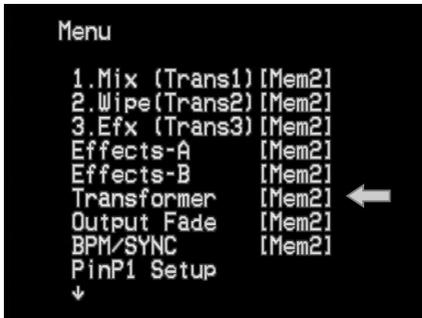


4. Press the enter button (ENTER).

Press the enter button (located at the right of the cursor buttons) to make your selection. The preview screen display will change to a screen where you can choose the parameter to be assigned.

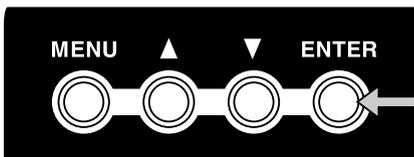

5. Select a pattern.

Select a pattern from the range of "01: none-none" to "36: Black-White." If you select "01: none-none," the transformer buttons will have no effect; you will not be able to switch between images A/B or fade to white/black by pressing these buttons. For details on the operation and times of these parameters, refer to the menu list on p. 78.

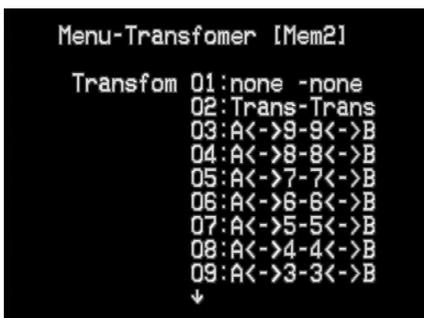

6. Return to the previous screen.


When you have finished making the settings, press the menu button to return to the previous screen. Press the button twice to exit the menu screen and return to the previous screen.

Protecting the memory

By turning on Memory Protect, you can prevent any accidental changes from being made to the assignments you made for memory numbers 2 through 8.

1. Press the menu button (MENU).

Press the menu button (MENU) located in the upper left of the panel. The menu will appear on the TV screen connected to the preview output.

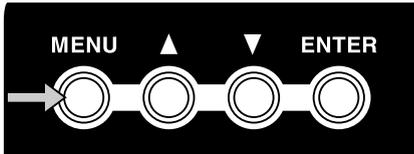


2. Select "Utility."

Use the cursor buttons to select "Utility." Then press the enter button (ENTER) to move to the following screen.



3. Select "Memory Protect."


Use the cursor buttons to select "Memory Protect." Then press the enter button (ENTER) to move to the following screen.

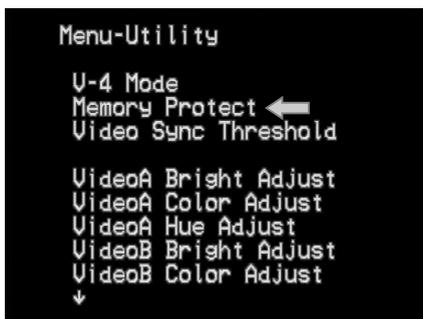

4. Turn the setting "On."

Use the cursor buttons to select "On" or "Off." Selecting "On" turns memory protection on so you will be unable to modify the memory contents. Selecting "Off" turns memory protection off so that modifications will be permitted.

Editing the front panel assignments

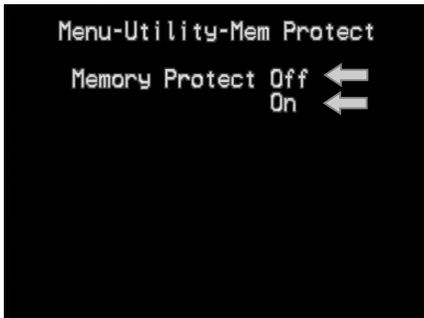

5. Return to the previous screen.


When you have finished making settings, press the menu button to return to the previous screen. Press the button three times to exit the menu screen and return to the previous screen.

Copying or exchanging memories

You can copy the contents of the currently selected memory to another memory, or exchange them with another memory.

1. Press the menu button (MENU).

Press the menu button. The menu will appear on the TV screen connected to the preview output.

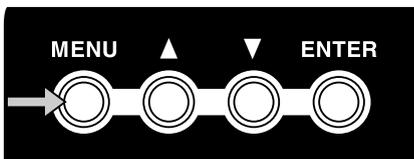


2. Select "Memory Edit."

Use the cursor buttons to select "Memory Edit." Press the enter button (ENTER) to move to the following screen.



3. Select the operation.

Use the cursor buttons to select the operation. For example, if you want to copy memory number 8 to memory number 2, select "Copy Mem8->Mem2." If you want to exchange memory numbers 8 and 2, select "Exchange Mem8<->Mem2." You can turn the memory dial to change the copy-source number.

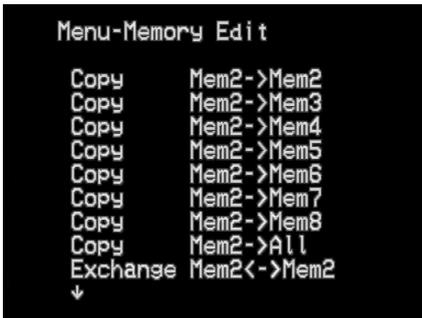

4. Press the enter button (ENTER).

When you have specified the operation, press the enter button. The display will indicate "Push [ENTER]" so press the enter button once again. The selected operation will be executed.

5. Return to the previous screen.


After you have executed the operation, press the menu button to return to the previous screen. Press the button twice to exit the menu screen and return to the previous screen.

Recalling the factory settings

You can recall factory settings with the following operation. Any change of settings or adjustments you have made will be cleared with this operation. Do not execute this function if you want to retain any of your saved settings. If it is necessary to execute the recall function, you should write down the settings of your memory first.

1. Press the menu button (MENU).

Press the menu button. The menu will appear on the TV screen connected to the preview output.

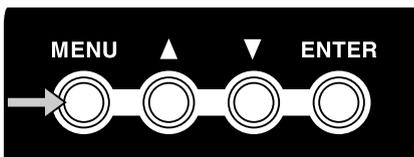

2. Select "Factory Preset."

Use the cursor buttons to select "Factory Preset." Press the enter button (ENTER) to move to the following screen.



3. Select "Yes[ENTER]SW."

Use the cursor buttons to select "Yes[ENTER]SW."

Editing the front panel assignments

4. Press the enter button (ENTER)

Pressing the enter button will reinitialize the V4 to its Factory Presets. All the settings and adjustments will return to factory preset status.


Control the V-4 from an external device

Using V-LINK to control the V-4

You can connect the V-4 with a V-LINK compatible device made by Roland or Edirol, and control the V-4 remotely.

■ What is V-LINK?

V-LINK (**V-LINK**) is a function that allows images to be synchronized to music. V-LINK makes it easy to manipulate images in a variety of ways, while linking them to the expressive elements of a performance.

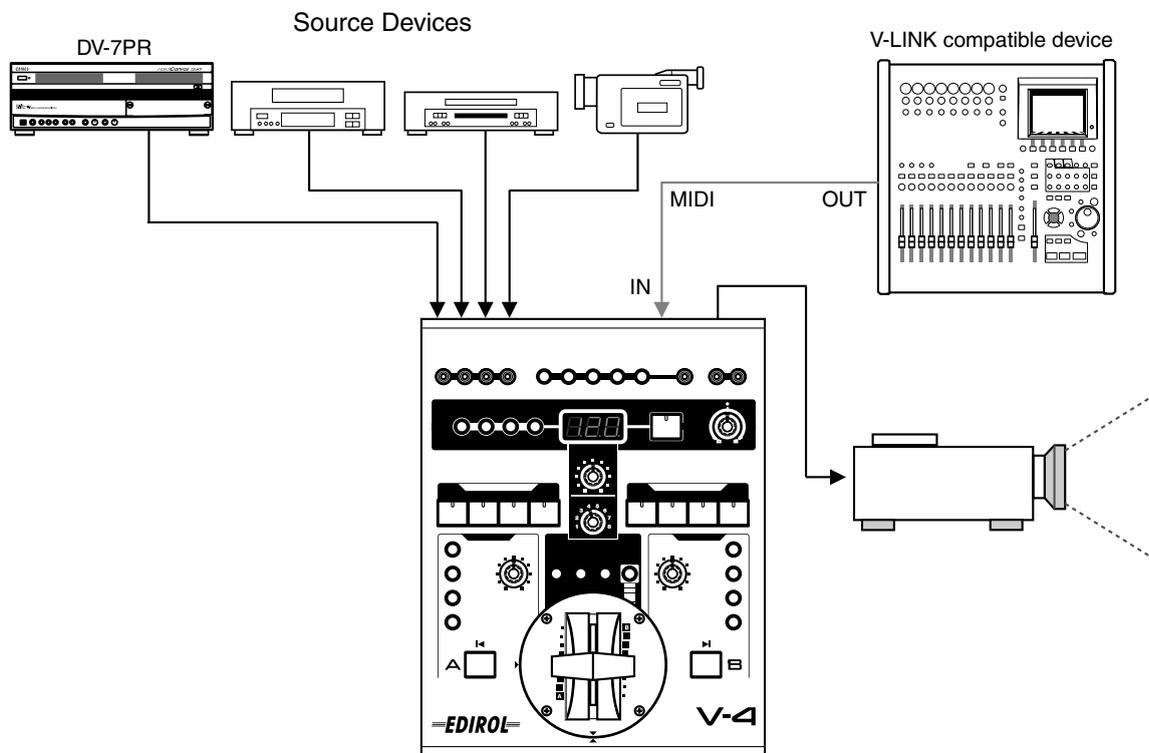

(Example) When using a Roland MC-909 in conjunction with the V-4:

- You can make settings for controlling the V-4 from the MC-909 (remote settings).
- You can use the MC-909's sequencer to control video switching on the V-4 to create performances that link images with music.
- You can use the MC-909's velocity pads to control the V-4's input selectors and switch among images from various source devices.
- You can use the MC-909's knobs to adjust the time settings of transition effects (such as overlap or wipe).

(Example) When using an Edirol PCR-30/50 in conjunction with the V-4:

- You can make settings for controlling the V-4 from the PCR-30/50 (remote settings).
- You can use the PCR-30/50 to control the V-4's input selectors to switch between images from various source devices.
- You can use the PCR-30/50 to adjust the time settings of transition effects (such as overlap or wipe).

Control the V-4 from an external device

■ Using V-LINK

For details on how to turn V-LINK on/off, refer to the owner's manual of the V-LINK compatible device that you intend to connect to the V-4. When you turn V-LINK on, the indication "V-LINK" will appear in the preview monitor. When you turn V-LINK off, this indication will disappear.



When you turn on V-LINK on the connected device, the V-4 will switch to "Presentation mode." If the V-4 is operating in normal mode and receives a V-LINK "On" signal, the function of its buttons and other controls will change. (For details on Presentation mode, refer to p. 68.) When V-LINK is turned off, the V-4 will return to its previous settings.

For details on the functions that can be controlled from an external device via V-LINK, refer to MIDI Implementation (p. 89) and to the MIDI implementation of the device you have connected. The functions that can be controlled will differ depending on the device that is connected and on its settings.

Using MIDI to control the V-4


You can connect the V-4 with various MIDI devices for a wide range of remote control functionality.

■ What is MIDI?

MIDI stands for "Musical Instrument Digital Interface"—a worldwide standard that allows performance data and other information to be exchanged among musical instruments. MIDI-compatible devices can be connected together easily using MIDI cables. Once connected, performance data can readily be communicated between the two devices; or one can make settings for, as well as control the operation of the other device.

Control the V-4 from an external device

* System for auto switching and effects controlled by MIDI sequencer

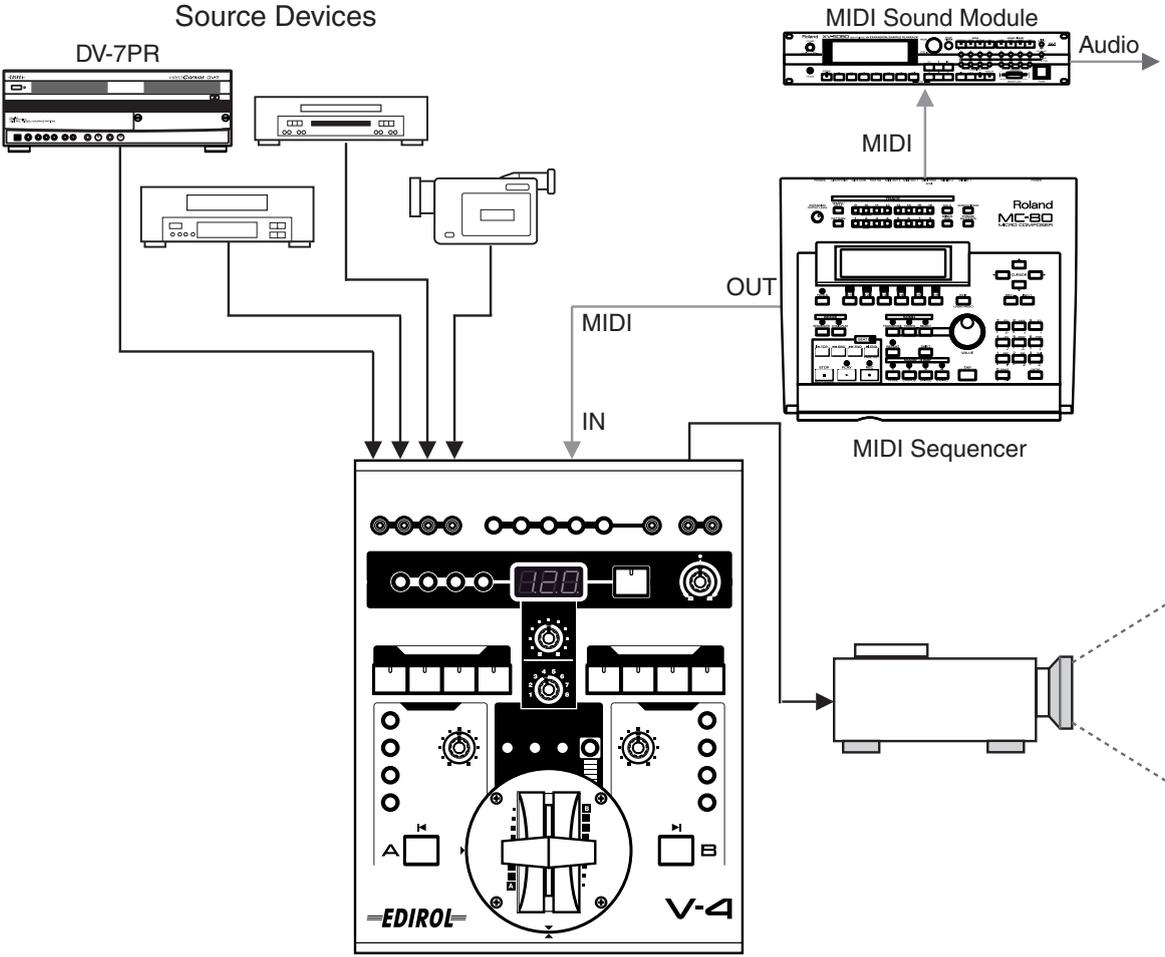

V-LINK makes it easy to control the basic functions of the V-4. Even if you are using a device that does not support V-LINK, you can make transmission and reception settings so that the V-4 can be controlled from a musical instrument or other external device. For details on the functionality that can be controlled via MIDI from an external device, refer to p. 89 of this manual, and to the MIDI implementation of the device you have connected.

Control the V-4 from an external device

■ MIDI settings


You will need to make settings on the V-4 so that it will receive control messages from an external MIDI device. The procedure is as follows.

■ Setting the MIDI transmit channel (MIDI Tx Channel)

This setting specifies the MIDI channel that will be used to send control messages.

1. Press the menu button (MENU).

Press the menu button to display the V-4 menu on the preview screen.

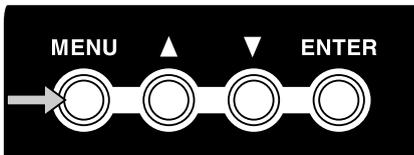

2. Select "MIDI Setup."

Use the cursor buttons to select "MIDI Setup." Press the enter button (ENTER) to enter the MIDI setting screen.



3. Select "MIDI Tx Channel."

Use the cursor buttons to select "MIDI Tx Channel." Press the enter button (ENTER) to enter the transmit channel setting screen.



4. Specify the transmit channel.

Use the cursor buttons to select the transmit channel.

5. Return to the previous screen.


When you have finished making settings, press the menu button to return to the previous screen. If you press the button three times, you will exit the menu screens and return to the previous screen.

■ Setting the MIDI receive channel (MIDI Rx Channel)

This setting specifies the MIDI channel that will be used to receive control messages.

1. Press the menu button (MENU).

Press the menu button to display the V-4 menu on the preview screen.

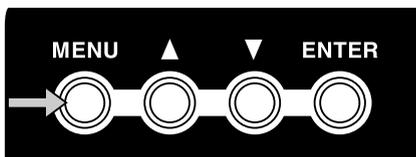

2. Select "MIDI Setup."

Use the cursor buttons to select "MIDI Setup." Press the enter button (ENTER) to enter the MIDI setting screen.



3. Select "MIDI Rx Channel."

Use the cursor buttons to select "MIDI Rx Channel." Press the enter button (ENTER) to enter the receive channel setting screen.



4. Specify the receive channel.

Use the cursor buttons to select the receive channel.

5. Return to the previous screen.

When you have finished making settings, press the menu button to return to the previous screen. If you press the button three times, you will exit the menu screens and return to the previous screen.

Control the V-4 from an external device

■ Making other MIDI settings

You can use the same procedure to make other MIDI settings. In particular, the following buttons and dials can be controlled via MIDI:

- Channel A effect buttons 1–4
- Channel B effect buttons 1–4
- Video fader
- Channel A/B transformer buttons
- BPM/SYNC button
- Output fader

In addition, the duration of a transition effect can also be controlled via MIDI. Refer to the following table for more about MIDI settings.

Control the V-4 from an external device

MIDI Setup


MIDI Tx Channel	1 - 16	MIDI transmit channel setting
MIDI Tx Channel	1 - 16/OFF	MIDI receive channel settings
MIDI Out/Thru Switch	Out/Thru	MIDI out/thru setting
V-LINK Switch	Off/On	V-LINK on/off setting
Note Mode On/Off	Off/On	Note mode on/off setting
Device ID	0x00 - 0x1f	Device ID No. setting
Effects-A1 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.A effect button 1
Effects-A2 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.A effect button 2
Effects-A3 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.A effect button 3
Effects-A4 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.A effect button 4
Effects-B1 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.B effect button 1
Effects-B2 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.B effect button 2
Effects-B3 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.B effect button 3
Effects-B4 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.B effect button 4
Video Fader Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the video fader
Transition Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the transition effect
Transformer-A Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the Transformer-A button
Transformer-B Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the Transformer-B button
BPM/Sync Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the BPM/SYNC button
Transition Time Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that controls the duration of the transition effect
Output Fade Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the output fader

Making various settings

The V-4's video mixer lets you adjust the brightness and color of channels A and B independently. With the factory settings, both channels are set to typical settings, and you do not need to change these settings unless you wish. However, if you want to change the settings, you can use the following procedure. Although these settings can be made independently for channels A and B, they cannot be made independently for each input. You can also use the same procedure to change the output position of the image, or switch the video fader mode.

1. Press the menu button.

Press the menu button (MENU). The menu will appear in the preview screen.

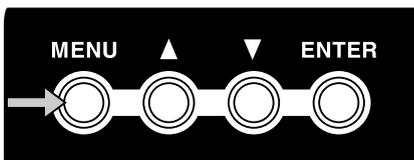

2. Select "Utility."

Use the cursor buttons to select "Utility." Press the enter button (ENTER) to move to the following screen.



3. Select the item that you want to set.

Use the cursor buttons to select the item that you want to set. For the settings that can be adjusted, refer to p. 81–82. After you have selected the item, press the enter button (ENTER) to enter the setting screen for that item.



4. Change the setting.

Use the cursor buttons to set the parameter.

5. Return to the previous screen.

When you have finished making the setting, press the menu button to return to the previous screen. If you press the menu button three times, you will exit the menu screens and return to the previous screen.

Calibrating the video fader


With the factory settings, moving the V-4's video fader all the way to the A position will output 100% of channel A, and moving it all the way to the B position will output 100% of channel B. If for some reason, moving the video fader all the way to A or B does not output 100% of the image, you can use the following procedure to automatically calibrate the fader.

1. Move the video fader all the way to the A position.

First you will calibrate the channel A setting. Move the video fader all the way to the A position.

2. Press the menu button (MENU).

Press the menu button to display the menu in the preview screen.

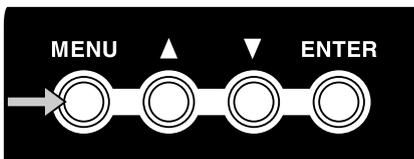


3. Select "Utility."

Use the cursor buttons to select "Utility." Then press the enter button to display the "Utility" settings.



4. Select "Video Fader Calibrate A."

Use the cursor buttons to select "Video Fader Calibrate A." The display will indicate "V Fader [A] set [ENTER] SW."

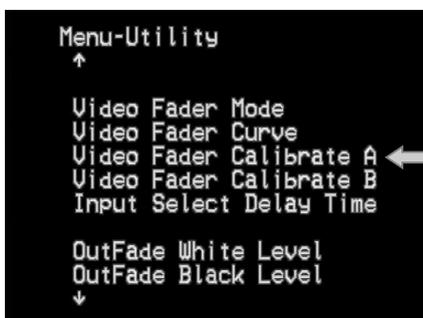

5. Press the enter button (ENTER).

Press the enter button. The channel A position will be calibrated automatically.

6. Move the video fader all the way to the B position.

Next, you will calibrate the channel B setting. Move the video fader all the way to the B position.

7. Press the menu button (MENU).


Press the menu button to display the menu in the preview screen.

8. Select "Utility."

Use the cursor buttons to select "Utility." Then press the enter button to display the "Utility" settings.

9. Select "Video Fader Calibrate B."

Use the cursor buttons to select "Video Fader Calibrate B." The display will indicate "V Fader [B] set [ENTER] SW."

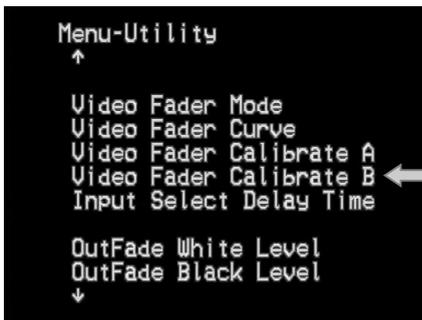

10. Press the enter button (ENTER).

Press the enter button. The channel B position will be calibrated automatically.

11. Return to the previous screen.


When you are finished, press the menu button to return to the previous screen. If you press the menu button twice, you will exit the menu screens and return to the previous screen.

Using the V-4 in Presentation mode

The V-4 has two modes; Normal mode and Presentation mode. The preceding chapters have explained operation in Normal mode. This chapter explains how to use the V-4 in Presentation mode.


What is Presentation mode?

Presentation mode is ideal when using the V-4 in a presentation such as a meeting or exhibition. Using the V-4 in Presentation mode makes it easy to switch between inputs 1-4 or composite images using the Picture In Picture function.

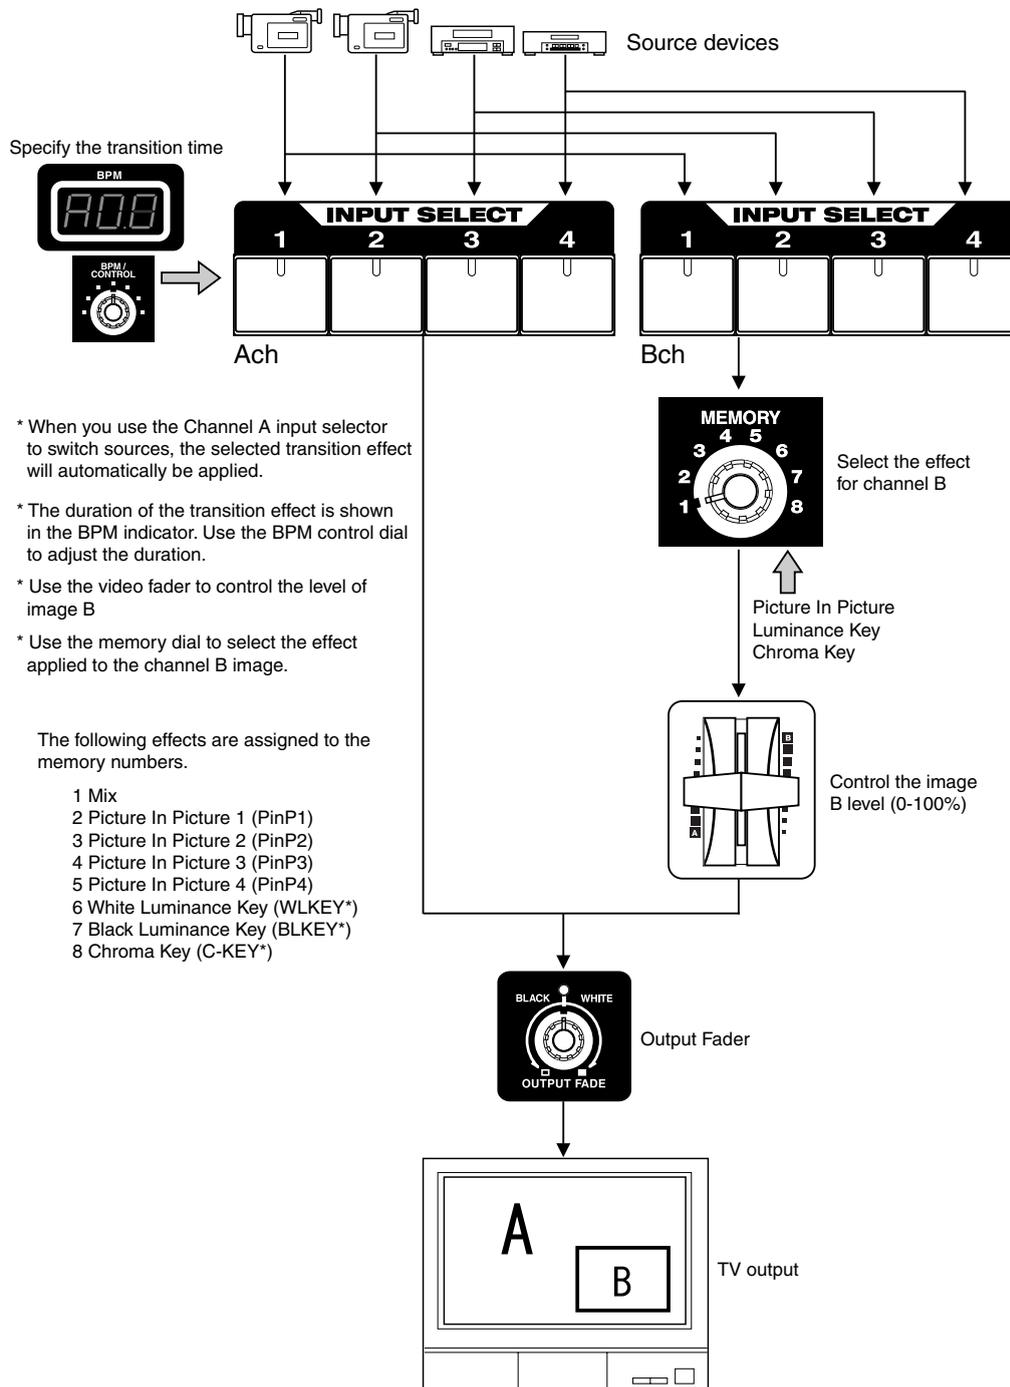

Switching to Presentation mode

To switch from Normal mode to Presentation mode, turn off the power of the V-4. Then hold down channel A input select buttons 1 and 4, and press the power button.

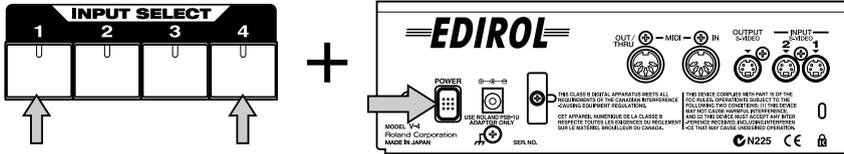

Once you switch to Presentation mode, that setting will be preserved. The next time you start up the V-4, you can simply press the power button and the V-4 will start up in Presentation mode. If you want to start up in Normal mode, hold down the channel A input select buttons 1 and 4 while you press the power button.

■ The function of the input selector

Presentation mode assumes that you will be combining two screens. Use the channel A input selector to switch the background image. When you switch the background image in Presentation mode, the currently selected transition effect will automatically be applied.

Use the channel B input selector to switch the image of the secondary screen, the screen overlays on background.

■ The function of the BPM/CONTROL dial


Use the BPM/CONTROL dial to set the duration of the transition effect. If this dial is set to the far left, the transition effect will have a duration of 0 seconds. If set to the far right, the transition effect will have a duration of 4 seconds.

Presentations using two screens with Picture In Picture




Here's how you can composite two screens, a technique frequently used in presentations.

1. Switch the V-4 to Presentation mode.

Start up the V-4 in Presentation mode as described above.

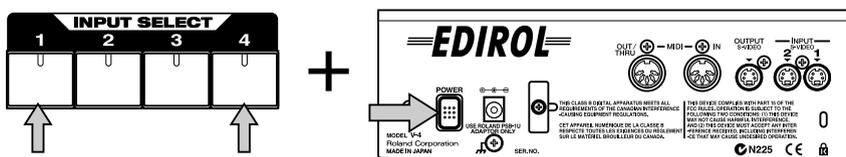


If you want to start up in Normal mode and then switch to Presentation mode by making a menu setting, choose the "Utility" menu item "V-4 Mode" and then select "Presentation."

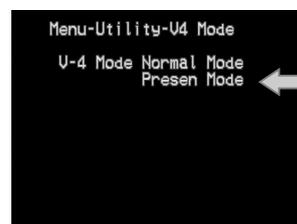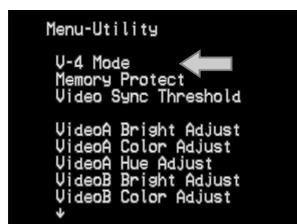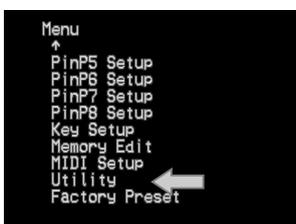

Using the V-4 in Presentation mode


2. Switch the background image.

Successively press the channel A input select buttons 1 through 4 to switch the image.

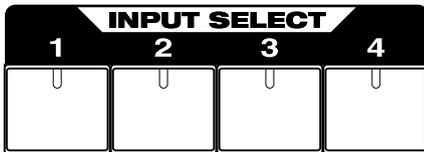

3. Apply the Picture In Picture function.

Set the memory dial to number 2. Picture In Picture will be applied.

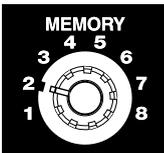


4. Apply other effects to composite two images.

Turn the memory dial to other positions to try out other types of effects. Numbers 2 - 5 change the location of the secondary screen of the Picture In Picture function. Numbers 6-8 apply other effects (luminance key/chroma key).


5. Switch the secondary image.

Press the channel B input selector buttons to switch the secondary image.

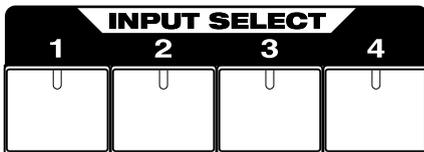

Switching between NTSC and PAL

The V-4 can be switched to support either NTSC or PAL format signals. To start up in PAL mode, hold down preview select button 1 and “OUTPUT,” and press the power button.

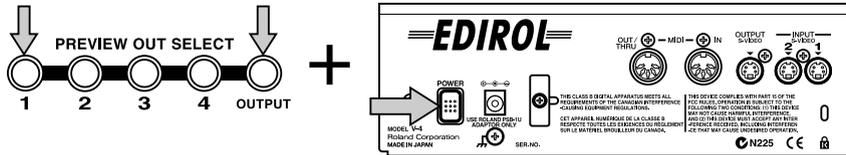

The next time you start up, you can simply press the power button to start up in PAL mode. If you want to return to NTSC mode, once again hold down preview select button 1 and “OUTPUT”, and press the power button.


When the V-4 starts up, an indication of whether it is starting up in NTSC mode or PAL mode will appear for several seconds in the preview screen.

Changing the video fader orientation

The V-4's T-bar style video fader may be installed in either the horizontal or vertical orientation depending on your preference. When shipped, the video fader is installed for vertical operation. If you prefer to operate the fader horizontally, you can turn the video fader 90 degrees.


1. Remove the screws.

Four screws fasten the video fader. Remove these four screws from the round video fader mounting plate, being careful not to lose them.

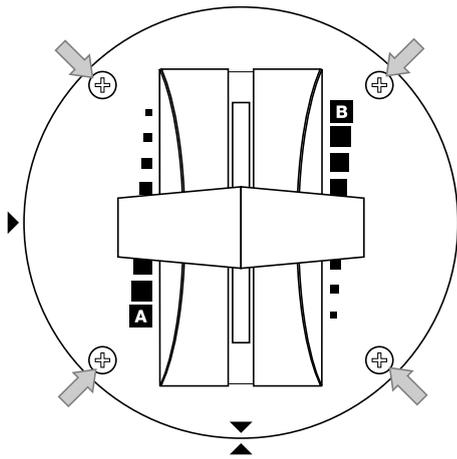

2. Reposition the video fader.

Turn the video fader 90 degrees. Align the triangle printed on the round mounting plate of the video fader with the triangle printed on the panel of the V-4.

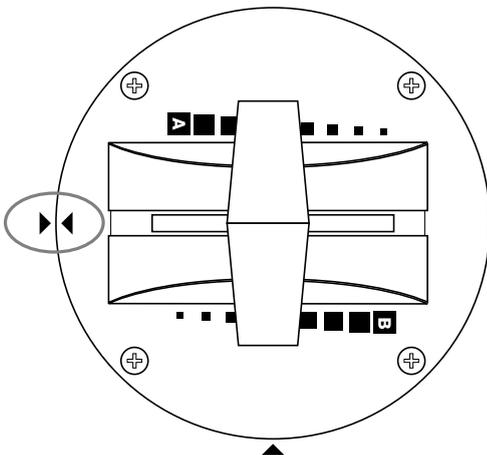

3. Fasten the screws.

Fasten the video fader to the panel, using the screws that you removed earlier. Firmly tighten all four screws.

The cable that connects the video fader to the V-4 may become disconnected if you pull strongly when unfastening the video fader panel. Please use caution when pulling the T-bar away from the panel.

Changing the video fader orientation

If you attempt to rotate the video fader panel further than 90 degrees, the internal cable may be damaged. Note the location of the triangle symbols, and do not rotate the video fader panel further than 90 degrees.

To remove the screws, use a screwdriver that matches the screw heads, and work carefully. If the screw heads become damaged, you will be unable to fasten the video fader in place.

Troubleshooting

If you suspect a malfunction, please check your system once again, taking note of the points listed below. If it still does not function correctly, contact an Edirol Service Center or the dealer where you purchased the unit.

Operating the video fader does not switch the image

If the same image is being input to channels A and B, operating the T-bar will not produce any change in the output image. You must input different images into channels A and B.

Operating the transformer buttons (TRANSFORMER) does not switch the image

With the factory settings, when the memory dial is set to 1, these buttons will “cut” between images. Check the position of the memory dial.

No image is output even though you play back the source device

Make sure that the output fade dial is set to the center position (green LED lit). With the factory settings, turning the dial toward the left will fade to black, and turning it toward the right will fade to white. If the dial is set all the way to left or right, no image will be output. Also make sure that the input select setting is correct.

Turning the control dial does not change the effect

Not all effects have parameters that can be modified by the control dial. If you have selected an effect whose parameter can be modified by the control dial, the channel A/B effect button will blink. If the button is only lit (not blinking), the control dial will not affect the parameter.

Image does not switch (effect not applied) in time with the BPM

Did you press the BPM sync button (BPM SYNC)? The BPM sync button (BPM SYNC) must be pressed if you want to switch the image or apply an effect in time with the BPM.

Image does not switch (effect does not apply) in time with TAP

Did you press the BPM sync button (BPM SYNC)? The BPM sync button (BPM SYNC) must be pressed if you want to use the TAP button to switch the image or apply an effect.

Operating the video fader does not switch the image in the expected direction

It is possible that if you detached the video fader to reposition it by 90 degrees, the internal connector may have been pulled out and re-inserted in the opposite orientation. Detach the video fader with its mounting plate, and try reinserting the connector in the opposite orientation.


Menu List

Mix (Trans1) [Mem2-8]	001:Mix	Mix(Dissolve)
Wipe (Trans2) [Mem2-8]	002:Wipe01 073:Wipe72	Hard-edged wipes
Efx (Trans3) [Mem2-8]	074:SWipe01 145:SWipe72	Soft-edged wipes
	146:MWipe01 217:MWipe72	Multi-border wipes
	218:Key01 221:Key04	Transition effects using key extraction
	222:Slide01 248:Slide27	Slide in/out


Parameter of effects marked by an asterisk* can be varied by the control dial

Effects-A [Mem2-8]	A-Efx1	01:STILL1 02:STILL2	Still
	A-Efx2	03:STROBE1 12:STROBE *	Strobe
	A-Efx3		
	A-Efx4		
Effects-B [Mem2-8]	B-Efx1	13:SHAKE1 16:SHAKE4	Shake
	B-Efx2	17:NEGATIVE1 20:NEGATIVE *	Negative (inverted brightness and color)
	B-Efx3		
	B-Efx4	21:COLRIZE1 29:COLRIZE *	Colorize (apply colors to the image)
	30:MONOCOLOR1 38:MONOCOLOR *	Monochrome color filter	
	39:POSTERIZE1 43:POSTERIZE *	Posterize (vary the brightness gradations)	
	44:COLORPASS1 52:COLORPASS *	Make monochrome while leaving one color (color pass)	
	53:W-LUMIKEY 54:W-LUMIKEY *	Luminance key (extract white)	
	55:B-LUMIKEY 56:B-LUMIKEY *	Luminance key (extract black)	

Menu List

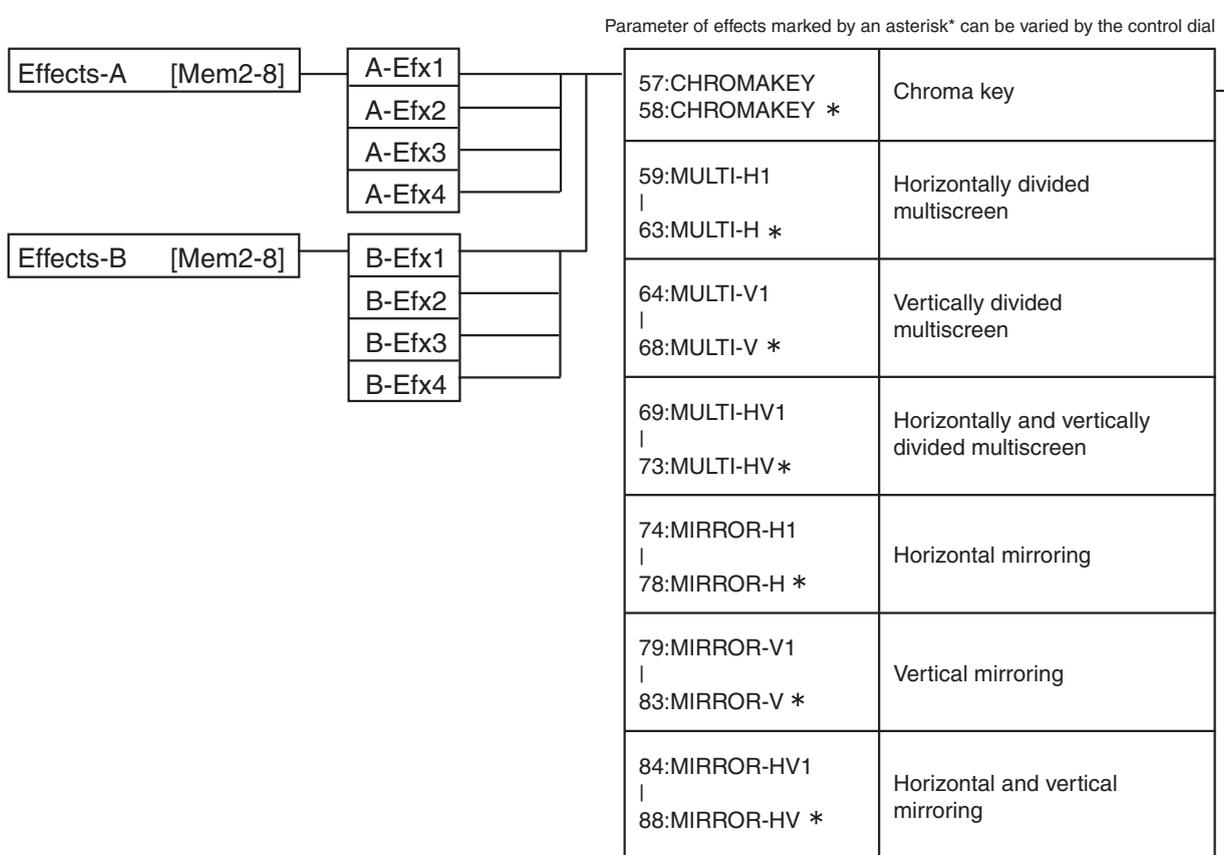

White-LumiKey Level	000 255	Adjust the level of luminance key extraction (extract white)
White-LumiKey Edge	001 015	Adjust the edge blurring for luminance key (extract white)
Black-LumiKey Level	000 255	Adjust the level of luminance key extraction (extract black)
Black-LumiKey Edge	001 015	Adjust the edge blurring for luminance key (extract black)
ChromaKey Color	Blue-Magenta Yellow-Red	Specify the color for chroma key
ChromaKey Level	000 255	Adjust the level of chroma key extraction
ChromaKey Edge	001 015	Adjust the edge blurring for chroma key



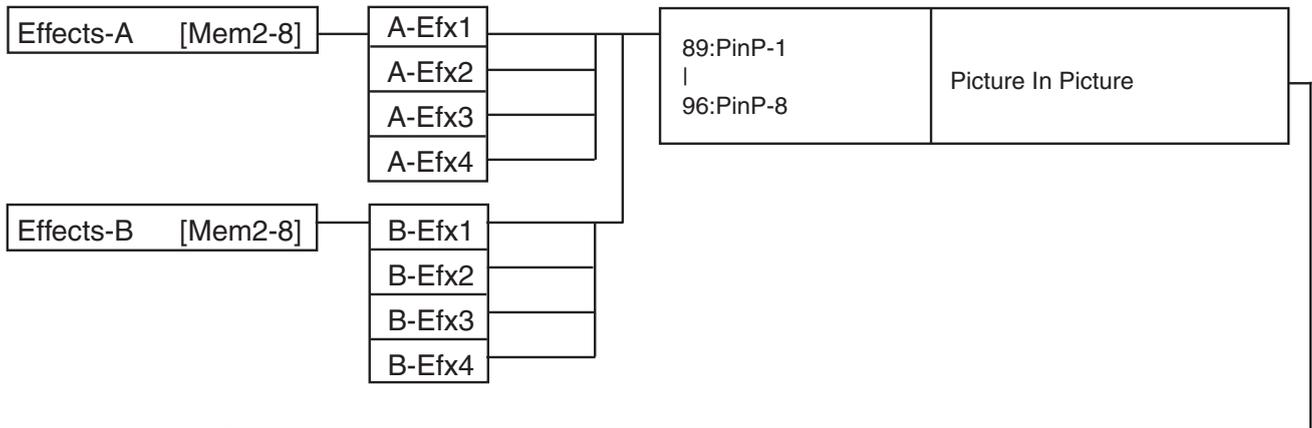


PinP1-8 HPosi	HPosi 000 HPosi 153	Adjust horizontal location of PinP
PinP1-8 VPosi	VPosi 000 VPosi 207	Adjust vertical location of PinP
PinP1-8 4:3 HVSize	4:3 HVSize 000 4:3 HVSize 110	Adjust size at fixed aspect ratio of 4 (horizontal) :3 (vertical)
PinP1-8 HSize	HSize 000 HSize 110	Adjust horizontal size of PinP
PinP1-8 VSize	VSize 000 VSize 220	Adjust vertical size of PinP
PinP1-8 Border	Border 000 Border 015	Select border width of PinP
PinP1-8 BColor	BColor 000 BColor 015	Select border color of PinP
PinP1-8 Shadow	Shadow 000 Shadow 015	Select distance of PinP shadow
PinP1-8 SColor	SColor 000 SColor 015	Select color of PinP shadow

Menu List

Transformer [Mem2-8]	01:none-none	No function
	02:Trans-Trans	Output the image of pressed channel as long as button is held.
	03:A<->9-9<->B	Switch between A and B each time you press the button. 0--9 indicates the duration of the transition. Higher numbers produce a longer transition.
	04:A<->8-8<->B	
	05:A<->7-7<->B	
	06:A<->6-6<->B	
	07:A<->5-5<->B	
	08:A<->4-4<->B	
	09:A<->3-3<->B	
	10:A<->2-2<->B	
	11:A<->1-1<->B	
	12:A<->0-0<->B	
	13:A<-9 - 9->B	Switch to the image of the channel (A or B) you press. 0--9 indicates the duration of the transition. Higher numbers produce a longer transition.
	14:A<-8 - 8->B	
	15:A<-7 - 7->B	
	16:A<-6 - 6->B	
	17:A<-5 - 5->B	
	18:A<-4 - 4->B	
	19:A<-3 - 3->B	
	20:A<-2 - 2->B	
	21:A<-1 - 1->B	
	22:A<-0 - 0->B	
	23:A->9 - 9<-B	Switch to the image of the opposite channel (A or B) from the one you press. 0--9 indicates the duration of the transition. Higher numbers produce a longer transition.
	24:A->8 - 8<-B	
	25:A->7 - 7<-B	
	26:A->6 - 6<-B	
	27:A->5 - 5<-B	
	28:A->4 - 4<-B	
	29:A->3 - 3<-B	
	30:A->2 - 2<-B	
	31:A->1 - 1<-B	
	32:A->0 - 0<-B	
	33:White-White	Fade both channels to white
	34:Black-Black	Fade both channels to black
	35:White-Black	Fade channel A to white/channel B to black
	36:Black-White	Fade channel A to black/channel B to white

Output Fade [Mem2-8]	01:No Control	No function
	02:Black-White	Left: black/Right: fade to white
	03:AutoB/W	Auto fade

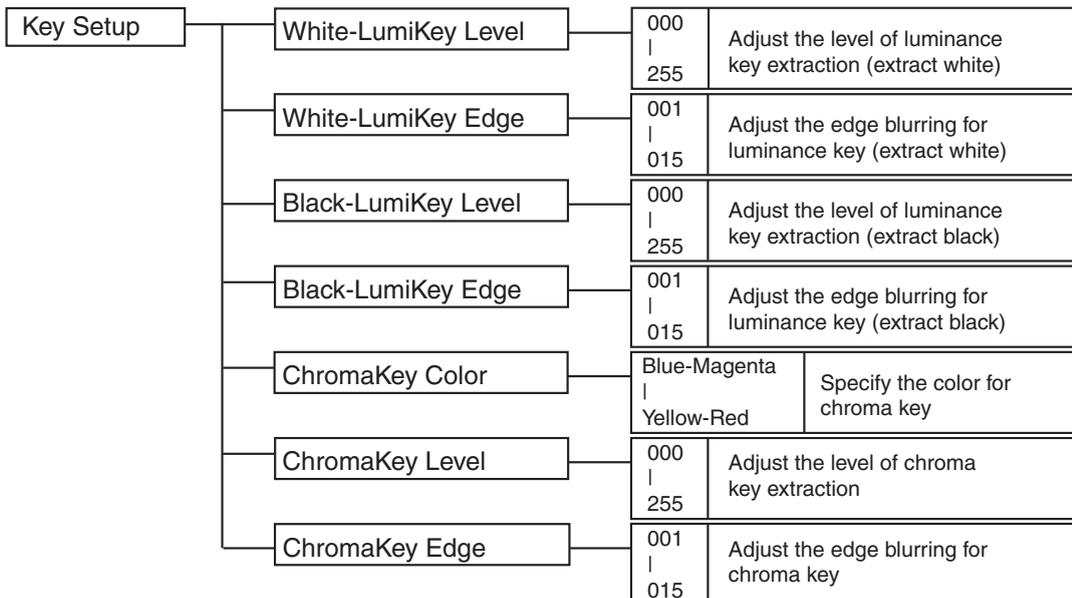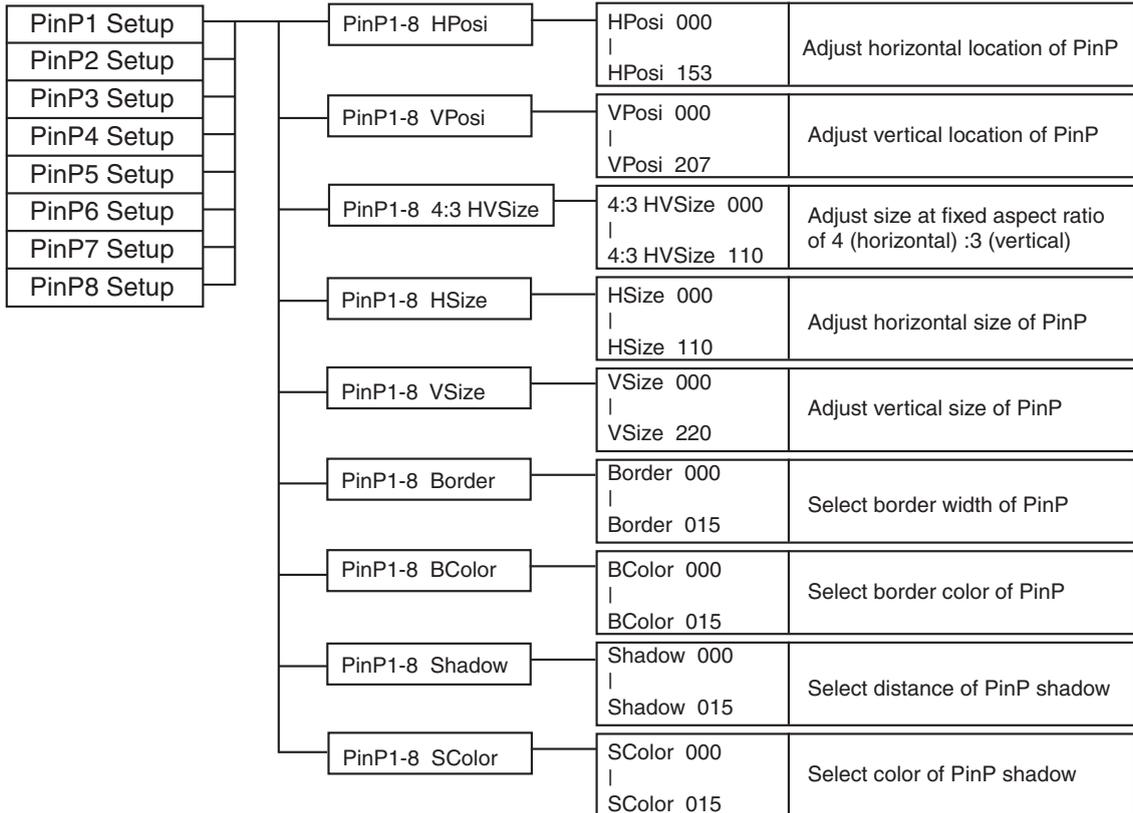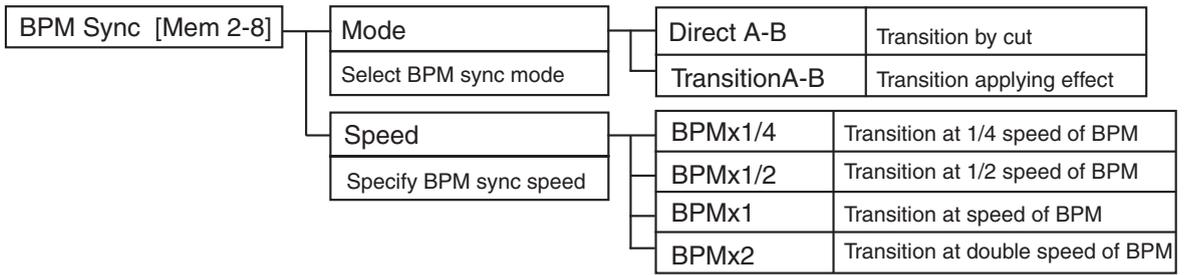

Menu List

Memory Edit

Copy Mem1->Mem2 Copy Mem8->Mem8	Copy the contents of the selected memory dial setting to another number
Copy Mem1->All	Copy the contents of the selected memory dial setting to all numbers
Exchange Mem1->Mem2 Exchange Mem8->Mem8	Exchange the contents of the selected memory dial setting with another number

MIDI Setup

MIDI Tx Channel	1 - 16	MIDI transmit channel setting
MIDI Rx Channel	1 - 16/OFF	MIDI receive channel settings
MIDI Out/Thru Switch	Out/Thru	MIDI out/thru setting
V-LINK Switch	Off/On	V-LINK on/off setting
Note Mode On/Off	Off/On	Note mode on/off setting
Device ID	0x00 - 0x1f	Device ID No. setting
Effects-A1 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.A effect button 1
Effects-A2 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.A effect button 2
Effects-A3 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.A effect button 3
Effects-A4 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.A effect button 4
Effects-B1 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.B effect button 1
Effects-B2 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.B effect button 2
Effects-B3 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.B effect button 3
Effects-B4 Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates Ch.B effect button 4
Video Fader Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the video fader
Transition Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the transition effect
Transformer-A Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the Transformer-A button
Transformer-B Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the Transformer-B button
BPM/Sync Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the BPM/SYNC button
Transition Time Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that controls the duration of the transition effect
Output Fade Assign	OFF/CC 01 - CC 95/ ChAftTt/PitchBD	MIDI message that operates the output fader

Utility	V-4 Mode	Normal Mode	Operate in Normal mode
		Presen Mode	Operate in Presentation mode
	Memory Protect	Off	Memory protect is off
		On	Memory protect is on
	Video Sync Threshold	-048 +079	Adjust video synchronization sensitivity
	VideoA Bright Adjust	-060 +061	Adjust the brightness of channel A
	VideoA Color Adjust	-010 +011	Adjust color of channel A
	VideoA Hue Adjust	-125 +126	Adjust hue of channel A
	VideoB Bright Adjust	-060 +061	Adjust the brightness of channel B
	VideoB Color Adjust	-010 +011	Adjust color of channel B
	VideoB Hue Adjust	-125 +126	Adjust hue of channel B
	Video Horizontal Locate	-015 +016	Adjust horizontal location of video output
	Video Vertical Locate	-015 +016	Adjust vertical location of video output
	Video Display Range H	000 080	Adjust width (horizontal) of video output
	Video Display Range V	000 080	Adjust height (vertical) of video output
	Video Out Black Level	0 IRE 7.5IRE	Set black level setup to either 0% or 7.5%
	Video Fader Mode	Normal	Use full range of the video fader
		Quick	Use only the central range of the video fader
	Video Fader Curve	A B C	Change the curve of the video fader
	Video Fader Calibrate A	Calibrate the channel A of the video fader	
Video Fader Calibrate B	Calibrate the channel B of the video fader		
Input Select Delay Time	000 030	Specify the transition time when the video is operated	

Menu List

Utility	OutFade White Level	000 255	Specify the white level of the output fader
	OutFade Black Level	000 255	Specify the black level of the output fader
	Preview Display Mode	No Display	Turn off the preview display
		Mode 1 Mode 2 Mode 3	Specify the mode of the preview display
		Preview Switch Pattern	Manual
	Preview Switch Pattern	Always-1 Always-2 Always-3 Always-4 Always-Out	Fix the preview output to show inputs 1-4 or the output
		Auto 1-2 Auto 1-3 Auto 1-4 Auto 1-Out	Automatically switch the preview output
		Preview Auto Speed	000 009
	Preview Signal Check	Off	Turn off preview checking
		On	Turn on preview checking
	Preview No Signal Color	Cyan Magenta	Specify the preview output color when there is no signal
	No Signal Blueback	Off	Turn off blue back output when there is no signal
		On	Turn on blue back output when there is no signal
OSD Horizontal Locate	-015 +016	Adjust horizontal location of on-screen display	
OSD Vertical Locate	-005 +006	Adjust vertical location of on-screen display	
Color Bar Out	Off	Turn off color bar output	
	On	Turn on color bar output	

Factory Preset	Return all settings to the factory-set condition
----------------	--

Main specifications

Video format

NTSC or PAL (ITU601)

Video sampling rate

13.5 MHz, 4:2:2 (Y: B-Y:R-Y), 8-bit

Video input

S-video: 4-pin mini DIN type x 2 jacks (inputs 1 or 2)

Video (composite): RCA pin type x 4 (inputs 1-4; however if S-video is simultaneously input to 1/2, S-video takes priority)

Video output

S-video: 4-pin mini DIN type x 1 jack

Video (composite): RCA pin type x 2 jacks

Preview output

Video (composite): RCA pin type x 1 jack

Input level and impedance

S-video output: luminance signal: 1 Vp-p, 75 ohm; chrominance signal: 0.286 mVp-p, 75 ohm (NTSC), 0.3 mVp-p, 75 ohm (PAL)

Video (composite) output: 1 Vp-p, 75 ohm

Output level and impedance

S-video output: luminance signal: 1 Vp-p, 75 ohm; chrominance signal: 0.286 mVp-p, 75 ohm (NTSC), 0.3 mVp-p, 75 ohm (PAL)

Video (composite) output (final output and preview output): 1 Vp-p, 75 ohm

Control connectors

MIDI IN: 5-pin DIN type

MIDI OUT: 5-pin DIN type

Transition effects

Mix(Dissolve)

Wipe: hard edge wipe, soft edge wipe, multi-border wipe (more than 200 types)

Video effects

strobe, still, negative, colorize, solarization, mirror, multi, shake

Compositing effects

Picture-in-picture, luminance key, chroma key

Power supply

Dedicated AC adaptor

Current consumption

1500 mA

Main specifications

Dimensions

225 mm (W) x 295 mm (D) x 105 mm (H)

Weight

2.3 kg

Included items

AC adaptor


Owner's manual

T-bar attachment screws x 4 pcs. (spares)

Examples of using the V-4

Using the V-4 at an event

Here's an example of using the V-4 to switch between multiple live images and sources such as a video tape, as might be used at events such as exhibitions or performances.

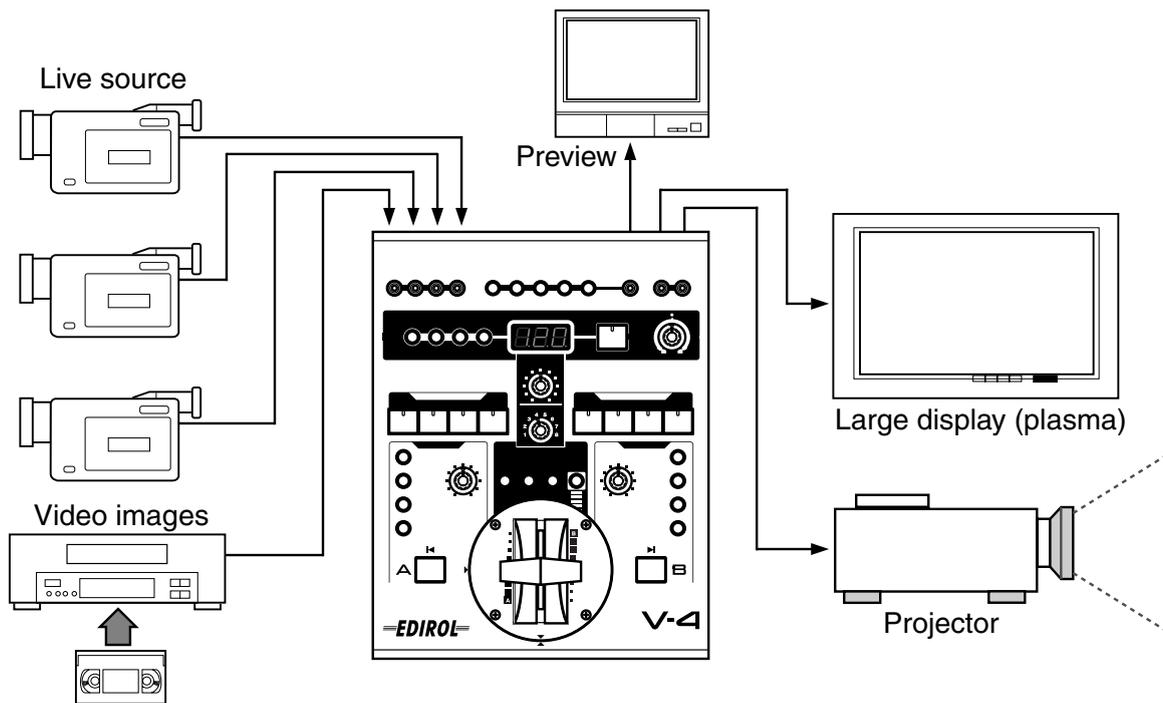

Advantages of using the V-4


- Two images (two live images, or live video + recorded video) can be mixed
- Use picture-in-picture to display two screens simultaneously

* For details on switching images, refer to p. 23.

* For details on using picture-in-picture, refer to p. 26.

Using the V-4 at a concert or VJ performance

You can project the output image on a large screen such as the stage backdrop, and create a video performance that follows the music. Images from the DV-7PR can be mixed with multiple live images.

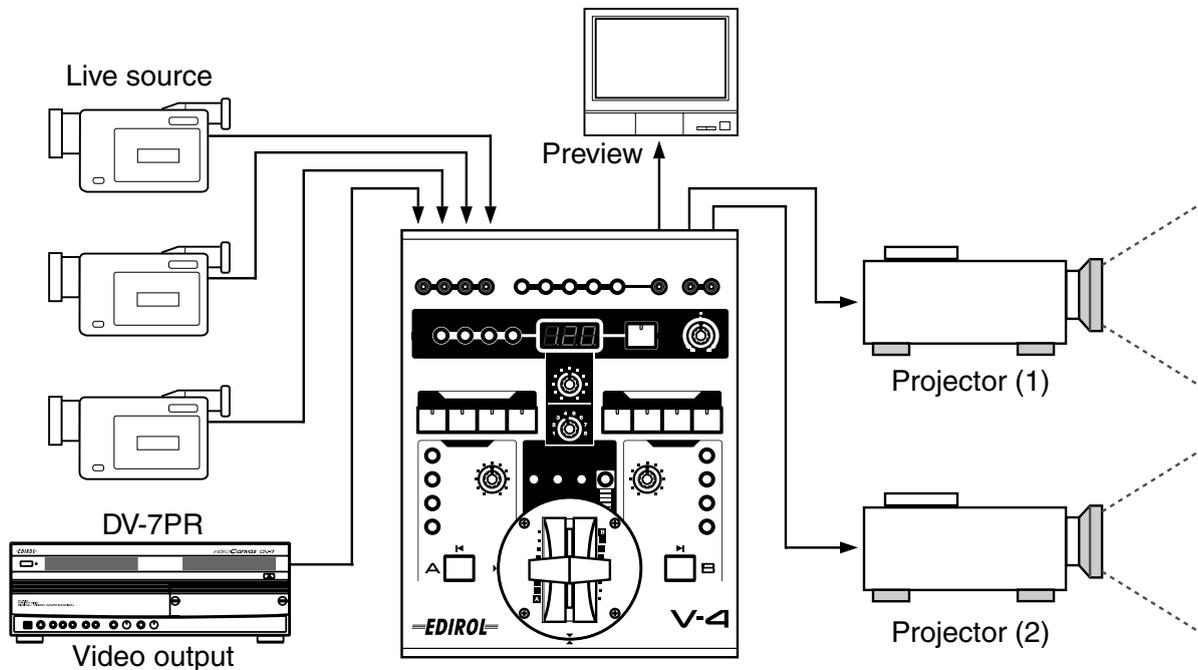

Advantages of using the V-4

- Use BPM/TAP to switch images in time with the music
- Use numerous effects such as mirror, strobe, or colorize

* For details on using BPM/TAP, refer to p. 37.


* For details on using strobe, refer to p. 34.

* For details on using colorize, refer to p. 32.

Using the V-4 at a presentation

You can use the V-4 to switch between live images and VTR/DVD output, or add images/text from a personal computer.

* If you are using a personal computer that does not have a video output, you will need to use a scan converter to convert the computer's VGA output into a video signal.

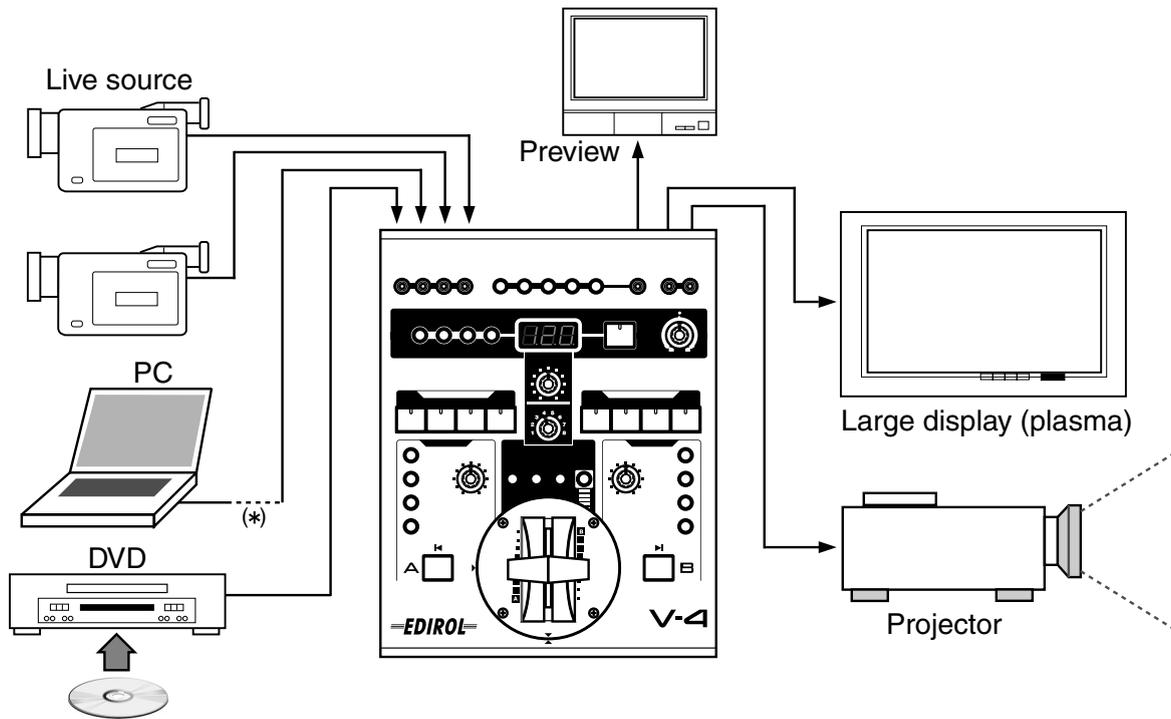

Advantages of using the V-4

- Use picture-in-picture to display two screens simultaneously
- Use luminance key to superimpose text or graphics on the image
- Easy operation in Presentation mode


* For details on using picture-in-picture, refer to p. 26.

* For details on using luminance key, refer to p. 28.

* For details on Presentation mode, refer to p. 68.

Using BGV output with a musical performance (example of using V-LINK)

Background video (BGV) can be controlled while you play a musical instrument. You can control images without affecting the normal capabilities of the instrument. In particular if you are using a device that supports Roland/Edirol V-LINK (**V-LINK**), you can press a single button to quickly and easily make settings for controlling images.

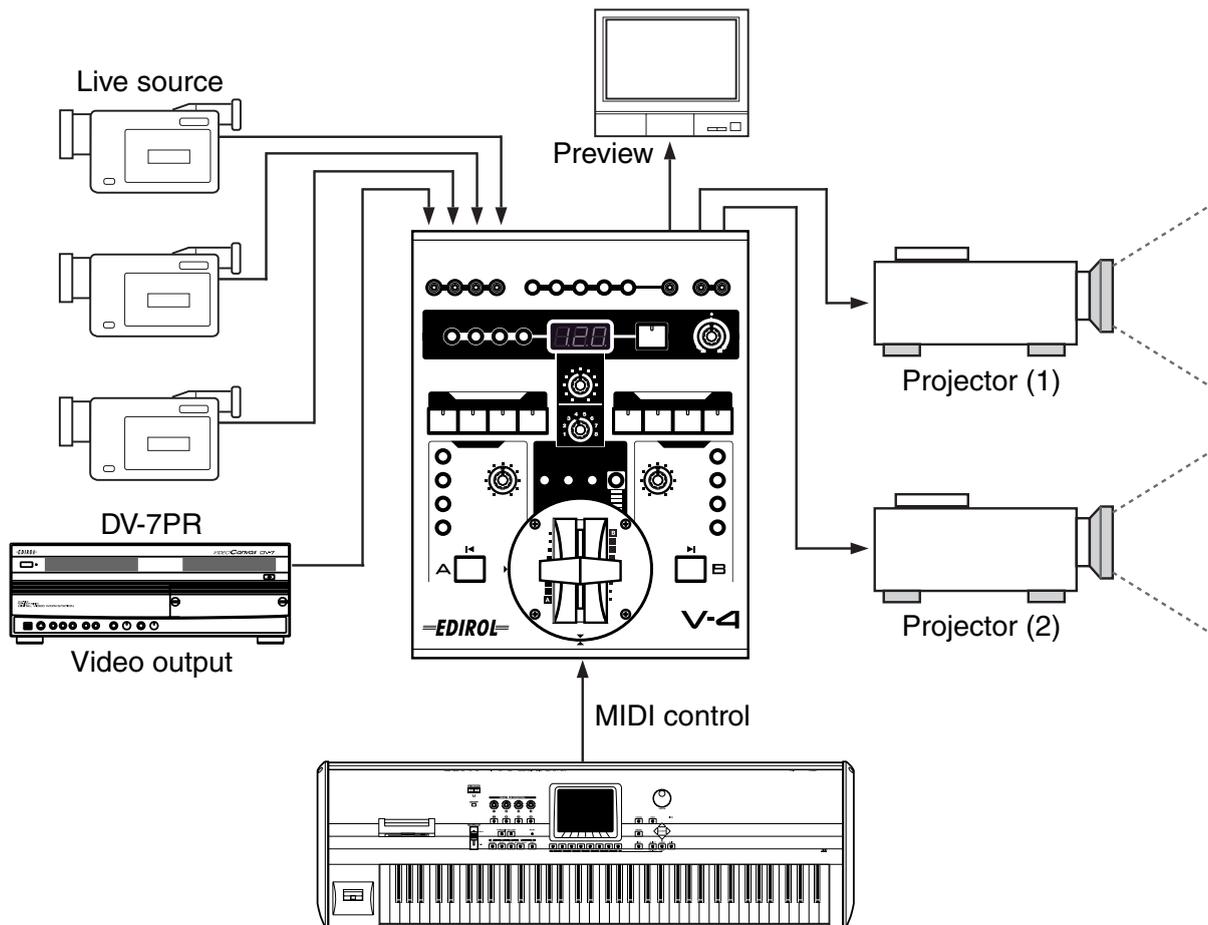

Advantages of using the V-4

- When used in conjunction with the DV-7PR, a single instrument can control the live video and the video from the DV-7PR
- Video effects can be turned on/off from the musical instrument
- If you are using a V-LINK compatible device, MIDI settings can be made very simply

* For details on controlling the V-4 from an external device, refer to p. 57.

MIDI implementation

Model: V-4 Version:1.000 Date:Dec.10.2002

Symbol	Meaning	Range
n:	MIDI channel	0H-FH (ch.1-ch.16)
vv:	control value, velocity value, etc.	00H-7FH (0-127)
	only in the case of Note-on Velocity	01H-7FH (1-127)
kk:	note number	00H-7FH (0-127)
xx:	on/off switch	00H-3FH (0-63): OFF 40H-7FH (64-127): ON

1. MIDI messages received at MIDI IN

* If MIDI Thru is ON, MIDI messages received at MIDI IN will be retransmitted without change from MIDI OUT.

■ Channel voice messages

● Note-on

Status	2nd byte	3rd byte
9nH	kkH	vvH

- * Received only if Note Mode is ON.
- * The input of each channel is selected. Ignored if a non-selectable note message is received.
- * When Presentation mode is ON, the transition time will change according to the velocity value (channel A only).
- * Inputs correspond to note numbers as follows.

Note No.	Input
24H	A Ch, 1
26H	A Ch, 2
28H	A Ch, 3
29H	A Ch, 4
2BH	B Ch, 1
2DH	B Ch, 2
2FH	B Ch, 3
30H	B Ch, 4

● Control Change

* By making settings in MIDI Setup, you can use these messages to control a wide variety of things. The control changes that can be used are CC#1-5, 7-31, and 64-95. For details on the factory settings, refer to "Settings Transmitted/Received Using MIDI" (p. 94).

○ Bank Select (controller numbers 0, 32)

Status	2nd byte	3rd byte
BnH	00H	mmH
BnH	20H	llH

mm, ll= bank number:00 00H - 7F 7FH(bank, 1 - bank, 16384)

- * Bank Select LSB will be ignored.
- * Processing of a Bank Select message is suspended until a subsequent Program Change is received.
- * If a non-selectable Bank Select is received, it will be ignored, and only the Program Change will be received.
- * Bank Select data that is received will be maintained until a subsequent Bank Select is received.
- * These messages select inputs for each channel, set memories, and specify how the sub-channel is mixed in Presentation mode.

Controls correspond to bank select messages as follows.

Bank Select MSB/LSB	Program No.	Control
50H/00H	00H - 07H	MEMORY 1-8
00H/00H	00H - 03H	A ch, INPUT 1-4
01H/00H	00H - 03H	B ch, INPUT 1-4

○ Modulation (controller number 1)

Status	2nd byte	3rd byte
BnH	01H	vvH

○ Breath-type (controller number 2)

Status	2nd byte	3rd byte
BnH	02H	vvH

○ Foot-type (controller number 4)

Status	2nd byte	3rd byte
BnH	04H	vvH

○ Portamento Time (controller number 5)

Status	2nd byte	3rd byte
BnH	05H	vvH

○ Volume (controller number 7)

Status	2nd byte	3rd byte
BnH	07H	vvH

○ Balance (controller number 8)

Status	2nd byte	3rd byte
BnH	08H	vvH

○ Panpot (controller number 10)

Status	2nd byte	3rd byte
BnH	0AH	vvH

○ Expression (controller number 11)

Status	2nd byte	3rd byte
BnH	0BH	vvH

○ Effect Control 1 (controller number 12)

Status	2nd byte	3rd byte
BnH	0CH	vvH

○ Effect Control 2 (controller number 13)

Status	2nd byte	3rd byte
BnH	0DH	vvH

○ General Purpose Controllers 1-4 (controller numbers 16-19)

Status	2nd byte	3rd byte
BnH	10H - 13H	vvH

○ Hold 1 (controller number 64)

Status	2nd byte	3rd byte
BnH	40H	xxH

○ Portamento (controller number 65)

Status	2nd byte	3rd byte
BnH	41H	xxH

○ Sostenuto (controller number 66)

Status	2nd byte	3rd byte
BnH	42H	xxH

○ Soft (controller number 67)

Status	2nd byte	3rd byte
BnH	43H	xxH

○ Legato (controller number 68)

Status	2nd byte	3rd byte
BnH	44H	xxH

○ Hold 2 (controller number 69)

Status	2nd byte	3rd byte
BnH	45H	xxH

○ Sound Controllers 1-10 (controller numbers 70-79)

Status	2nd byte	3rd byte
BnH	46 - 4FH	vvH

MIDI implementation

○ General Purpose Controllers 5–8 (controller numbers 80–83)

Status	2nd byte	3rd byte
BnH	50 - 53FH	vvH

○ Portamento Control (controller number 84)

Status	2nd byte	3rd byte
BnH	54H	vvH

○ Effect Depth 2-5 (controller number 92-95)

Status	2nd byte	3rd byte
BnH	5C - 5FH	vvH

● Program Change

Status	2nd byte
CnH	ppH

pp= program number

- * These messages select channel A and channel B inputs, memory settings, and how the sub channel is mixed in Presentation mode. For details, refer to the section on Bank Select.
- * If a non-selectable Program Change is received, it will be ignored.

● Channel Pressure

Status	2nd byte
DnH	vvH

- * Just as for Control Change messages, you can make settings in MIDI Setup to use Channel Pressure messages to control a wide variety of things. For details on the factory settings, refer to “Settings Transmitted/Received Using MIDI” (p. 94).

● Pitch Bend Change

Status	2nd byte	3rd byte
EnH	llH	mmH

mm, ll= pitch bend value:00 00H - 40 00H - 7F 7FH (-8192 - 0 →+8191)

- * Just as for Control Change messages, you can make settings in MIDI Setup to use Pitch Bend Change messages to control a wide variety of things. For details on the factory settings, refer to “Settings Transmitted/Received Using MIDI” (p. 94).

■ System realtime messages

● Active Sensing

Status
FEH

- * Once an Active Sensing message is received, the system will begin monitoring the interval between all subsequent messages. If there is an interval of greater than approximately 400 ms between messages while monitoring is occurring, the system will perform reception error processing and will then stop monitoring the message interval.

● Timing Clock

Status
F8H

- * Used to synchronize BPM SYNC.

● Start

Status
FAH

- * Specifies the beginning of the beat for BPM SYNC.

● Continue

Status
FBH

- * Specifies the beginning of the beat for BPM SYNC.

■ System exclusive messages

Status	Data bytes	Status
F0H	iiH, ddH,...,eeH	F7H

F0H: System Exclusive Message status

ii= ID number: An ID number (manufacturer ID) that indicates the manufacturer to which the exclusive message belongs. Roland’s manufacturer ID is 41H. ID numbers 7EH and 7FH are used for Universal Non-realtime Messages (7EH) and Universal Realtime Messages (7FH) to extend the MIDI specification.

dd, ... ee= data: 00H–7FH (0–127)

F7H: EOX (End Of Exclusive)

● Data Set 1 (DT1)

This is the message that transfers actual data, and is used to specify data for a device.

Status	Data bytes	Status
F0H	41H, dev, 00H, 5BH, 12H, aaH, bbH, ccH, ddH,...,eeH, sum	F7H

Byte	Explanation
F0H	Exclusive status
41H	ID number (Roland)
dev	Device ID (dev: 00H–1FH, factory setting is 00H)
00H	Upper byte of model ID (V-4, V-LINK message is 00H)
5BH	Lower byte of model ID (V-4, V-LINK message is 51H)
12H	Command ID (DT1)
aaH	Upper byte of address
bbH	Address
ccH	Address
ddH	Data: the actual data to be transmitted. Multi-byte data is transmitted in the order of the address.
:	
eeH	Data
sum	Checksum
F7H	EOX (End Of Exclusive)

- * For details on setting the address, size, and checksum, refer to “Exclusive message examples and checksum calculation” (p. 94).
- * Data that exceeds 256 bytes must be divided into packets of 256 bytes or less for transmission. If a subsequent “Data Set 1” message is transmitted, an interval of at least 20 ms must be left between packets.

2. MIDI messages transmitted from MIDI OUT

- * If MIDI Thru is ON, MIDI messages received at MIDI IN are re-transmitted without change from MIDI OUT.
- * If MIDI Thru is ON, messages from the V-4 itself will not be transmitted.

■ Channel voice messages

● Control Change

- * The messages assigned in MIDI Setup will be transmitted when you operate the panel. The control changes that can be used are CC#1-5, 7-31, and 64-95. For the factory settings, refer to "Settings Transmitted/Received Using MIDI" (p. 94).

○ Bank Select (controller numbers 0, 32)

Status	2nd byte	3rd byte
BnH	00H	mmH
BnH	20H	llH

mm, ll= bank number:

- * When you select channel A or channel B inputs, make memory settings, or specify how sub-channels are mixed in Presentation mode, these messages will be transmitted in conjunction with Program Changes.
- * The following controls correspond to each Bank Select message.

Bank Select MSB/LSB	Program No.	Control
50H/00H	00H - 07H	MEMORY 1-8
00H/00H	00H - 03H	A ch, INPUT 1-4
01H/00H	00H - 03H	B ch, INPUT 1-4

○ Modulation (controller number 1)

Status	2nd byte	3rd byte
BnH	01H	vvH

○ Breath-type (controller number 2)

Status	2nd byte	3rd byte
BnH	02H	vvH

○ Foot-type (controller number 4)

Status	2nd byte	3rd byte
BnH	04H	vvH

○ Portamento Time (controller number 5)

Status	2nd byte	3rd byte
BnH	05H	vvH

○ Volume (controller number 7)

Status	2nd byte	3rd byte
BnH	07H	vvH

○ Balance (controller number 8)

Status	2nd byte	3rd byte
BnH	08H	vvH

○ Panpot (controller number 10)

Status	2nd byte	3rd byte
BnH	0AH	vvH

○ Expression (controller number 11)

Status	2nd byte	3rd byte
BnH	0BH	vvH

○ Effect Control 1 (controller number 12)

Status	2nd byte	3rd byte
BnH	0CH	vvH

○ Effect Control 2 (controller number 13)

Status	2nd byte	3rd byte
BnH	0DH	vvH

○ General Purpose Controllers 1-4 (controller numbers 16-19)

Status	2nd byte	3rd byte
BnH	10H - 13H	vvH

○ Hold 1 (controller number 64)

Status	2nd byte	3rd byte
BnH	40H	xxH

○ Portamento (controller number 65)

Status	2nd byte	3rd byte
BnH	41H	xxH

○ Sostenuto (controller number 66)

Status	2nd byte	3rd byte
BnH	42H	xxH

○ Soft (controller number 67)

Status	2nd byte	3rd byte
BnH	43H	xxH

○ Legato (controller number 68)

Status	2nd byte	3rd byte
BnH	44H	xxH

○ Hold 2 (controller number 69)

Status	2nd byte	3rd byte
BnH	45H	xxH

○ Sound Controllers 1-10 (controller numbers 70-79)

Status	2nd byte	3rd byte
BnH	46 - 4FH	vvH

○ General Purpose Controllers 5-8 (controller numbers 80-83)

Status	2nd byte	3rd byte
BnH	50 - 53FH	vvH

○ Portamento Control (controller number 84)

Status	2nd byte	3rd byte
BnH	54H	vvH

○ Effect Depth 2-5 (controller number 92-95)

Status	2nd byte	3rd byte
BnH	5C - 5FH	vvH

● Program Change

Status	2nd byte
CnH	ppH

pp= program number:00H - 7FH (prog.1 - prog.128)

- * When you select channel A or channel B inputs, make memory settings, or specify how sub-channels are mixed in Presentation mode, these messages will be transmitted in conjunction with Bank Select messages. For details, refer to the section on Bank Select.

● Channel Pressure

Status	2nd byte
DnH	vvH

- * Just as for Control Changes, the messages assigned in MIDI Setup will be transmitted when you operate the panel. For the factory settings, refer to "Settings Transmitted/Received Using MIDI" (p. 94).

● Pitch Bend Change

Status	2nd byte	3rd byte
EnH	llH	mmH

mm, ll= pitch bend value:00 00H - 40 00H - 7F 7FH (-8192 - 0 --8191)

- * Just as for Control Changes, the messages assigned in MIDI Setup will be transmitted when you operate the panel. For the factory settings, refer to "Settings Transmitted/Received Using MIDI" (p. 94).

MIDI Implementation

3. Parameter Address Map

■3-1. V-4 (Model ID= 00H 5BH)

* Addresses marked by # are sent as two bytes; an upper nibble (upper 4 bits) and lower nibble (lower 4 bits).

Example) If the original data is channel B, 0BH is transmitted as the first byte. The next byte transmitted is 0CH. For reception, this is ignored if two bytes are not received together.

Start Address	Description
00H 00H 00H	System Common Preference Area (See 3-1-1)
01H 00H 00H	Fader Control Preference Area (See 3-1-2)
02H 00H 00H	Effects Control Preference Area (See 3-1-3)
03H 00H 00H	Reserved Area
12H 00H 00H	Fader Control Parameter Area (See 3-1-4)
13H 00H 00H	Effects Control Parameter Area (See 3-1-5)
14H 00H 00H	Reserved Area

3-1-1 System Common Preference

Address	Parameter Name	Sys Ex. Value	Meaning of Value
00H 00H 00H	MIDI Receive Channel	00H - 10H	1 - 16 ch., OFF

3-1-2 Fader Control Preference

Address	Parameter Name	Sys Ex. Value	Meaning of Value
#01H 10H 00H	Tx/Rx Setting (Transition Time)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#01H 10H 02H	Tx/Rx Setting (Video Fader)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#01H 10H 04H	Tx/Rx Setting (Transition Select)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#01H 10H 06H	Tx/Rx Setting (Transformer A)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#01H 10H 08H	Tx/Rx Setting (Transformer B)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#01H 10H 0AH	Tx/Rx Setting (Output Fade)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#01H 10H 0CH	Tx/Rx Setting (BPM sync)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF

3-1-3 Effects Control Preference

Address	Parameter Name	Sys Ex. Value	Meaning of Value
#02H 10H 00H	Tx/Rx Setting (A ch Effect 1)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#02H 10H 02H	Tx/Rx Setting (A ch Effect 2)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#02H 10H 04H	Tx/Rx Setting (A ch Effect 3)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#02H 10H 06H	Tx/Rx Setting (A ch Effect 4)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#02H 10H 08H	Tx/Rx Setting (B ch Effect 1)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#02H 10H 0AH	Tx/Rx Setting (B ch Effect 2)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#02H 10H 0CH	Tx/Rx Setting (B ch Effect 3)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#02H 10H 0EH	Tx/Rx Setting (B ch Effect 4)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF

3-2. V-LINK (Model ID= 00H 51H)

* Addresses marked by # are sent as two bytes; an upper nibble (upper 4 bits) and lower nibble (lower 4 bits).

Example) If the original data is channel B, 0BH is transmitted as the first byte. The next byte transmitted is 0CH. For reception, this is ignored if two bytes are not received together.

* If - is shown in the value field, the V-4 does not have a corresponding parameter. This will be ignored if received.

Start Address	Description
00H 00H 00H	DV-7PR Presenter Reserved Area
10H 00H 00H	V-LINK System Preference Area(See 3-2-1)
10H 10H 00H	V-LINK Clip Control Preference Area(See 3-2-2)
10H 20H 00H	V-LINK Effects Control Preference Area(See 3-2-3)
10H 30H 00H	V-LINK Reserved Area
11H 30H 00H	DV-7PR Presenter Reserved Area

3-2-1 System Common Preference

Address	Parameter Name	Sys Ex. Value	Meaning of Value
10H 00H 00H	V-LINK Enabled	00H - 01H	OFF, ON
10H 00H 01H	V-LINK MIDI Rx Channel (Clip)	00H - 10H	1-16 ch, OFF
10H 00H 02H	V-LINK MIDI Rx Channel (Color)	---	---
10H 00H 03H	V-LINK Note Message Enabled	00H - 01H	Note Mode : OFF, ON
10H 00H 04H	V-LINK Fast Control Enabled	---	---
10H 00H 05H	V-LINK MMC Control Mode	---	---
10H 00H 06H	V-LINK MTC Control Mode	---	---
10H 00H 07H	V-LINK Auto Mix Mode	00H - 01H	Presentation Mode : OFF, ON

3-2-2 Clip Control Preference

Address	Parameter Name	Sys Ex. Value	Meaning of Value
#10H 10H 00H	V-LINK Rx Setting (Playback Speed)	---	---
#10H 10H 02H	V-LINK Rx Setting (Dissolve Time)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Transition Time:Control Change Channel Press, Pitch Bend, OFF
#10H 10H 04H	V-LINK Rx Setting (Audio Level)	---	---
#10H 10H 06H	V-LINK Rx Setting (T-Bar Control)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Video Fader : Control Change, Channel Press, Pitch Bend, OFF
#10H 10H 08H	V-LINK Rx Setting (Dual Stream)	---	---
#10H 10H 0AH	V-LINK Reserved	---	---
#10H 10H 0CH	V-LINK Reserved	---	---
#10H 10H 0EH	V-LINK Reserved	---	---
#10H 10H 10H	V-LINK Rx Setting (Transition Select)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#10H 10H 12H	V-LINK Rx Setting (Transformer A)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#10H 10H 14H	V-LINK Rx Setting (Transformer B)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF
#10H 10H 16H	V-LINK Rx Setting (BPM Sync)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF

3-2-3 Color Control Preference

Address	Parameter Name	Sys Ex. Value	Meaning of Value
#10H 20H 00H	V-LINK Rx Setting (Color Cb)	---	---
#10H 20H 02H	V-LINK Rx Setting (Color Cr)	---	---
#10H 20H 04H	V-LINK Rx Setting (Brightness)	---	---
#10H 20H 06H	V-LINK Rx Setting (VFX A1)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Ach Effect 1 : Control Change, Channel Press, Pitch Bend, OFF
#10H 20H 08H	V-LINK Rx Setting (VFX A2)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Ach Effect 2 : Control Change, Channel Press, Pitch Bend, OFF
#10H 20H 0AH	V-LINK Rx Setting (VFX A3)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Ach Effect 3 : Control Change, Channel Press, Pitch Bend, OFF
#10H 20H 0CH	V-LINK Rx Setting (VFX A4)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Ach Effect 4 : Control Change, Channel Press, Pitch Bend, OFF
#10H 20H 0EH	V-LINK Reserved	---	---
#10H 20H 10H	V-LINK Reserved	---	---
#10H 20H 12H	V-LINK Reserved	---	---
#10H 20H 14H	V-LINK Reserved	---	---
#10H 20H 16H	V-LINK Rx Setting (VFX B1)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Bch Effect 1 : Control Change, Channel Press, Pitch Bend, OFF
#10H 20H 18H	V-LINK Rx Setting (VFX B2)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Bch Effect 2 : Control Change, Channel Press, Pitch Bend, OFF
#10H 20H 1AH	V-LINK Rx Setting (VFX B3)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Bch Effect 3 : Control Change, Channel Press, Pitch Bend, OFF
#10H 20H 1CH	V-LINK Rx Setting (VFX B4)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Bch Effect 4 : Control Change, Channel Press, Pitch Bend, OFF
#10H 20H 1EH	V-LINK Reserved	---	---
#10H 20H 20H	V-LINK Rx Setting (Output Fader)	01H-05H, 07H-1FH, 40H-5FH, D0H, E0H, EFH	Control Change, Channel Press, Pitch Bend, OFF

4. Appendices

Decimal and hexadecimal conversion table

(The letter "H" follows numbers in hexadecimal notation.)

MIDI uses hexadecimal notation in 7-bit units to indicate data values and addresses and sizes within an exclusive message. Hexadecimal and decimal numbers correspond as follows.

Deci	Hexa	Deci	Hexa	Deci	Hexa	Deci	Hexa
0	00H	32	20H	64	40H	96	60H
1	01H	33	21H	65	41H	97	61H
2	02H	34	22H	66	42H	98	62H
3	03H	35	23H	67	43H	99	63H
4	04H	36	24H	68	44H	100	64H
5	05H	37	25H	69	45H	101	65H
6	06H	38	26H	70	46H	102	66H
7	07H	39	27H	71	47H	103	67H
8	08H	40	28H	72	48H	104	68H
9	09H	41	29H	73	49H	105	69H
10	0AH	42	2AH	74	4AH	106	6AH
11	0BH	43	2BH	75	4BH	107	6BH
12	0CH	44	2CH	76	4CH	108	6CH
13	0DH	45	2DH	77	4DH	109	6DH
14	0EH	46	2EH	78	4EH	110	6EH
15	0FH	47	2FH	79	4FH	111	6FH
16	10H	48	30H	80	50H	112	70H
17	11H	49	31H	81	51H	113	71H
18	12H	50	32H	82	52H	114	72H
19	13H	51	33H	83	53H	115	73H
20	14H	52	34H	84	54H	116	74H
21	15H	53	35H	85	55H	117	75H
22	16H	54	36H	86	56H	118	76H
23	17H	55	37H	87	57H	119	77H
24	18H	56	38H	88	58H	120	78H
25	19H	57	39H	89	59H	121	79H
26	1AH	58	3AH	90	5AH	122	7AH
27	1BH	59	3BH	91	5BH	123	7BH
28	1CH	60	3CH	92	5CH	124	7CH
29	1DH	61	3DH	93	5DH	125	7DH
30	1EH	62	3EH	94	5EH	126	7EH
31	1FH	63	3FH	95	5FH	127	7FH

* Decimal expressions used for MIDI channel, bank select, and program change are 1 greater than the decimal value shown in the above table.

* Hexadecimal values in 7-bit units can express a maximum of 128 levels in one byte of data. If the data requires greater resolution, two or more bytes are used. For example, a value indicated by a hexadecimal expression in two 7-bit bytes "aa bb" would be "aa x 128 + bb."

<Example1> What is the decimal equivalent of 5AH?

From the above table, 5AH = 90.

<Example2> What is the decimal expression of the hexadecimal

expression in two 7-bit bytes "12H 34H"?

From the above table, 12H = 18, and 34H = 52. Thus,

$18 \times 128 + 52 = 2356$

Examples of MIDI messages

<Example1> 92H 33H 5F

9n is the Note-on status, and n is the MIDI channel number.

2H = 2, 3EH = 62, and 5FH = 95. Thus, this is a Note-on message of MIDI CH= 3, note number 62 (note name D4), and velocity 95.

<Example2> CEH 49H

CnH is the Program Change status, and n is the MIDI channel number.

EH = 14, and 49H = 73. Thus, this is a Program Change message of MIDI CH= 15, program number 74 (in the GS sound map, Flute).

<Example3> EAH 00H 28H

EnH is the Pitch Bend Change status, and n is the MIDI channel number.

The second byte (00H=0) is the lower byte of the pitch bend value, and the third byte (28H=40) is the upper byte. Since the pitch bend value is a signed value with $40H\ 00H (= 64 \times 128 + 0 = 8192)$ corresponding to 0, the pitch bend value in this case is:

$28H\ 00H - 40H\ 00H = 40 \times 128 + 0 - (64 \times 128 + 0) = 5120 - 8192 = -3072$

If the Pitch Bend Sensitivity is set to two semitones, a pitch change of -8192 (00H 00H) would change the pitch by -200 cents, so in this case, a pitch bend of $-200 \times (-3072) / (-8192) = -75$ cents is being designated on MIDI channel 11.

Exclusive message examples and checksum calculation

Roland exclusive messages (RQ1, DT1) contain a checksum following the data (after F7), which can be used to check whether the message was received correctly. The checksum value is derived from the address and data (or size) of the transmitted exclusive message.

Calculating the checksum ('H' is appended to hexadecimal numbers)

The checksum is a value that produces a lower 7 bits of zero when the address, size, and checksum itself are summed. If the exclusive message to be transmitted has an address of aaH bbH ccH and the data is ddH eeH, the actual calculation would be as follows:

$aa + bb + cc + dd + ee = \text{sum}$

$\text{sum} / 128 = \text{quotient}$ Remainder

$128 - \text{remainder} = \text{checksum}$

<Example> Assigning Modulation as the control change that controls the transition effect time for the Tx/Rx Setting

From the "Parameter address map," the Tx/Rx Setting transition effect time has a start address of 01H 10H 00H, and the Modulation control change has a parameter value 01H. Thus,

F0H 41H 10H 00H 5BH 12H 01H 10H 00H 00H 01H ??H 7FH

(1) (2) (3) (4) (5) (6) (7) (8) (9)

(1) Exclusive status (2) ID number (Roland)

(3) Device ID (16) (4) Model ID (V-4)

(5) Command ID (DT1) (6) Address

(7) Data (8) Checksum

(9) EOX

Next, we calculate the checksum.

$01H + 10H + 00H + 00H + 01H = 1 + 16 + 0 + 0 + 1 = 18$ (sum)

18 (sum) / $128 = 0$ (quotient) $\dots 18$ (remainder)

Checksum = $128 - 18$ (remainder) = $110 = 6EH$

Thus, the message to be transmitted is F0H 41H 10H 00H 5BH 12H 01H 10H 00H 00H 01H 6EH 7FH

Settings Transmitted/Received Using MIDI

MIDI Tx Channel

This sets the MIDI transmitting channel of V-4.

With the factory settings this is assigned to 1.

Values are 1-16.

MIDI Rx Channel

This sets the MIDI receiving channel of V-4.

With the factory settings this is assigned to 1.

Values are 1-17, corresponding to 1-16 and OFF.

Note Mode

This sets whether the unit switch the input channel or not on receipt of Note On message.

With the factory settings this is assigned to OFF.

Values are 0-1, corresponding to OFF and ON.

Transition Time

This sets the duration of transition effects in Presentation mode.

With the factory settings this is assigned to CC#7 (Volume).

The values are 0-127, corresponding to 0.0 sec-4.0 sec.

A ch effect 1

This specifies effect 1 on/off and the parameter for channel A in Normal mode or the base channel in Presentation mode.

With the factory settings this is unassigned.

Values are 0, 1-127, corresponding to OFF, ON:0-Max.

A ch effect 2

This specifies effect 2 on/off and the parameter for channel A in Normal mode or the base channel in Presentation mode.

With the factory settings this is unassigned.

Values are 0, 1-127, corresponding to OFF, ON:0-Max.

●A ch effect 3

This specifies effect 3 on/off and the parameter for channel A in Normal mode or the base channel in Presentation mode.

With the factory settings this is unassigned.

Values are 0, 1-127, corresponding to OFF, ON:0-Max.

●A ch effect 4

This specifies effect 4 on/off and the parameter for channel A in Normal mode or the base channel in Presentation mode.

With the factory settings this is unassigned.

Values are 0, 1-127, corresponding to OFF, ON:0-Max.

●B ch effect 1

This specifies effect 1 on/off and the parameter for channel B in Normal mode.

With the factory settings this is unassigned.

Values are 0, 1-127, corresponding to OFF, ON:0-Max.

●B ch effect 2

This specifies effect 2 on/off and the parameter for channel B in Normal mode.

With the factory settings this is unassigned.

Values are 0, 1-127, corresponding to OFF, ON:0-Max.

●B ch effect 3

This specifies effect 3 on/off and the parameter for channel B in Normal mode.

With the factory settings this is unassigned.

Values are 0, 1-127, corresponding to OFF, ON:0-Max.

●B ch effect 4

This specifies effect 4 on/off and the parameter for channel B in Normal mode.

With the factory settings this is unassigned.

Values are 0, 1-127, corresponding to OFF, ON:0-Max.

●Transition Select

Selects the type of transition.

With the factory settings this is unassigned.

Values are 0-2, corresponding to Transition 1, Transition 2 and Transition 3.

●Transformer A

Turns channel A TRANSFORMER on/off.

With the factory settings this is unassigned.

Values are 0-63 and 64-127, corresponding to OFF and ON.

●Transformer B

Turns channel B TRANSFORMER on/off.

With the factory settings this is unassigned.

Values are 0-63 and 64-127, corresponding to OFF and ON.

●Output Fade

Controls OUTPUT FADE.

With the factory settings this is unassigned.

Values are 0 - 64 - 127, corresponding to Black - Center - White.

●BPM Sync

Switches BPM SYNC on/off.

With the factory settings this is unassigned.

Values are 0-63 and 64-127, corresponding to OFF and ON.

●Video Fader

Controls the VIDEO FADER.

With the factory settings this is assigned to CC#11 (Expression).

Values are 0-127, corresponding to A (base)-B (sub).

■Factory Setting of V-LINK

The factory setting of V-LINK (receipt of V-LINK ON message only) is as follows.

Parameter	Assign	Value
V-4 Mode	-	Presentation Mode
Note Mode	-	OFF
Rx Channel	-	1
Tx Channel	-	1
Input Select	-	Ach : 1 Bch : 2
Memory Select	-	1
Transition Time	CC#5 (Portament Time)	0.0 sec
A ch Effect 1	OFF	OFF
A ch Effect 2	OFF	OFF
A ch Effect 3	OFF	OFF
A ch Effect 4	OFF	OFF
B ch Effect 1	OFF	OFF
B ch Effect 2	OFF	OFF
B ch Effect 3	OFF	OFF
B ch Effect 4	OFF	OFF
Transition Select	OFF	1
Transformer A	OFF	OFF
Transformer B	OFF	OFF
Output Fade	OFF	Center
BPM Sync	OFF	OFF
Video Fader	CC#11 (Expression)	A 100%

* When V-LINK is off, V-LINK message will be ignored.

* The changes of setting done while V-LINK is on will not be saved.

* When V-LINK is turned off, the setting before V-LINK turned on will be recalled.

MIDI Implementation

4-Channel Video Mixer

Model V-4

MIDI Implementation Chart

Date : Dec. 13, 2002

Version : 1.00

Function...	Transmitted	Recognized	Remarks
Basic Channel Default Changed	1-16 1-16	1-16 1-16	
Mode Default Messages Altered	Mode 3 X *****	Mode 3 X	
Note Number : True Voice	X X	O 36, 38, 40, 41, 43, 45, 47, 48	Operational only when Note Mode is ON
Velocity Note ON Note OFF	X X	O X	Operational only when Presentation Mode is ON
After Touch Key's Ch's	X O	X O	Control Various Values
Pitch Bend	O	O	Control Various Values
Control Change 0,32 1-5 7-31 64-95	O O O O	O O O O	Bank Select Control Various Values Control Various Values Control Various Values
Program Change : True #	O 0 - 3, 0 - 7	O 0 - 3, 0 - 7	Input select : 1-4 Memory Select : 1-8
System Exclusive	X	O	Control Various Values, V-LINK
Common :Song Pos :Song Sel :Tune	X X X	X X X	
Real-Time :Clock :Commands	X X	O O	Start, Continue
Others :All sound OFF :Reset all controller :Local ON/OFF :All Notes OFF :Active Sense :Reset	X X X X O X	X X X X O X	
Notes			

Mode 1 : OMNI ON, POLY
Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO
Mode 4 : OMNI OFF, MONO

O : Yes
X : No

Transition Effects List

Factory-default Transition effects assignments

Memory number	1 MIX button	2 WIPE button	3 EFX button
MEMORY 1 (Fixed)	001:Mix01	004:Wipe03	148:MWipe03
MEMORY 2	001:Mix01	013:Wipe12	170:MWipe25
MEMORY 3	001:Mix01	033:Wipe32	195:MWipe50
MEMORY 4	001:Mix01	076:SWipe03	168:MWipe23
MEMORY 5	001:Mix01	079:SWipe06	219:Key02
MEMORY 6	001:Mix01	078:SWipe05	236:Slide15
MEMORY 7	001:Mix01	121:SWipe48	248:Slide27
MEMORY 8	001:Mix01	125:SWipe52	193:MWipe48

Factory-default Transition effects assignments

Memory number	Ch	EFFECT 1	EFFECT 2	EFFECT 3	EFFECT 4
MEMORY 1 (Fixed)	A ch	12:STROBE*	20:NEGATIVE*	29:COLRIZE*	73:MULTI-HV*
	B ch	88:MIRROR-HV*	58:CHROMAKEY*	54:W-LUMIKEY*	89:PinP-1
MEMORY 2	A ch	12:STROBE*	20:NEGATIVE*	29:COLRIZE*	73:MULTI-HV*
	B ch	88:MIRROR-HV*	58:CHROMAKEY*	54:W-LUMIKEY*	90:PinP-2
MEMORY 3	A ch	12:STROBE*	20:NEGATIVE*	29:COLRIZE*	73:MULTI-HV*
	B ch	88:MIRROR-HV*	58:CHROMAKEY*	54:W-LUMIKEY*	91:PinP-3
MEMORY 4	A ch	12:STROBE*	20:NEGATIVE*	29:COLRIZE*	73:MULTI-HV*
	B ch	88:MIRROR-HV*	58:CHROMAKEY*	54:W-LUMIKEY*	92:PinP-4
MEMORY 5	A ch	12:STROBE*	20:NEGATIVE*	29:COLRIZE*	73:MULTI-HV*
	B ch	88:MIRROR-HV*	58:CHROMAKEY*	54:W-LUMIKEY*	93:PinP-5
MEMORY 6	A ch	12:STROBE*	20:NEGATIVE*	29:COLRIZE*	73:MULTI-HV*
	B ch	88:MIRROR-HV*	58:CHROMAKEY*	54:W-LUMIKEY*	94:PinP-6
MEMORY 7	A ch	13:SHAKE1	20:NEGATIVE*	29:COLRIZE*	59:MULTI-H1
	B ch	74:MIRROR-H1	58:CHROMAKEY*	54:W-LUMIKEY*	95:PinP-7
MEMORY 8	A ch	14:SHAKE2	20:NEGATIVE*	29:COLRIZE*	64:MULTI-V1
	B ch	79:MIRROR-V1	58:CHROMAKEY*	54:W-LUMIKEY*	96:PinP-8

Transition Effects List

Mix Effects

The effect gradually blends the picture into another.



001 Mix01

Wipe Effects

The effects like windshield wiper on a car. The present picture is wiped off as it changes to another...


Hard Edge type




002 Wipe01




003 Wipe02

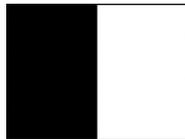


004 Wipe03

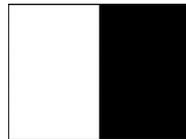

005 Wipe04

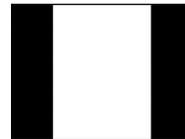

006 Wipe05

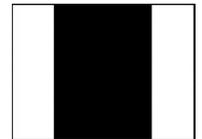


007 Wipe06



008 Wipe07



009 Wipe08

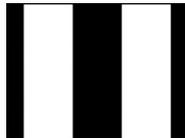


010 Wipe09



011 Wipe10



012 Wipe11

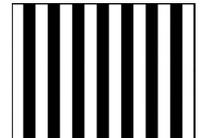


013 Wipe12




014 Wipe13



015 Wipe14

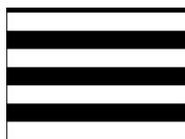

016 Wipe15

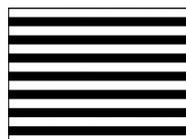

017 Wipe16



018 Wipe17



019 Wipe18



020 Wipe19



021 Wipe20



022 Wipe21




023 Wipe22



024 Wipe23



025 Wipe24

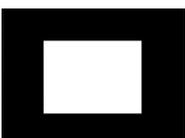

026 Wipe25




027 Wipe26




028 Wipe27




029 Wipe28

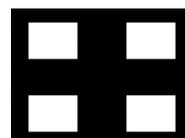


030 Wipe29

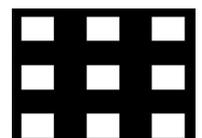

031 Wipe30

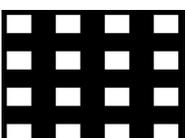

032 Wipe31

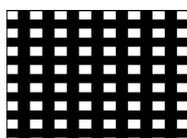

033 Wipe32



034 Wipe33



035 Wipe34




036 Wipe35




037 Wipe36


Transition Effects List

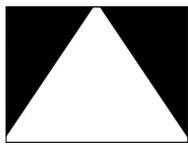


038 Wipe37

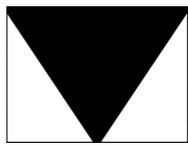


039 Wipe38

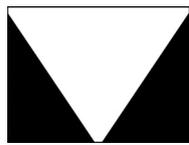


040 Wipe39

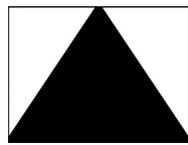


041 Wipe40

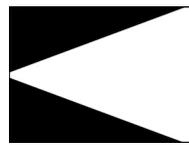


042 Wipe41

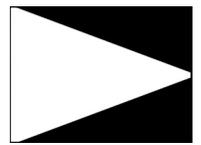


043 Wipe42

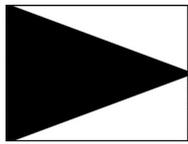

044 Wipe43

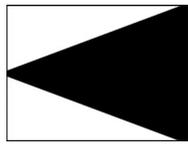


045 Wipe44

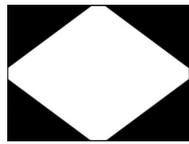


046 Wipe45




047 Wipe46

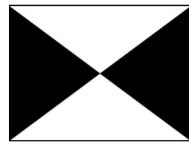


048 Wipe47

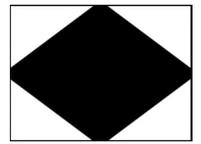


049 Wipe48

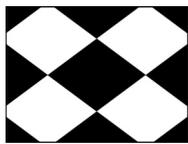


050 Wipe49

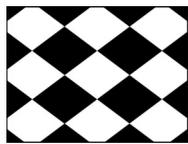


051 Wipe50

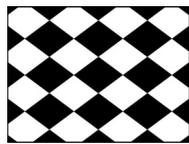


052 Wipe51

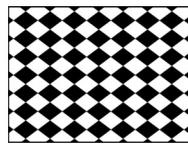


053 Wipe52

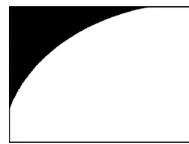


054 Wipe53

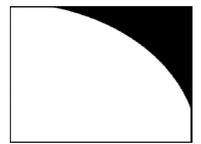


055 Wipe54

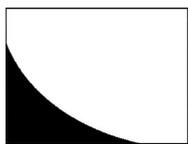


056 Wipe55

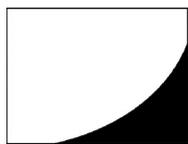


057 Wipe56

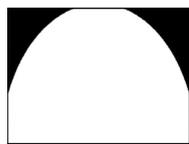


058 Wipe57

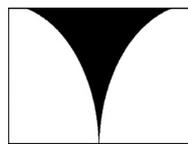


059 Wipe58

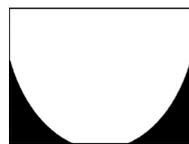


060 Wipe59

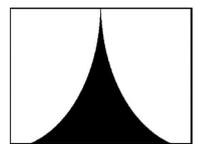


061 Wipe60

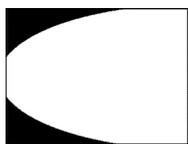


062 Wipe61

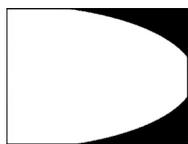


063 Wipe62

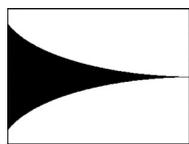


064 Wipe63

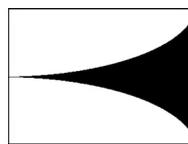


065 Wipe64

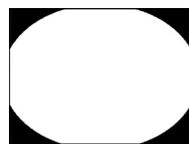


066 Wipe65

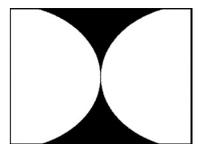


067 Wipe66

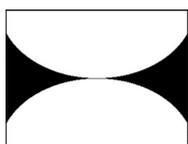


068 Wipe67

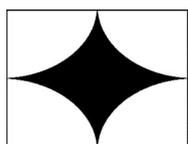


069 Wipe68

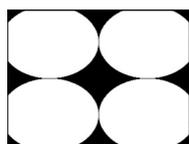


070 Wipe69

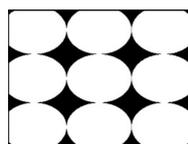

071 Wipe70

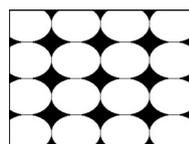

072 Wipe71

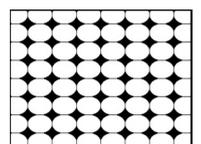

073 Wipe72


Soft Edge Type



074 SWipe01



075 SWipe02

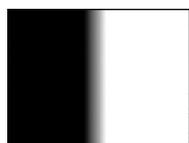


076 SWipe03



077 SWipe04




078 SWipe05

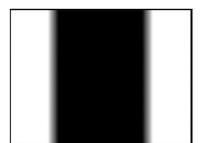


079 SWipe06




080 SWipe07

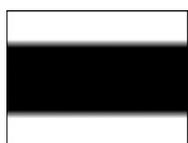

081 SWipe08

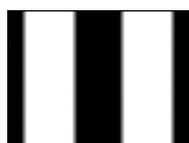


082 SWipe09

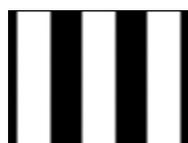

083 SWipe10



084 SWipe11

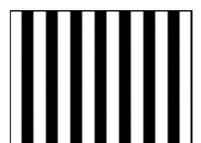

085 SWipe12

Transition Effects List




086 SWipe13



087 SWipe14



088 SWipe15

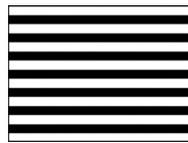

089 SWipe16



090 SWipe17



091 SWipe18



092 SWipe19



093 SWipe20



094 SWipe21



095 SWipe22



096 SWipe23



097 SWipe24



098 SWipe25



099 SWipe26




100 SWipe27




101 SWipe28




102 SWipe29

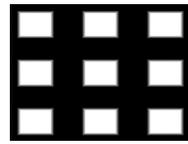


103 SWipe30

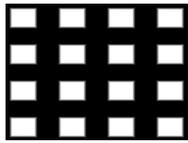


104 SWipe31

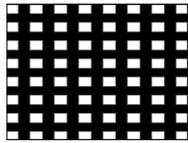


105 SWipe32

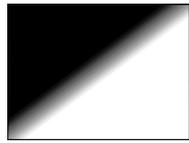


106 SWipe33

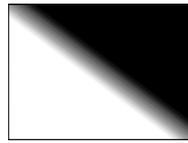


107 SWipe34

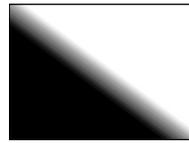


108 SWipe35

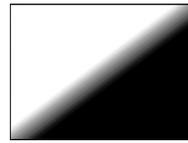


109 SWipe36

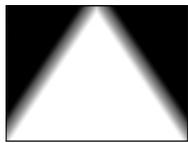


110 SWipe37

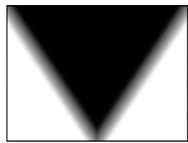


111 SWipe38

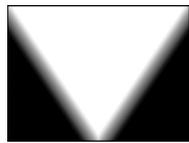


112 SWipe39

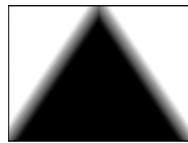


113 SWipe40

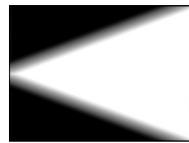


114 SWipe41

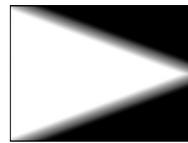

115 SWipe42

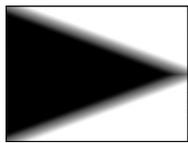

116 SWipe43

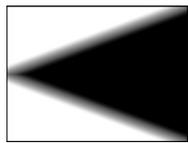


117 SWipe44




118 SWipe45



119 SWipe46

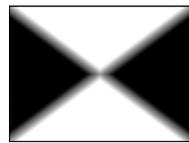

120 SWipe47

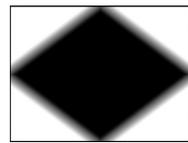


121 SWipe48




122 SWipe49



123 SWipe50

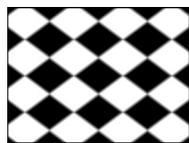

124 SWipe51

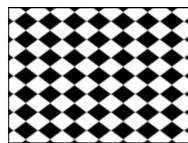

125 SWipe52



126 SWipe53



127 SWipe54



128 SWipe55



129 SWipe56



130 SWipe57



131 SWipe58



132 SWipe59




133 SWipe60



134 SWipe61



135 SWipe62

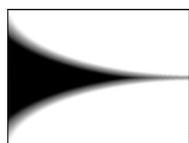

136 SWipe63



137 SWipe64




138 SWipe65




139 SWipe66


Transition Effects List

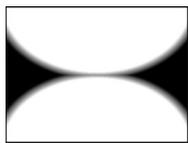


140 SWipe67

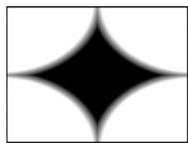


141 SWipe68

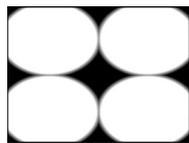


142 SWipe69

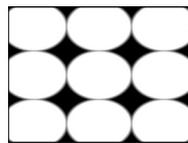

143 SWipe70

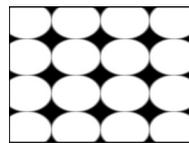

144 SWipe71

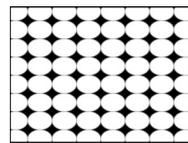


145 SWipe72

Multi Border Type



146 MWipe01

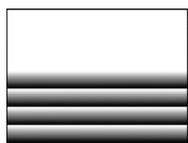

147 MWipe02




148 MWipe03



149 MWipe04




150 MWipe05

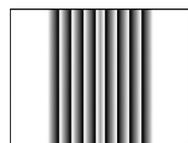


151 MWipe06




152 MWipe07

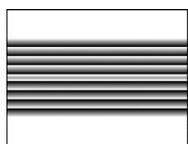


153 MWipe08

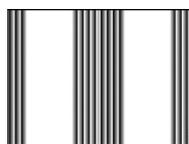


154 MWipe09

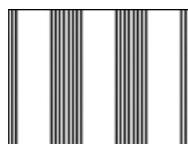

155 MWipe10

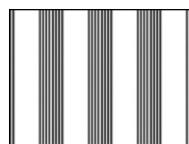

156 MWipe11

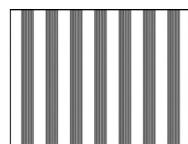

157 MWipe12




158 MWipe13



159 MWipe14



160 MWipe15

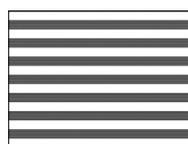


161 MWipe16




162 MWipe17




163 MWipe18

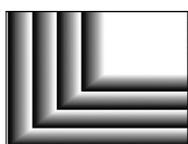


164 MWipe19

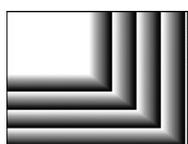


165 MWipe20

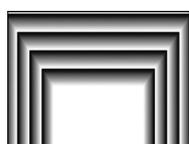


166 MWipe21

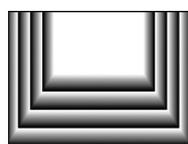


167 MWipe22

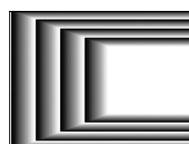


168 MWipe23

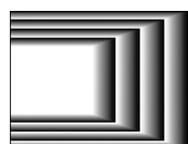


169 MWipe24

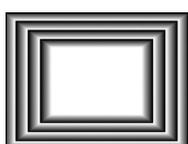


170 MWipe25

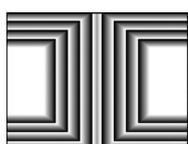


171 MWipe26

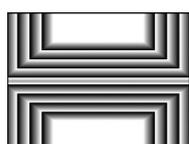


172 MWipe27

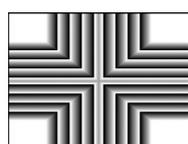


173 MWipe28

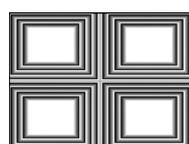


174 MWipe29

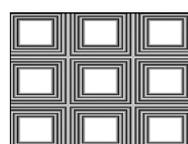


175 MWipe30

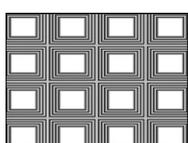


176 MWipe31

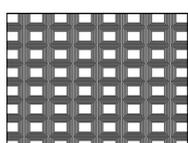


177 MWipe32

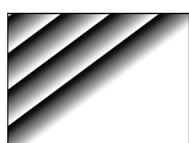

178 MWipe33

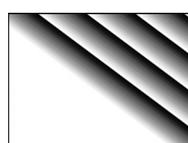


179 MWipe34

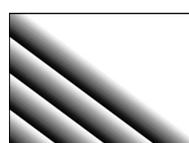

180 MWipe35




181 MWipe36

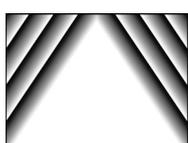

182 MWipe37



183 MWipe38

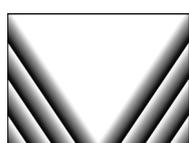

184 MWipe39



185 MWipe40



186 MWipe41




187 MWipe42


Transition Effects List




194 MWipe49

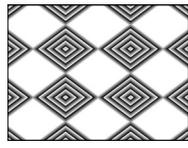

195 MWipe50

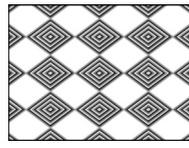

196 MWipe51

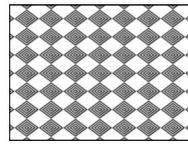


197 MWipe52



198 MWipe53



199 MWipe54

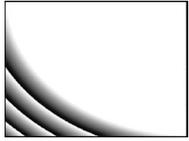

200 MWipe55




201 MWipe56



202 MWipe57



203 MWipe58

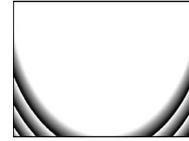

204 MWipe59




205 MWipe60



206 MWipe61



207 MWipe62

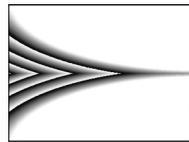

208 MWipe63




209 MWipe64



210 MWipe65




211 MWipe66

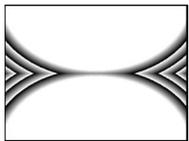


212 MWipe67




213 MWipe68

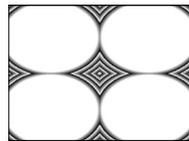


214 MWipe69

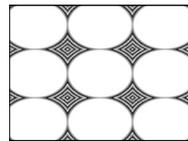


215 MWipe70

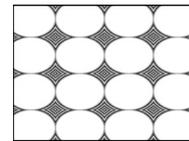


216 MWipe71

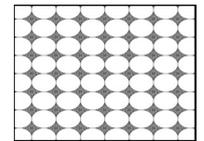

217 MWipe72

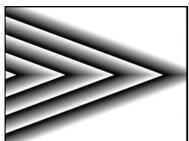

188 MWipe43

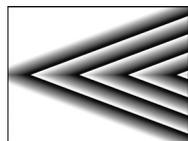


189 MWipe44




190 MWipe45



191 MWipe46

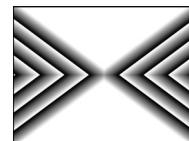

192 MWipe47

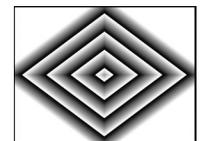

193 MWipe48

Luminance Key

The bright or dark part of present picture gradually changes to another.



218 Key01

The dark part of B ch picture gradually changes to A ch picture.



220 Key03

The bright part of B ch picture gradually changes to A ch picture.



219 Key02

The bright part of A ch picture gradually changes to B ch picture.



221 Key04

The dark part of A ch picture gradually changes to B ch picture.

Slide Effects

The effect to slide out the preset picture and in the another.

Normal Type



222 Slide01



223 Slide02



224 Slide03



225 Slide04



226 Slide05




227 Slide06



228 Slide07



229 Slide08

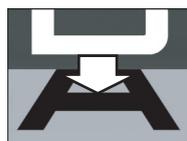

230 Slide09



231 Slide10



232 Slide11



233 Slide12



234 Slide13




235 Slide14



236 Slide15



237 Slide16

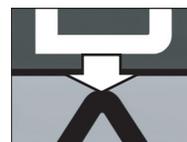

238 Slide17



239 Slide18



240 Slide19



241 Slide20



242 Slide21



243 Slide22



244 Slide23



245 Slide24

Sequential Type



1. A→B



2. B→A

246 Slide25



1. A→B



2. B→A



3. A→B



4. B→A

247 Slide26



1. A→B



2. B→A



3. A→B



4. B→A

248 Slide27

The effects that cannot be used simultaneously

Transition Effects	The effects that cannot be used simultaneously.				
WIPE	PinP(*1)				
KEY	LUMIKEY(*2)	CHROMAKEY(*2)	PinP(*1)		
SLIDE	STILL(*2)(*3) CHROMAKEY(*2)	STROBE(*2)(*3) MULTI(*2)(*3)	SHAKE(*2) MIRROR(*2)(*3)	LUMIKEY(*2) PinP(*1)	

(*1) When Picture in Picture works all the transition effects turns to MIX.

(*2) In case the effects that cannot used simultaneously exists, [- - - - -] to be displayed on preview monitor display.

(*3) Some of effects can be used simultaneously.

Effects	The effects that cannot be used simultaneously.				
STILL	STROBE	MULTI	PinP		
STROBE	STILL	MULTI	PinP		
SHAKE					
NEGATIVE(*4)	COLORIZE	MONOCOLOR			
COLORIZE	NEGATIVE(*4)	MONOCOLOR	POSTERIZE	COLORPASS	
MONOCOLOR	NEGATIVE(*4)	COLORIZE	COLORPASS		
POSTERIZE	COLORIZE				
COLORPASS	COLORIZE	MONOCOLOR			
LUMIKEY	CHROMAKEY	PinP(*5)			
CHROMAKEY	LUMIKEY	PinP(*6)			
MULTI	STILL(*7)	STROBE(*7)	MIRROR	PinP	
MIRROR	MULTI	PinP			
PinP	STILL(*8)	MULTI	MIRROR		

(*4) Except NAGATIVE1.

(*5) If this is turned on, the Luminance Key of another channel cannot be used. ([- - - - -] appears on preview monitor display.)

(*6) If this is turned on, the Chroma Key of another channel cannot be used. ([- - - - -] appears on preview monitor display.)

(*7) If MULTI is turned on, this can be turned on. If MULTI is turned off, this will be turned off automatically. If Control Dial is used for MULTI *, this will be turned off automatically.

(*8) If PinP is turned on, this can be turned on. If PinP is turned off, this will be turned off automatically.

Index

B	
BPM control dial	15
BPM indicator	14
BPM sync	37
BPM sync button	15
C	
Calibrating	66
Chroma Key	27
color	31
Colorize	32
Compositing	26
Copying	54
D	
dissolve	24
E	
effect buttons	15
effect control dial	15
EFX button	15
exchanging	54
F	
factory settings	55
fade-to-black	25
fade-to-white	25
G	
Ground Terminal	16
L	
Luminance Key	28
M	
MC-909	57
Memory dial	15
Menu List	75
MIDI Rx Channel	61
MIDI settings	60
MIDI Tx Channel	60
Mirror	36
Mix button	15
motion	34
Multi	35
N	
Negative	31
NTSC	71
O	
Output fade dial	14
P	
PAL	71
panel assignments	40
PCR-30/50	57
Picture In Picture	26
Presentation mode	68
preview monitor	21
Preview select buttons	14
Protecting the memory	53
S	
signal flow	18
specifications	83
strobe motion	34
S-video	14
synchronization	37
T	
tap (TAP) function	38
Tap button	14
transformer	15
Typical connection	17
V	
Video (composite)	14
Video fader	16
V-LINK	11
W	
Wipe	24
Wipe button	15

...MEMO...



This product complies with the requirements of EMC Directive 2004/108/EC.

For EU Countries

For the USA

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Unauthorized changes or modification to this system can void the users authority to operate this equipment.
This equipment requires shielded interface cables in order to meet FCC class B Limit.

For Canada

NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

For EU Countries



- UK** This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.
- DE** Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit dem Hausmüll entsorgt werden.
- FR** Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.
- IT** Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
- ES** Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como está regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
- PT** Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.
- NL** Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd.
- DK** Dette symbol angiver, at i EU-lande skal dette produkt opsamlles adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.
- NO** Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig husholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall.

- SE** Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsavfall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsavfall.
- FI** Tämä merkintä ilmaisee, että tuote on EU-maissa kerättävä erillään kotitalousjätteistä kunkin alueen voimassa olevien määräysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana.
- HU** Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabályozás szerint kell gyűjteni. Az ezzel a szimbólummal ellátott termékeket nem szabad a háztartási hulladék közé dobni.
- PL** Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.
- CZ** Tento symbol udává, že v zemích EU musí být tento výrobek sbírán odděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.
- SK** Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu vykonávať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhazovať spolu s domovým odpadom.
- EE** See sümbol näitab, et EL-i maades tuleb see toode olemprügist eraldi koguda, nii nagu on igas piirkonnas määratud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.
- LT** Šis simbolis rodo, kad ES šalyse šis produktas turi būti surenkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinoti produktai neturi būti išmetami kartu su buitiniams atliekomis.
- LV** Šis simbols norāda, ka ES valstīs šo produktu jāievāc atsevišķi no mājsaimniecības atkritumiem, kā noteikts katrā reģionā. Produkts ar šo simbolu nedrīkst izmest kopā ar mājsaimniecības atkritumiem.
- SI** Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda s tem znakom ni dovoljeno odlagati skupaj z gospodinskimi odpadki.
- GR** Το σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

* MMP (Moore Microprocessor Portfolio) refers to a patent portfolio concerned with microprocessor architecture, which was developed by Technology Properties Limited (TPL). Roland has licensed this technology from the TPL Group.



* 0 3 0 1 9 1 9 0 - 0 7 *